

MXA-312M

User's Manual

Edge AI PC



Manual Rev.:	Rev. 1.0
Revision Date:	February 12, 2026
Part Number:	50M-45109-1000

Revision History

Revision	Description	Date
1.0	Initial release	2026-02-12

Preface

Copyright

 
Copyright 2026 ADLINK Technology, Inc. This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer




The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer. In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

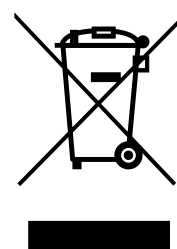

   Battery Labels (for products with battery)

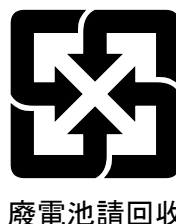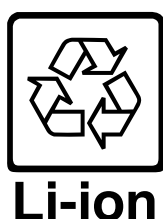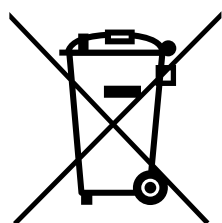

California Proposition 65 Warning



WARNING: This product can expose you to chemicals including acrylamide, arsenic, benzene, cadmium, Tris(1,3-dichloro-2-propyl)phosphate (TDCPP), 1,4-Dioxane, formaldehyde, lead, DEHP, styrene, DINP, BBP, PVC, and vinyl materials, which are known to the State of California to cause cancer, and acrylamide, benzene, cadmium, lead, mercury, phthalates, toluene, DEHP, DIDP, DnHP, DBP, BBP, PVC, and vinyl materials, which are known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



CAUTION:

Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.

ATTENTION: Informations destinées à prévenir les blessures corporelles mineures, les dommages aux composants, la perte de données et/ou la corruption de programme lors de l'exécution d'une tâche.



WARNING:

Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

AVERTISSEMENT: Informations destinées à prévenir les blessures corporelles graves, les dommages aux composants, la perte de données et/ou la corruption de programme lors de l'exécution d'une tâche spécifique.

Table of Contents

Preface	iii
List of Figures	vi
List of Tables	vii
1 Introduction.....	9
1.1 Features.....	9
1.2 Packing List	9
1.3 Optional Accessories	9
1.4 Connecting DC Power.....	10
2 Specifications	11
3 Mechanical Layout	13
3.1 Mechanical Dimensions	15
3.2 Connector Locations	17
4 Connector Pinouts and Jumper Settings	19
4.1 FM Board Connector.....	19
4.2 DC Power Connector	20
4.3 USB 2.0 and USB 3.0 Type A Connectors	20
4.4 RS232 COM Port.....	20
4.5 RS485 COM Port (CN3201).....	20
4.6 Debug Pin Header	21
Safety Instructions.....	22
Getting Services.....	25

List of Figures

Figure 1: Functional block diagram.....	13
Figure 2: Top view	15
Figure 3: Front view	15
Figure 4: Side view	16
Figure 5: Front panel I/O connectors	17
Figure 6: Rear panel I/O connectors.....	17

List of Tables

Table 1: Panel I/O connector locations17

This page intentionally left blank.

1 Introduction

The MXA-312M is an ultra-compact, high-performance edge computing platform engineered to deliver robust processing power with exceptional energy efficiency. Powered by the MediaTek Genio 700/500 (MT8390/MT8370), featuring high-performance Cortex-A78 and high-efficiency Cortex-A55 cores, the MXA-312M provides a versatile open-platform design for next-generation IoT applications.

Key Capabilities

- **Protocol Conversion & Connectivity:** Supports seamless communication across Ethernet and serial-based interfaces, featuring dual 10/100/1000 Mbps LAN and two RS-232/485 ports.
- **Advanced Visuals:** Delivers high-resolution output optimized for dual-display applications, such as multi-media application.
- **Industrial-Grade Reliability:** Built to withstand harsh environments with a wide operating temperature range of -20°C to 70°C.
- **Scalable Expansion:** Equipped with M.2 slots for effortless integration of Wi-Fi, 4G, or 5G wireless modules.

1.1 Features

- MTK Genio 520/720 (Arm Cortex-A78 + 6 Arm Cortex-A55) up to 2.2GHz
- Up to 8GB of DDR5 4800MHz memory
- 2 x RS-232/485 isolated serial ports
- 2 x 10/100/1000 Ethernet ports
- 1 x M.2 2230 E Key with [Wi-Fi(PCIEx1), BT(USB2.0)]
- 1 x M.2 3042 B-key (USB2.0) for 4G (option by installed AFM board cus kit)
- Operation Temperature Standard product -20°C to 60°C (Option for -20°C to 70°C with external heatsink.)
- Reserve USB2.0, I2C, UART, GPIO, SPI for AFM option

1.2 Packing List

Before unpacking, inspect the shipping carton for any damage. If the carton or its contents are damaged, inform your dealer immediately. Retain the shipping carton and packing materials for inspection. Obtain authorization from your dealer before returning any product to ADLINK. Ensure that the following items are included in the package.

- 1x MXA-312M Computing
- Fasteners:
 - 3x M3 screws, P-head, L4, Ni for M.2 (P/N: 33-03013-0040)
 - Power terminal connector (P/N: 20-C2010-0030)
- AC-DC adapter 60W 12V (Optional)

1.3 Optional Accessories

- 12V/60W power adaptor (P/N: 31-62156-0000-A0)
- AFM option kit for RS232&RS485(P/N: 91-44A03-0010)
- AFM option kit for LTE (P/N: 91-44A03-1010)
- External Heatsink for Wide Temperature (P/N: 32-60091-0000-A0)

1.4 Connecting DC Power



WARNING:

Please use an approved power source as certified by IEC or UL.

If you need adaptor, optional accessories or further assistance, please contact with ADLINK for further information.

The altitude during operation is up to 5000 m whose output meets LPS and SELV (ES1) circuits.

The output rating of DC power source as following:

- Voltage: 12 VDC
- Current: 3.65A

Before providing DC power to the apparatus, ensure the voltage and polarity provided are compatible with the DC input. Improper input voltage and/or polarity can be responsible for system damage.

Veuillez utiliser une source d'alimentation approuvée et certifiée par IEC ou UL. Si vous avez besoin d'un adaptateur d'appareil, d'accessoires en option ou d'une assistance supplémentaire, veuillez contacter ADLINK pour plus d'informations.

L'altitude pendant le fonctionnement est jusqu'à 5000 m dont la sortie répond aux circuits LPS et SELV (ES1).

La puissance nominale de sortie de la source d'alimentation CC comme suit

Tension : 12 VDC

Courant : 3.65A

Avant de fournir une alimentation CC à l'appareil, assurez-vous que la tension et la polarité fournies sont compatibles avec l'entrée CC. Une tension et/ou une polarité incorrectes peuvent causer des dommages irréversibles sur le système.

2 Specifications

Processor on MT8371/MT8391	2xArm Cortex-A78; 6x Arm Cortex-A55 Arm Mail G57 MC2 MediaTek NPU 850
Memory Configuration	LPDDR5 DRAM Memory Size: 8GB (up to 16GB)
UFS	UFS 3.1 2-lane for UFS
Ethernet	2x RJ45 GbE LAN
MSDC	MSDC1: 4-bits for SD connector MSDC2: 4-bits for M.2 E key connector
USB	1x USB 2.0 for M.2 E key connector 1x USB 2.0 for FM board connector 2x USB 2.0, 1x USB 3.0 for USB3.0 and USB2.0 type A connector 1x USB2.0, 1x USB3.0 for USB to Ethernet controller
I2C	4x I2C bus (for RTC, TPM, EEPROM, FM board connector, Camera Connector, DSI to HDMI converter)
Display	1x HDMI2.0b, Max 4K60 1x HDMI, Max FHD@60
UART	1x UART for debug 1x UART for RS232 1x UART for RS485 1x UART for FM board connector
CSI	CIS 4-lane for Camera connector
DSI	DSI 4-lane for DSI to HDMI converter
eDP	eDP 4-lane for DP to HDMI converter
PCIe	PCIe 1-lane for M.2 E key connector
SPI	2x SPI for FM board connector 1x SPI for NOR flash
I2S	1x I2S for DSI to HDMI converter
GPIO	4x GPIO for FM board connector
Reset	Reset button

This page intentionally left blank.

3 Functional Block Diagram

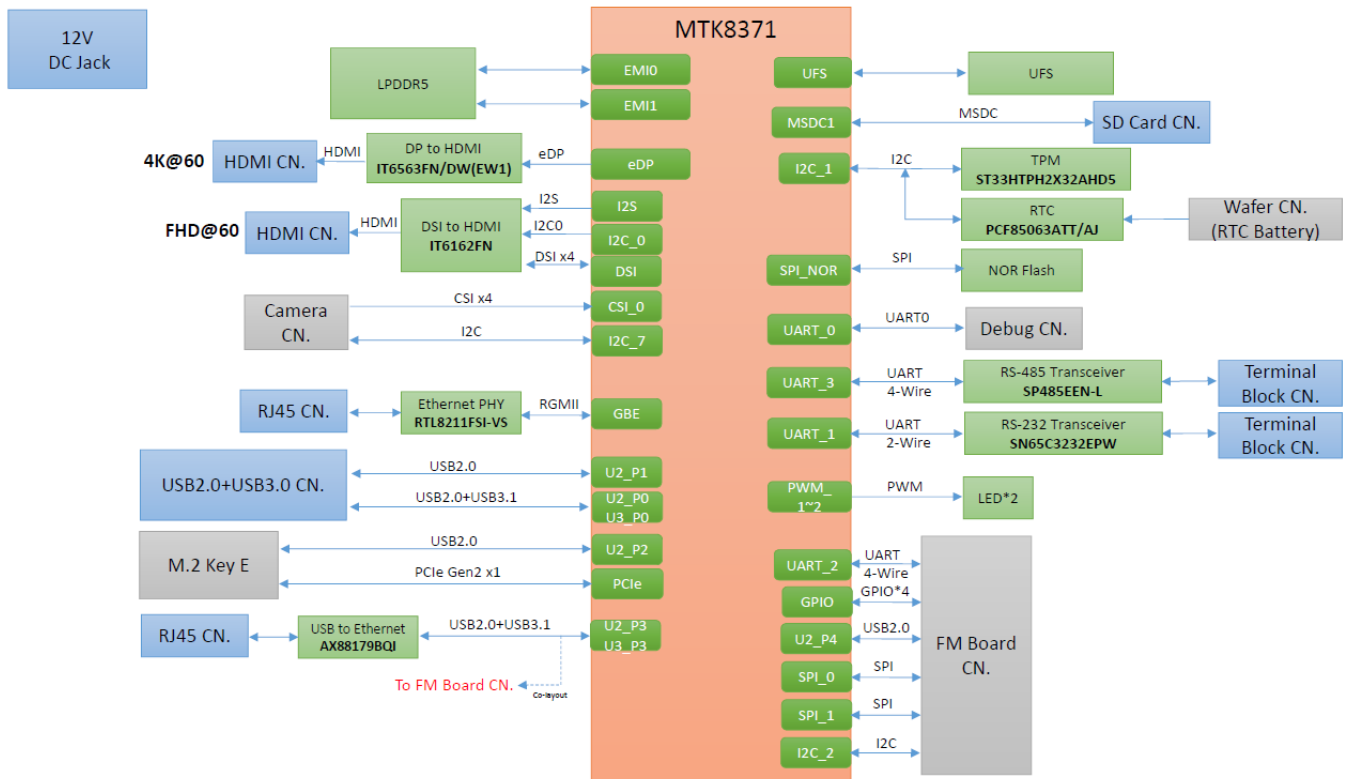 


Figure 1: Functional block diagram

This page intentionally left blank.

4 Mechanical Layout

4.1 Mechanical Dimensions



NOTE:

All dimensions are in millimeters, unless noted.

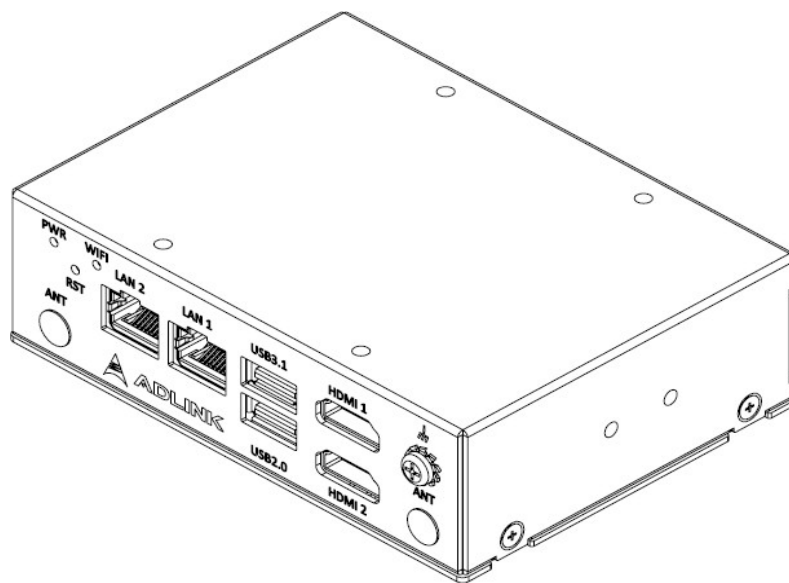 


Figure 2: Top view

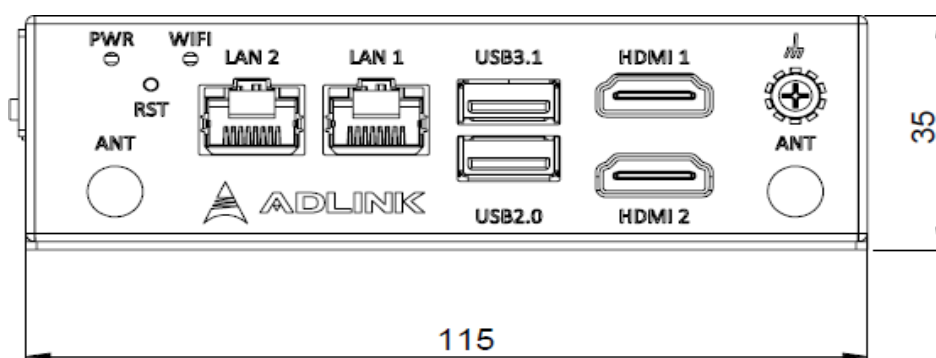 


Figure 3: Front view

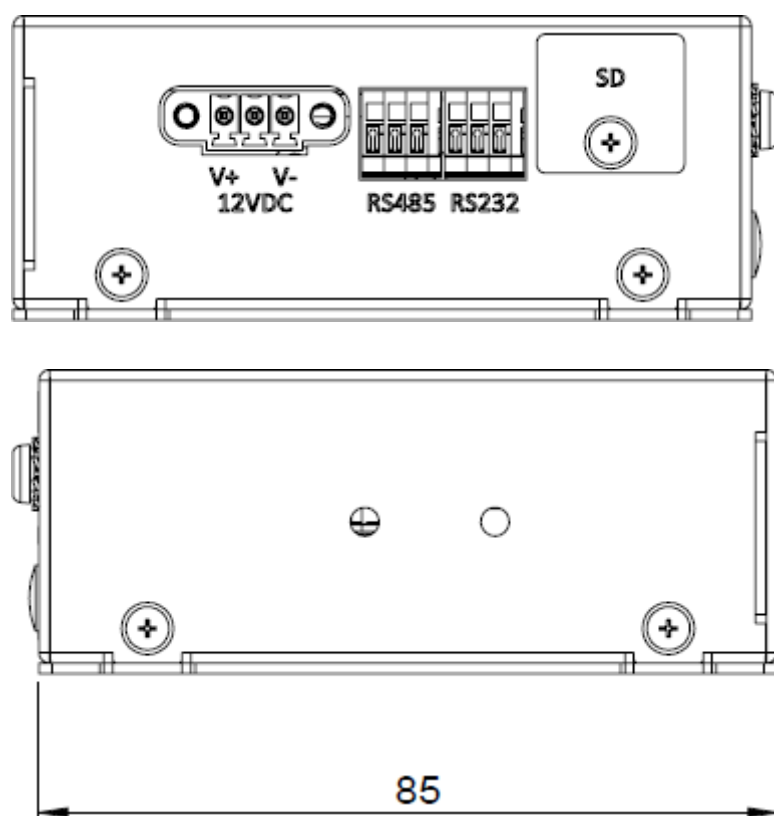 


Figure 4: Side view

4.2 Connector Locations

4.2.1 Front Panel

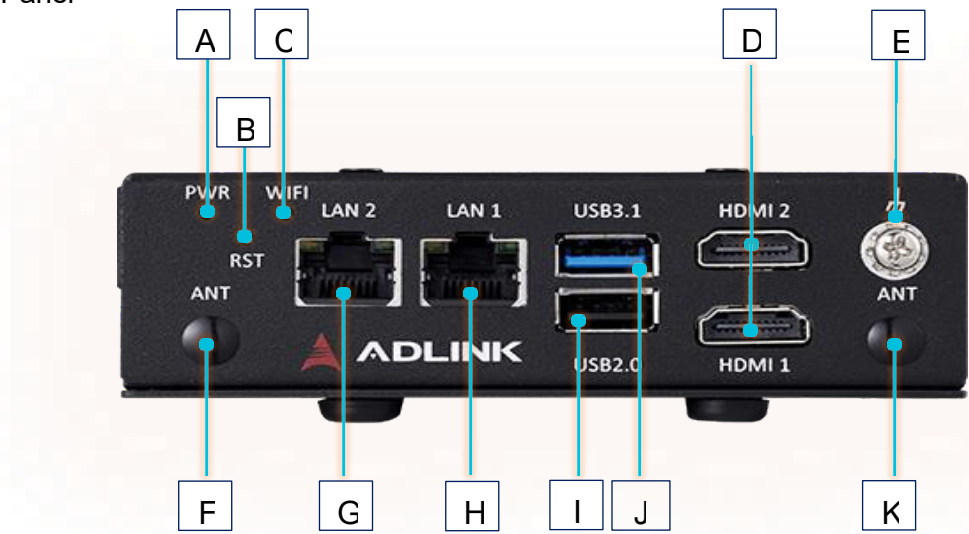 


Figure 5: Front panel I/O connectors

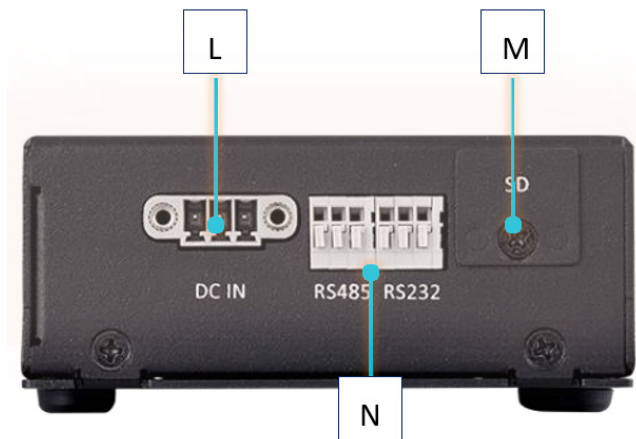 


Figure 6: Rear panel I/O connectors


Table 1: Panel I/O connector locations

Item	Name
A	Power LED
B	Reset
C	Wi-Fi LED
D	HDMI
E	Ground Screw
F, K	Antenna
G, H	Gigabit Ethernet (GbE, RJ45)
I, J	USB2.0 USB3.0
L	DC power input
M	Micro SD card
N	RS232/485 2-wire

This page intentionally left blank.

5 Connector Pinouts and Jumper Settings

 
5.1 FM Board Connector

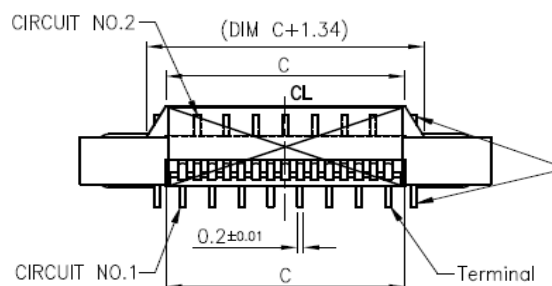

Pin name	Pin description	Pin name	Pin description
1	3.3V	2	3.3V
3	GND	4	3.3V
5	3.3V	6	3.3V
7	UART_RTS	8	UART_CTS
9	UART_RXD	10	UART_TXD
11	SCL	12	SDA
13	M2B_RST_N	14	WWAN_RESET
15	M2_WWAN_LED	16	GPIO_4
17	GPIO_3	18	GPIO_2
19	GPIO_1	20	5V
21	5V	22	5V
23	5V	24	1.8V
25	GND	26	GND
27	SPIM1_MOSI	28	SPIM1_MISO
29	SPIM1_CLK	30	SPIM1_CS_N
31	GND	32	GND
33	1.8V	34	SPIM0_MISO
35	SPIM0_MOSI	36	SPIM0_CS_N
37	SPIM0_CLK	38	GND
39	GND	40	USB_DP_P3
41	USB_DM_P3	42	GND
43	GND	44	SSUSB_RXP_P1
45	SSUSB_RXN_P1	46	SSUSB_TXP_P1
47	SSUSB_TXN_P1	48	USB_DP_P4
49	USB_DM_P4	50	GND


5.2 DC Power Connector

Pin name	Pin description
1	GND
2	CHGND_DCIN
3	ADAPTER_IN

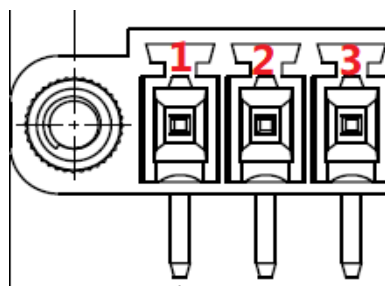 


5.3 USB 2.0 and USB 3.0 Type A Connectors

Pin name		Pin description
1	10	VBUS
2	11	DN
3	12	DP
4	13	GND
5		SSRX-
6		SSRX+
7		GND
8		SSTX-
9		SSTX+

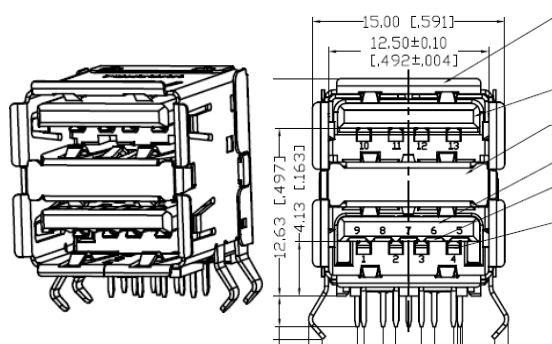 


5.4 RS232 COM Port

Pin name	Pin description	Pin name	Pin description
1	GND	4	GND
2	COM1_RXD	5	COM1_RXD
3	COM1_TXD	6	COM1_TXD

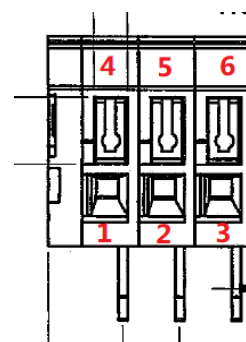 


5.5 RS485 COM Port (CN3201)

Pin name	Pin description	Pin name	Pin description
1	GND	4	GND
2	COM3_TXD-	5	COM3_TXD-
3	COM3_TXD+	6	COM3_TXD+

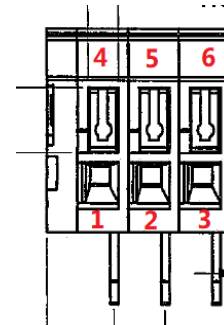 

5.6 Debug Pin Header

Pin name	Pin description
1	GND
2	UART0_TXD
3	UART0_RXD

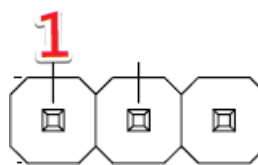 

Safety Instructions

For user safety, please read and follow all instructions, Warnings, Cautions, and Notes marked in this manual and on the associated device before handling/operating the device, to avoid injury or damage.

- ▶ Read these safety instructions carefully
- ▶ Keep the User's Manual for future reference
- ▶ Read the Specifications section of this manual for detailed information on the recommended operating environment
- ▶ The device can be operated at an ambient temperature of -20°C to 60°C.
- ▶ The device can be installed external heatsink for the ambient temperature of -20°C to 70°C
- ▶ It is recommended that the device be installed in Information Technology Rooms that are in accordance with Article 645 of the National Electrical Code and NFPA 75.
- ▶ When installing/mounting or uninstalling/removing device is required: Turn off power and unplug any power cords/cables
- ▶ Reinstall all chassis covers before restoring power
- ▶ To avoid electrical shock and/or damage to device:
 - [> Keep device away from water or liquid sources
 - [> Keep device away from high heat or humidity
 - [> Keep device properly ventilated (do not block or cover ventilation openings)
 - [> Always use recommended voltage and power source settings
 - [> Always install and operate device near an easily accessible electrical outlet
 - [> Secure the power cord (do not place any object on/over the power cord)
- Only install/attach and operate device on stable surfaces and/or recommended mountings
- This apparatus is powered by adapter or DC source. Please ensure adapter or DC source should be keep earth connection if it has protective earthing.
- If the device will not be used for long periods of time, turn off and unplug from its power source
- Never attempt to repair the device, which should only be serviced by qualified technical personnel using suitable tools
- A Lithium-type battery may be provided for uninterrupted backup or emergency power.



CAUTION:

Risk of explosion if battery is replaced with one of an incorrect type; please dispose of used batteries appropriately.

 
Risque d'explosion si la pile est remplacée par une autre de type incorrect. Veuillez jeter les piles usagées de façon appropriée.

- ▶ The device must be serviced by authorized technicians when:
 - [> The power cord or plug is damaged.
 - [> Liquid has entered the device interior.
 - [> The device has been exposed to high humidity and/or moisture.
 - [> The device is not functioning or does not function according to the User's Manual.
 - [> The device has been dropped and/or damaged and/or shows obvious signs of breakage.
- ▶ Disconnect the power supply cord before loosening the thumbscrews and always fasten the thumbscrews with a screwdriver before starting the system up.
 - [> The equipment is not intended to be installed or used in a home, school, or public area accessible

to the general population.

[> The knurled thumb screws with slotted heads for each Node module should be tightened with a tool after both initial installation and subsequent use.

- ▶ It is recommended that the device be installed only in a server room or computer room where access is:
 - [> Restricted to qualified service personnel or users familiar with restrictions applied to the location, reasons therefore, and any precautions required.
 - [> Only afforded by the use of a tool or lock and key, or other means of security, and controlled by the authority responsible for the location.
- ▶ Please use an approved power source certified by IEC or UL. If you need an adapter, optional accessories, or further assistance, please contact ADLINK for more information.

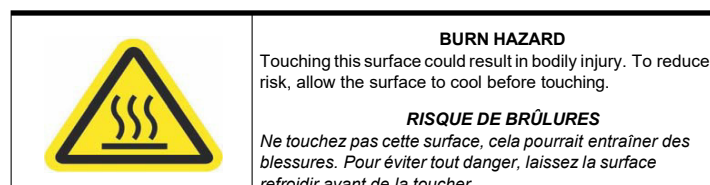

- ▶ Lisez attentivement ces consignes de sécurité
- ▶ Conservez le manuel de l'utilisateur pour pouvoir le consulter ultérieurement
- ▶ Lisez la section Spécifications de ce manuel pour des informations détaillées sur l'environnement d'exploitation recommandé
- ▶ Lors de l'installation/montage ou de la désinstallation/retrait de l'appareil ; ou lorsque le retrait d'un boîtier est nécessaire pour l'entretien par l'utilisateur (voir Mise en route) :
 - ▶ Éteignez l'alimentation et débranchez tous les cordons/câbles d'alimentation.
 - ▶ Réinstallez tous les panneaux du boîtier avant de remettre l'alimentation sous tension.
- ▶ Pour éviter les chocs électriques et/ou d'endommager l'appareil :
 - ▶ Tenez l'appareil à l'écart de toute source d'eau ou de liquide
 - ▶ Tenez l'appareil à l'écart d'une forte chaleur ou d'une humidité élevée
 - ▶ Maintenez l'appareil correctement ventilé (n'obstruer ou ne couvrez pas les ouvertures de ventilation)
 - ▶ Utilisez toujours les réglages de tension et de source d'alimentation recommandés
 - ▶ Installez et utilisez toujours l'appareil près d'une prise de courant facilement accessible
 - ▶ Fixez le cordon d'alimentation (ne placez aucun objet sur/au-dessus du cordon d'alimentation) et connectez-le à une prise de courant avec mise à la terre
- ▶ N'essayez jamais de réparer l'appareil, qui doit être réparé uniquement par du personnel technique qualifié et utilisant des outils appropriés.
 - ▶ Lors de l'installation/montage ou de la désinstallation/retrait d'un périphérique, ou lorsque le retrait d'un couvercle de châssis est requis pour l'entretien par l'utilisateur :
 - ▶ Coupez l'alimentation et débranchez tous les cordons/câbles d'alimentation.
- ▶ Réinstallez tous les capots du châssis avant de rétablir l'alimentation. Installez/fixez et utilisez l'appareil uniquement sur des surfaces stables et/ou des supports recommandés.
- ▶ Si l'appareil n'est pas utilisé pendant une longue période, éteignez-le et débranchez-le de sa source d'alimentation.
- ▶ Une batterie de type lithium peut être fournie pour une alimentation de secours ou de secours ininterrompue.
 - ▶ L'appareil doit être réparé par des techniciens agréés lorsque :
 - ▶ Le cordon d'alimentation ou la fiche est endommagé.
 - ▶ Du liquide est entré dans l'appareil. € L'appareil a été exposé à une humidité élevée et/ou à l'humidité.
 - ▶ L'appareil ne fonctionne pas ou ne fonctionne pas conformément au manuel de l'utilisateur.
- ▶ L'appareil est tombé et/ou a été endommagé et/ou présente des signes évidents de casse.
- ▶ Débranchez le cordon d'alimentation avant de desserrer les vis moletées et fixez toujours les vis moletées avec un tournevis avant de démarrer le système.
 - ▶ L'équipement n'est pas destiné à être installé ou utilisé dans une maison, une école ou une zone publique accessible au grand public.
 - ▶ Les vis à molette avec têtes fendue pour chaque module Node doivent être serrées avec un outil après l'installation initiale et lors de l'utilisation suivante.

- ▶ *Il est recommandé d'installer l'appareil uniquement dans une salle de serveurs ou une salle informatique dont l'accès est :*
 - ▶ *Réservé au personnel de service qualifié ou aux utilisateurs familiers avec les restrictions appliquées à l'emplacement, les raisons de celles-ci et les précautions requises.*
 - ▶ *Autorisé uniquement par l'utilisation d'un outil ou d'une serrure et d'une clé, ou d'autres moyens de sécurité, et contrôlé par l'autorité responsable du lieu.*

Veuillez utiliser une source d'alimentation approuvée et certifiée par la norme IEC ou UL. Si vous avez besoin d'un adaptateur, d'accessoires en option ou d'une assistance supplémentaire, veuillez contacter ADLINK pour plus d'informations.

Getting Services

Ask an Expert: <https://www.adlinktech.com/en/Askanexpert>

ADLINK Technology, Inc.

Address: No. 66, Huaya 1st Road, Guishan District
Taoyuan City 333, Taiwan
Tel: +886-3-216-5088
Fax: +886-3-328-5723
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 6450 Via Del Oro, San Jose, CA 95119-1208, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-600-1189
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 300 Fang Chun Rd., Zhangjiang Hi-Tech Park, Pudong New Area
Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology GmbH

Address: Hans-Thoma-Strasse 8-10, 68163 Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

Please visit the Contact page at www.adlinktech.com for information on how to contact the ADLINK regional office nearest you.