



ADLINK
TECHNOLOGY INC.

aCMM-2100

aTCA Shelf Management Module

User's Manual

Manual Rev. 2.00
Revision Date: August 8, 2012
Part No: 50-1G016-1000



Recycled Paper

Advance Technologies; Automate the World.

Revision History

Revision	Release Date	Description of Change(s)
2.00	2012/08/08	Initial Release

Preface

Copyright 2012 ADLINK Technology Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Using this Manual

Audience and Scope

This manual provides basic information about the ADLINK aCMM-2100 ATCA shelf manager. It is intended for hardware engineers and/or system integrators with working knowledge of ATCA computing systems.

Manual Organization

This manual is organized as follows:

Preface: Presents important copyright notifications, disclaimers, trademarks, and associated information on the proper understanding and usage of this document and its associated product(s).

Chapter 1, Introduction: This section introduces the shelf management module features, specifications, and package contents.

Chapter 2, Hardware Information: This chapter presents the module block diagram, layout, and pin assignments of connectors and switch.

Chapter 3, Getting Started: This part provides instructions on how to install the shelf management module to an aTCA chassis.

Chapter 4, Configuration: This chapter tells you how to access and configure the shelf management module using the Shelf Manager, Command Reference, or Web Interface.

Appendix A, IPMI: The Appendix contains information on the Intelligent Platform Management Interface for ATCA implementation.

Important Safety Instructions: Presents safety instructions all users must follow for the proper setup, installation and usage of equipment and/or software.

Getting Service: Contact information for ADLINK's worldwide offices.

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

This page intentionally left blank.

Table of Contents

Preface iii

Table of Contents..... vii

List of Figures ix

1 Introduction 1

 1.1 Features..... 2

 1.2 Specifications..... 3

 1.3 Package contents 4

2 Hardware Information 5

 2.1 Block Diagram 5

 2.2 Mechanical Drawings..... 6

 2.3 Front Panel 8

 2.4 I/O Port and Switch Pin Assignments 10

3 Getting Started 13

 3.1 Installing the aCMM-2100..... 13

 3.2 Accessing the aCMM-2100..... 16

 Serial Connection 16

 LAN Connection 17

4 Configuration..... 19

 4.1 Shelf Manager 19

 Logging-in 19

 Setting the Clock 19

 4.2 Command Reference..... 20

 Activate 21

 Alarm 22

 Board 23

 Boardreset 25

Deactivate	25
Exit/Quit	26
FAN	26
FRU	27
FRUData	28
FRUinfo	29
Getfanlevel	31
GetIPMBstate	32
Getlanconfig	34
IPMC	37
Minfanlevel	39
Sel	40
Sensordata	42
Setfanlevel	43
setlanconfig	43
Shelf	44
shmstatus	48
ShowUnhealthy	49
switchover	50
Terminate	51
version	52
4.3 Web Interface.....	53
IPM Sentry Web Interface	53
Starting the Web Interface	53
A Appendix: IPMI	55
A.1 Overview of Intelligent Platform Management in ATCA.....	55
A.2 Features of IPM Sentry Shelf Manager.....	56
A.3 Support for Dual Redundant Operation	57
A.4 IPM Sentry ShMM Shelf Management Mezzanines	58
Important Safety Instructions.....	59
Getting Service	61

List of Figures

Figure 2-1: aCMM-2100 Block Diagram..... 5

Figure 2-2: Mechanical Dimensions..... 6

Figure 2-3: Board Layout 7

Figure A-1: IPMI in ATCA Overview..... 55


Figure A-2: IPM Sentry Shelf Manager Redundancy Support..... 57

This page intentionally left blank.

1 Introduction

The aCMM-2100 is a high-performance management module for ADLINK aTCA chassis and is based on the powerful ShMM-500 core module from Pigeon Point System. The aCMM-2100 comes with a UART and two LAN ports for external connectivity and management. Using the off-board I2C buses, aCMM-2100 intelligently accesses external FRUs and fan board data as well as monitor environment status to adjust the fan rotation. The aCMM-2100 also manages all blades installed in the aTCA chassis. To provide uninterrupted monitoring and management, the aCMM-2100 supports redundant and hotswap operations.

The aCMM-2100 comes with the IPM Sentry Shelf Manager — a shelf-level management solution for AdvancedTCA® (ATCA) products. The IPM Sentry ShMM, when coupled with a corresponding carrier board, provides the necessary hardware to run the Shelf Manager within an ATCA shelf. The IPM Sentry Shelf Manager is adaptable to manage CompactPCI and CompactTCA platforms, when available.

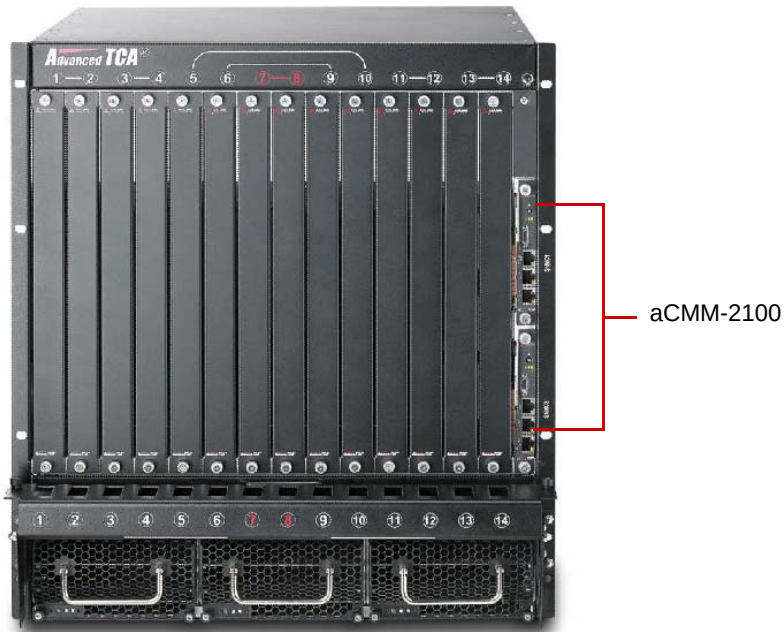

1.1 Features

- ▶ Compliant with PICMG 3.0 R2.0 (including ECN-3.0-2.0-001 for ShMC cross-connects)
- ▶ Compliant with IPMI v1.5, revision 1.1
- ▶ Supports dual-redundant and hot-swap operations
- ▶ Dual-LAN ports and a serial console for remote management
- ▶ Comes with web-based and command-line interfaces
- ▶ Supports RMCP protocol
- ▶ Integrated auto fan speed control
- ▶ Telco alarm DB-15 connector for customized alarm systems

1.2 Specifications

Form Factor	• Dimensions: 104 mm x 280 mm
Standard	• PICMG 3.0 R2.0 AdvancedTCA Specification
Core Module	• Pigeon Point Systems ShMM-500 Shelf Management Mezzanine with built-in 333 MHz MIPS processor
LAN Interface	• Two 10/100Mbps Ethernet port cross connected to backplane switch support remote login from LAN. • The Ethernet port can be redirected to RJ-45 on front faceplate
Serial Interface	• Standard RS-232 interface with DB-9 connector on front panel
Telco Interface	• Mini DB-15 connector • Clear Telco Alarm button and 3 LED indicators on faceplate
IPMB Interface	• Direct IPMB A/B bus
JTAG Interface	• JTAG interface
Redundant Control	• Redundant signals via backplane private pins using USB
Offboard I²C	• Supports 2 offboard I²C for SEEPROM on the shelf
Hardware Monitoring	• Monitors board temp, up to 12 fan trays

1.3 Package contents

Before unpacking, check the shipping carton for any damage. If the shipping carton and/or contents are damaged, inform your dealer immediately. Retain the shipping carton and packing materials for inspection. Obtain authorization from the dealer before returning any product to ADLINK.



The aCMM-2100 must be protected from static discharge and physical shock. Never remove any of the socketed parts except at a static-free workstation. Use the anti-static bag shipped with the product to handle the board. Wear a grounded wrist strap when installing and/or servicing.

Check if the following items are included in the package.

- ▶ aCMM-2100 shelf management module
- ▶ RJ-45 to DB9 cable

Please download the latest version of the User's Manual from the ADLINK website: www.adlinktech.com

2 Hardware Information

This chapter provides information on the aCMM-2100 layout, hardware components, and connector pin assignments.

2.1 Block Diagram

The block diagram shows the aCMM-2100 functional architecture and supported interfaces.


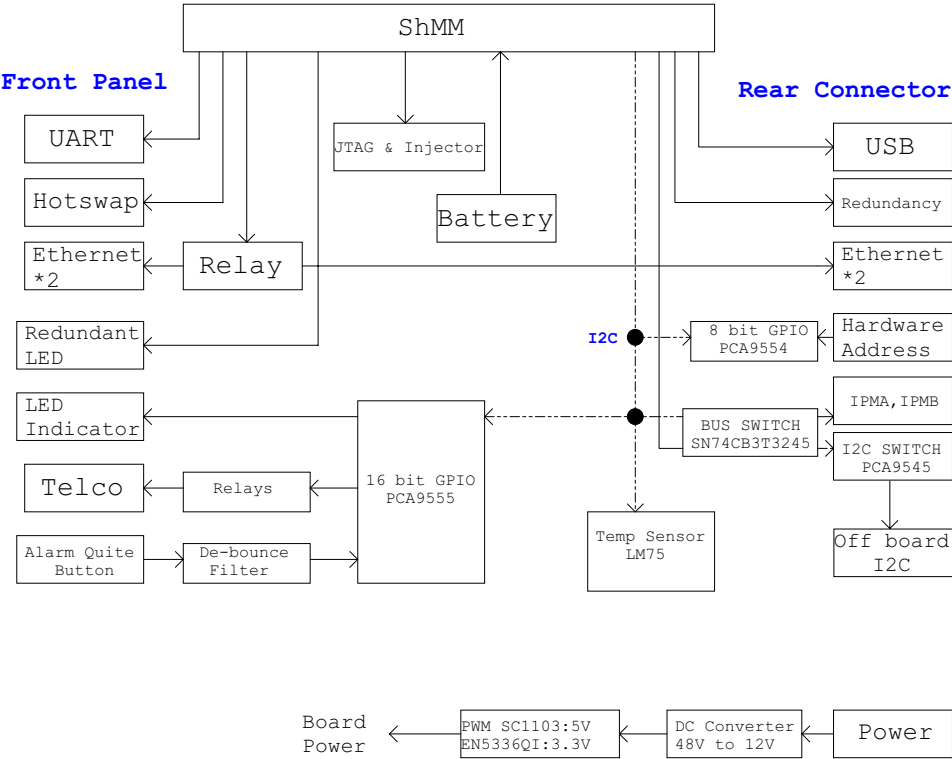


Figure 2-1: aCMM-2100 Block Diagram

2.2 Mechanical Drawings

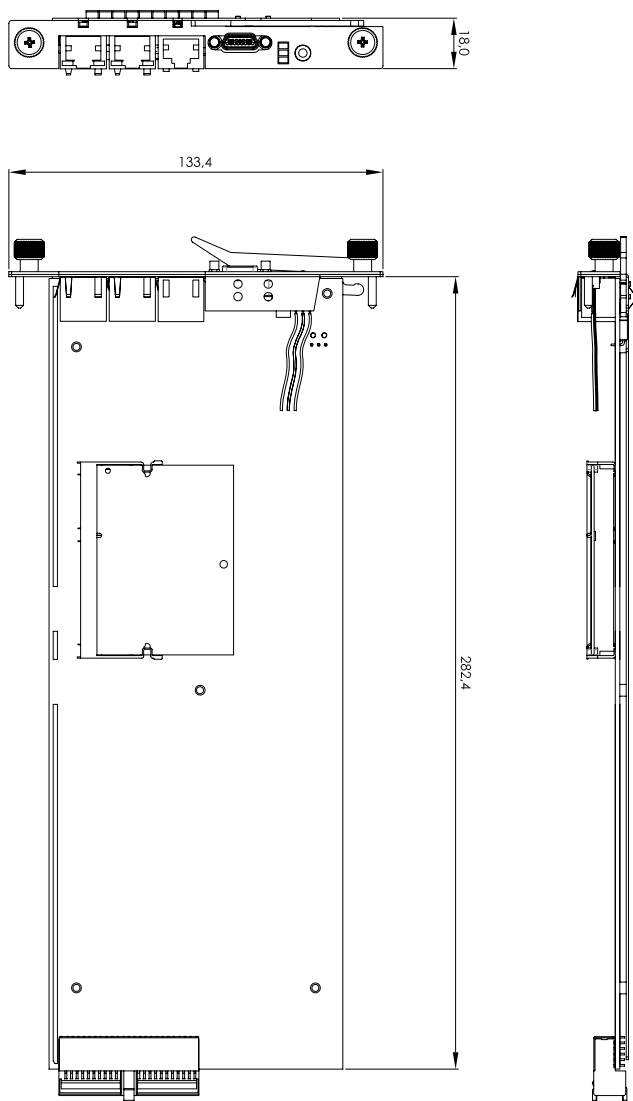

Dimensions in mm

Figure 2-2: Mechanical Dimensions


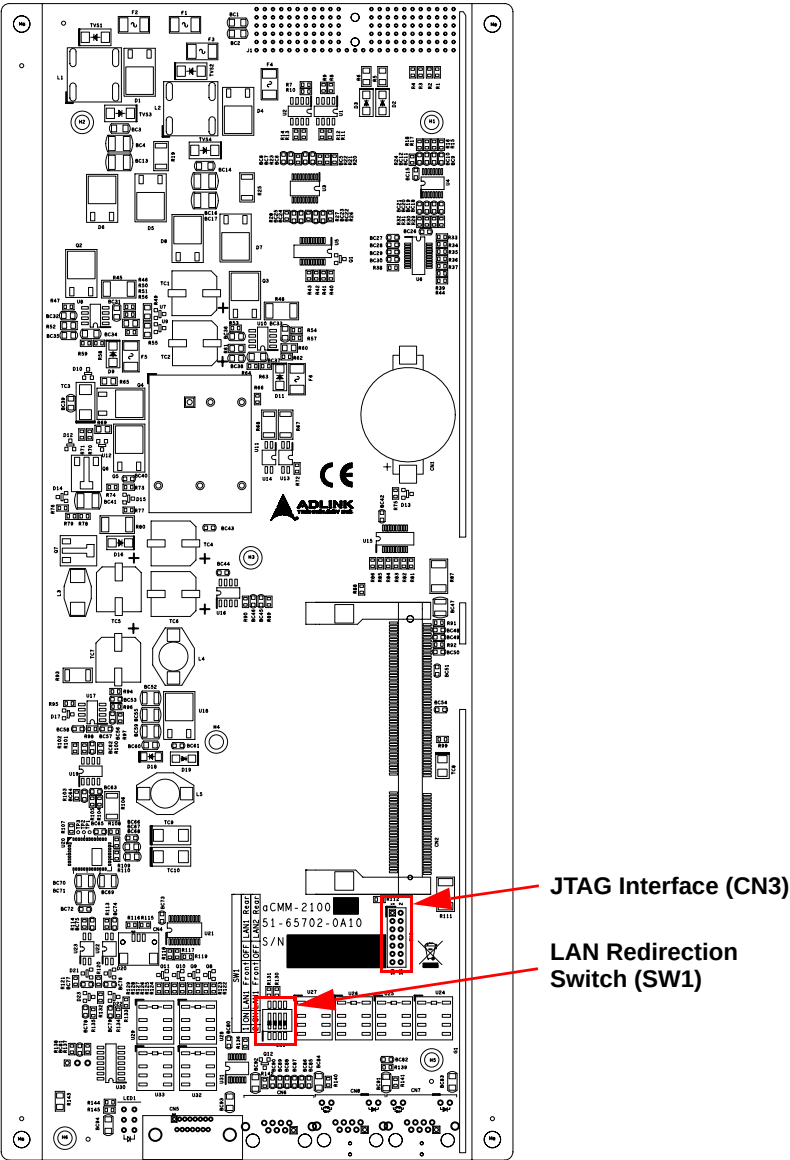


Figure 2-3: Board Layout


2.3 Front Panel

I/O Ports and Control Buttons

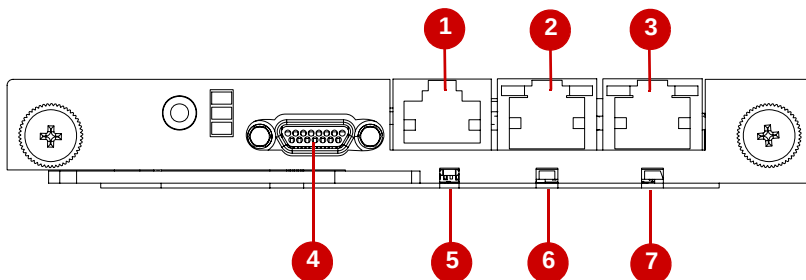

1. **COM port.** Connects a notebook or a personal computer using the bundled RJ-45 to DB9 cable.
2. **LAN1 port.** Connects a notebook or personal computer using an RJ-45 cable (direct connection) or through a network switch or hub.
3. **LAN2 port.** Connects a notebook or a personal computer using an RJ-45 cable (direct connection) or through a network switch or hub.
4. **Telco Alarm port.** Connects to customized telecom equipment.
5. **Hotswap LED.** Lights up when the aCMM-2100 handle is pulled out and the module is ready for hotswap; blinks when the aCMM-2100 is not ready for hotswap operation.
6. **Clear Telco Alarm button.** Clears the Telco Alarm.

LED indicators

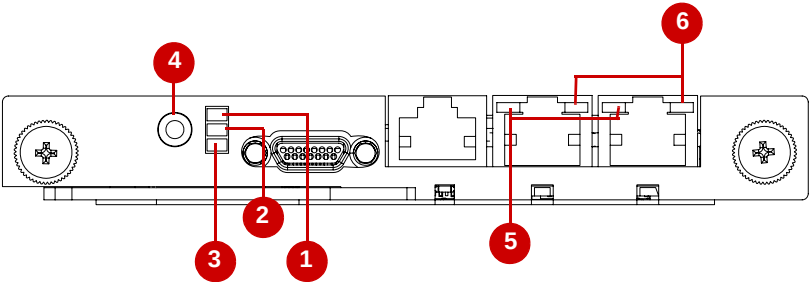

- 1. **Critical Alarm LED.** Behaves based on programming customizations. ADLINK may program this LED according to customer requirements.
- 2. **Major Alarm LED.** Behaves based on programming customizations. ADLINK may program this LED according to customer requirements.
- 3. **Minor Alarm LED.** Behaves based on programming customizations. ADLINK may program this LED according to customer requirements.
- 4. **Activity LED.** Tells whether the aCMM-2100 module is in active or backup mode.

Status	Color	Description
On	Green	Active Mode
Blinking		Backup Mode

- 5. **Speed LED (Green).** Tells the speed of the LAN port. Refer to the table below.
- 6. **Activity/Link (Orange).** Tells whether data is being transferred to or from the module. Refer to the table below.

Description	Green LED	Orange LED
10 Mbps speed	OFF	ON
100 Mbps speed	ON	ON
Data transfer	—	Blinking

2.4 I/O Port and Switch Pin Assignments


LAN1/LAN2 Ports (RJ-45)

Pin	10BASE-T/100BASE-TX
1	TX+
2	TX-
3	RX+
4	No connection
5	No connection
6	RX-
7	No connection
8	No connection




COM port (RJ-45)

Pin	Name	Description
1	RTS	Request to send
2	DTR	Data Terminal Ready
3	TXD	Transfer Data
4	GND	GND
5	GND	GND
6	RXD	Receive Data
7	DSR	Data Set Ready
8	CTS	Clear to send



RJ-45-to-DB-9 Serial Port Cable (DB-9)

Pin #	RS-232
1	NC
2	RXD
3	TXD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	NC



Telco Alarm Port (DB-15)

Pin#	Function	Description	Signal Level
1	MNRRES +	Minor Reset +	-48V DC, 12mA
2	MNRRES -	Minor Reset -	-48V DC, 12mA
3	MJRRES +	Major Reset +	-48V DC, 12mA
4	MJRRES -	Major Reset -	-48V DC, 12mA
5	CRTALRM_NO	Critical Alarm NO	72V DC, 1A or 30VA
6	CRTALRM_NC	Critical Alarm NC	72V DC, 1A or 30VA
7	CRTALRM_COM	Critical Alarm COM	72V DC, 1A or 30VA
8	MNALRM_NO	Minor Alarm NO	72V DC, 1A or 30VA
9	MNALRM_NC	Minor Alarm NC	72V DC, 1A or 30VA
10	MNALRM_COM	Minor Alarm COM	72V DC, 1A or 30VA
11	MJRALRM_NO	Major Alarm NO	72V DC, 1A or 30VA
12	MJRALRM_NC	Major Alarm NC	72V DC, 1A or 30VA
13	MJRALRM_COM	Major Alarm COM	72V DC, 1A or 30VA
14	PWRALM_NO	Power Alarm NO	72V DC, 1A or 30VA
15	PWRALM_COM	Power Alarm COM	72V DC, 1A or 30VA

LAN Redirection Switch (SW1)

Jumper	Status	Description
1	ON	LAN1 to front panel
	OFF (default)	LAN1 to backplane
2	ON	LAN2 to front panel
	OFF (default)	LAN2 to backplane

JTAG Interface (CN3)

Pin #	RS-32
1	NC
2	GND
3	SHM-TRST
4	GND
5	SHM-TDI
6	GND
7	SHM-TMS
8	GND
9	SHM-TCK
10	GND
11	SHM-TDO
12	GND
13	NC
14	GND



3 Getting Started

This chapter provides information on how to install the aCMM-2100 shelf management module in an aTCA chassis. The following instructions are specific to the ADLINK aTCA-8214 chassis.

3.1 Installing the aCMM-2100


The aCMM-2100 fits the shelf management module slot found in aTCA chassis. You may install a single aCMM-2100 module or two aCMM-2100 modules for redundancy. The aCMM-2100 facilitates tool-less installation with the built-in retention screws and handle.




When installing only one module, install in ShMM slot 1. Carefully hold the module on its edges and do not force the module into the slot to avoid component damage.

To install the aCMM-2100:


1. Locate the shelf management module shelf management module slots.

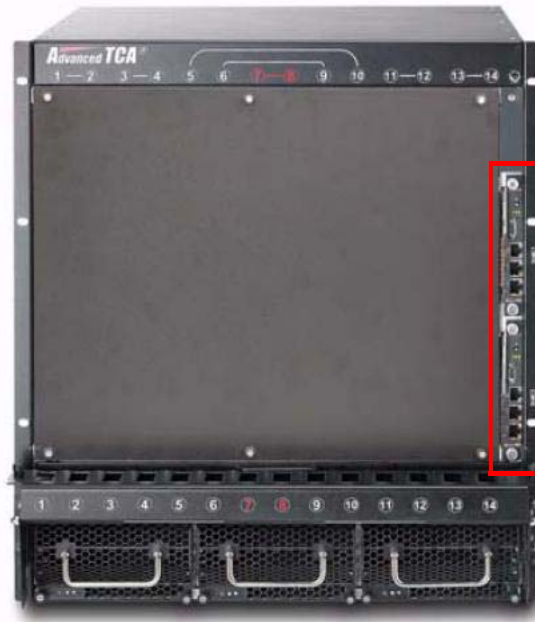


2. Pull the module handle outwards.
3. Insert the aCMM-2100 module to the slot with the rear end first.

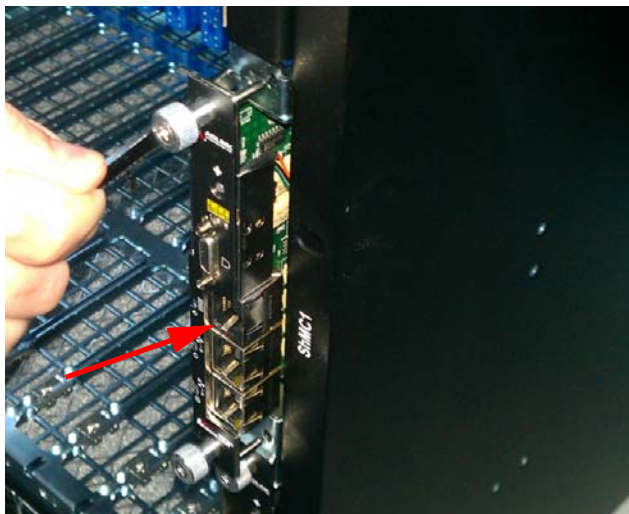

4. Push the module to the slot until the metal tacks are inserted into the chassis holes.

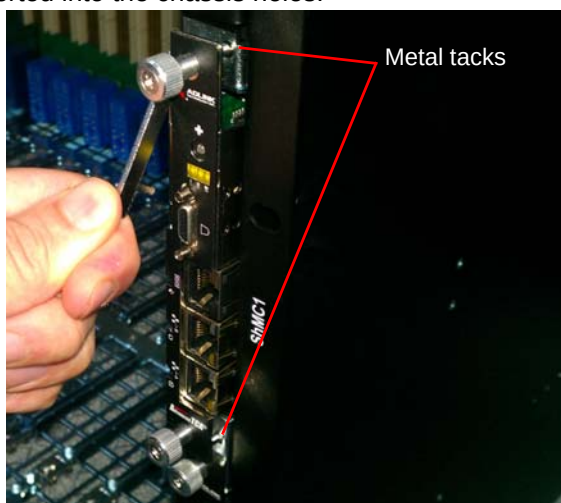

5. Push the handle inward to power up the module. Tighten the two retention screws on the module to secure it to the shelf.

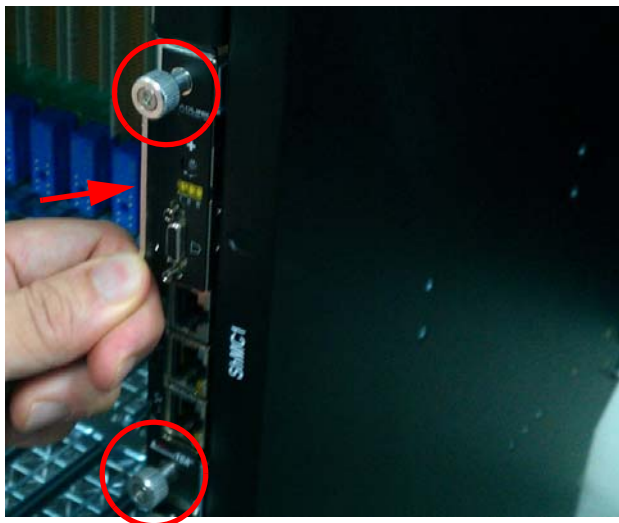

After powering up, the Activity LED lights up green. When two aCMM-2100 modules are installed, the ACT LED of the backup module blinks.


To remove the aCMM-2100 reverse the steps above.

3.2 Accessing the aCMM-2100

After installing the aCMM-2100 module to an ATCA chassis, you can access it using the following methods.

Serial Connection

Use the bundled RJ-45 to DB9 cable to connect to the serial port on the aCMM-2100. Refer to the illustration below.


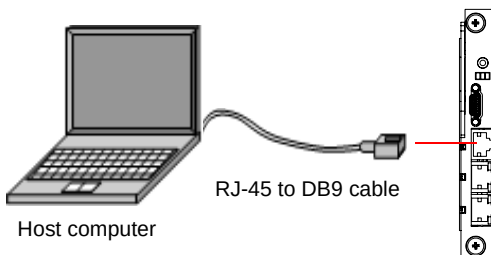


By default, the aCMM-2100 COM port has the following settings:

Type	RS-232
Baud Rate	115200bps
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

LAN Connection

Connect to the LAN port on the aCMM-2100 using an RJ-45 cable for high-speed remote management. Refer to the illustrations below.

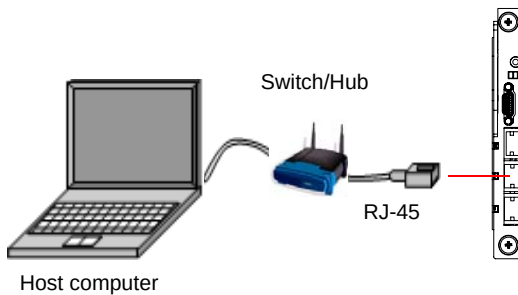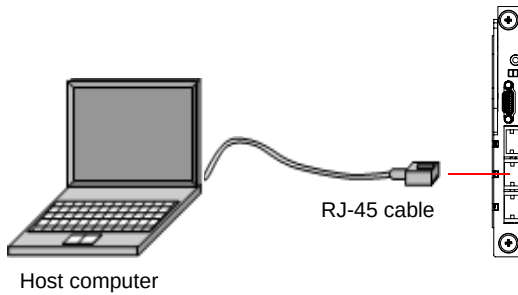

By default, the LAN1 port has the following settings:

IP	172.16.13.209
Login name	root
Password	None

This page intentionally left blank.

4 Configuration

This chapter provides information on how to access and configure the aCMM-2100 using Shelf Manager, Command Reference, or Web Interface.

4.1 Shelf Manager

Logging-in

After turning the aCMM-2100 on, you are prompted to login. Log in as user:**root**. By default, no password shall be requested. Refer to the screen capture below for details:

```
login: root

BusyBox v0.60.5 (2005.05.07-17:27+0000) Built-in shell (msh)
# ls
bin      dev      etc      lib      mnt
proc     sbin     tmp      usr      var
##
```

Setting the Clock

During initial boot, you must set the clock and initialize the module. The clock is set to January 1, 1970. The date can be accessed and configured using serial console. To set the date, type in the correct date using the date application. The format for the date command is MMDDHHMMSSYYYY, where:

- ▶ MM - Month
- ▶ DD - Day
- ▶ HH - Hour (use 24-hour clock)
- ▶ MM - Minute
- ▶ SS - Second
- ▶ YYYY - Year

For example:

```
# date 04291628002003
Tue Apr 29 16:28:00 UTC 2003
```

4.2 Command Reference

This section summarizes the details of individual CLI commands and provides the syntax and usage of each available commands. The CLI supports both AdvancedTCA and CompactPCI shelf contexts.

For your convenience, key types of shelf components can be referenced in the following way as an alternative to a reference notation based on the IPMB address and numerical FRU identifier.

Activate

Syntax

```
activate <IPMB-address> <FRU-id>
activate board <N>
activate shm <N>
```

Purpose

Sends the IPMI command **Set FRU Activation (Activate FRU)** to the specified FRU. The FRU is specified using the IPMB address of the owning IPM controller and the FRU device ID. FRU device ID 0 designates the IPM controller proper in PICMG 3.0 contexts. In PICMG 2.x contexts, the Shelf Manager emulates this command in the best possible way for each specific type of FRU.

In the PICMG 3.0 context, this command is primarily useful for those FRUs that were not listed in the power management table in the Shelf FRU Information, or for which the “Shelf Manager Controlled Activation” attribute is set to FALSE. These FRUs are not automatically activated by the Shelf Manager and stay in the state M2. The Shelf Manager automatically activates other FRUs once they reach state M2. Attempting to activate a FRU that is not in state M2 does nothing.

Example

To activate the IPM controller proper at address 9C.

```
# clia activate 9c 0
IPM Sentry Shelf Manager Command Line Interpreter
Command issued via IPMB, status = 0 (0x0)
Command executed successfully
```

Alarm

Syntax

```
alarm [clear |minor | major | critical]
```

Purpose

Provides access to the Telco alarm outputs. The **minor**, **major**, and **critical** parameters allow you to set the corresponding alarm output. These actions are cumulative, that is, after the commands **clia alarm minor** and **clia alarm major**, both minor and major alarms will be set. The action **clear** clears the minor and major alarm outputs. Critical alarm output cannot be cleared.

Command invocation without parameters will return the status of Telco alarm outputs.

Example

```
# clia alarm
IPM Sentry Shelf Manager Command Line Interpreter
alarm mask: 0x00

# clia alarm major
IPM Sentry Shelf Manager Command Line Interpreter
Returned completion code: 0

# clia alarm clear
IPM Sentry Shelf Manager Command Line Interpreter
Returned completion code: 0
```


Board

Syntax

```
board [-v] [<physical-slot-address>]
```

Purpose

The physical address should be specified as a decimal number. For PICMG 3.0 systems, the correspondence between physical addresses and IPMB addresses is specified in the Shelf FRU Information. If the Shelf FRU information does not contain an address table, the following mapping table (mapping of logical slot numbers) is used.

Slot Number	IPMB Address
1	82
2	84
3	86
4	88
5	8A
6	8C
7	8E
8	90
9	92
10	94
11	96
12	98
13	9A
14	9C
15	9E
16	A0

Below is the ADLINK aTCA-8214 mapping table for your reference:

Slot	Slot Number	IPMB address
NODE5	5	8A
NODE4	4	88
NODE3	3	86
HUB2	2	84
HUB1	1	82

Example

To get standard information on all boards installed in the system (where only the boards in physical slots 1 and 14 are present):

```
# clia board
IPM Sentry Shelf Manager Command Line Interpreter
Physical Slot # 1
82: Entity: (0xd0, 0x0) Maximum FRU device ID:
    0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3
      (Activation In Process), Last State Change
      Cause: Normal State Change (0x0)
82: FRU # 0
    Entity: (0xd0, 0x0)
    Hot Swap State: M4 (Active), Previous: M3
      (Activation In Process), Last State Change
      Cause: Normal State Change (0x0)
    Device ID String: "IPM Sentry 6"
Physical Slot # 3
86: Entity: (0xd0, 0x0) Maximum FRU device ID:
    0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3
      (Activation In Process), Last State Change
      Cause: Normal State Change (0x0)
86: FRU # 0
    Entity: (0xd0, 0x0)
    Hot Swap State: M4 (Active), Previous: M3
      (Activation In Process), Last State Change
      Cause: Normal State Change (0x0)
    Device ID String: "IPM Sentry 6"
```

Boardreset

Syntax

```
boardreset <physical-slot-address>
```

Purpose

Resets the board in the specified physical slot and sends it the IPMI command FRU Control (Cold Reset).

Example

To reset the board in physical slot 14 (IPMB address 9C, FRU 0):

```
# clia boardreset 3
IPM Sentry Shelf Manager Command Line Interpreter
Board 3 reset, status returned
```

Deactivate

Syntax

```
deactivate <IPMB-address> <FRU-id>
deactivate board <N>
```

Purpose

Sends the IPMI command **Set FRU Activation (Deactivate FRU)** to the specified FRU. The FRU is specified using the IPMB address of the owning IPM controller and the FRU device ID. FRU device ID 0 designates the IPM controller proper in PICMG 3.0 contexts. In PICMG 2.x contexts, the Shelf Manager emulates this command in the best possible way for each specific type of FRU. Attempting to deactivate an already inactive FRU is void.

Example

To deactivate the IPM controller proper at address 9C:

```
# clia deactivate 9c 0
IPM Sentry Shelf Manager Command Line Interpreter
Command issued via IPMB, status = 0 (0x0)
Command executed successfully
```

Exit/Quit

Syntax

```
exit | quit
```

Purpose

The **exit** or **quit** command exits the CLI interactive mode (entered by issuing **cli** without parameters). This command may also be issued on the backup Shelf Manager.

Example

```
CLI> exit
```

FAN

Syntax

```
fans [-v] [ <IPMB-address> [ <FRU-device-ID> ] ]
```

Purpose

Shows information about the specified fan FRUs. If FRU device ID is omitted, the command shows information about all fan FRUs controlled by the IPM controller at the specified address. If the IPMB address is also omitted, the command shows information about all fan FRUs known to the Shelf Manager. The following information is shown:

- ▶ IPMB address and FRU device ID
- ▶ Minimum Speed Level
- ▶ Maximum Speed Level
- ▶ Maximum Sustained Speed Level
- ▶ Current Level (the pair of Override and Local Control levels if both are available)

Example

To get the fan information about all fan FRUs at IPMB address 9C:

```
# clia fans
```

FRU

Syntax

```
fru [-v] [<addr> [id=<fru_id> |  
               type=<site_type>]] | [type=<site_type> [/  
               <site_number>]]  
fru board <N>
```

Purpose

Shows information about a specific FRU. If the FRU device ID is omitted, the command shows information about all FRUs controlled by the IPM controller at the specified address. If the IPMB address is also omitted, the command shows information about all FRUs known to the Shelf Manager.

Information including current hot swap state, previous hot swap state, and cause of the last state change for the FRU may be accessed. The hot swap states M0-M7 are defined in the PICMG 3.0 specification as follows:

- ▶ M0 – Not Installed
- ▶ M1 – Inactive
- ▶ M2 – Activation Request
- ▶ M3 – Activation in Progress
- ▶ M4 – FRU Active
- ▶ M5 – Deactivation Request
- ▶ M6 – Deactivation in Progress
- ▶ M7 – Communication Lost

FRUData

Syntax

```
frudata [<addr> [<fru_id> [<block_offset>]]]
```

Purpose

This command provides access to the FRU Information in raw format. Depending on the command format, this is used to read or write the FRU Information. In the read format, the command takes an optional 32-byte block number. In the write format it requires a byte offset parameter. You can modify up to 65535 bytes of FRU Information. This command can also be issued on the backup Shelf Manager. In this case, FRU Information is only displayed for FRUs that are local to the backup Shelf Manager.

Examples

```
# clia frudata
IPM Sentry Shelf Manager Command Line Interpreter

20: FRU # 0 Failure status: 203 (0xcb)
    Requested data not present
20: FRU # 1 Raw FRU Info Data
    FRU Info size: 529
20: FRU # 2 Failure status: 203 (0xcb)
    Requested data not present
82: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
9c: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
fc: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
fe: FRU # 0 Raw FRU Info Data
    FRU Info size: 160

# clia frudata 20 1 0
IPM Sentry Shelf Manager Command Line Interpreter
20: FRU # 1 Block # 0 Raw FRU Info Data
    FRU Info size: 529
    01 00 01 05 0E 18 00 D3 01 04 01 02 55 AA 83
    55
    AA 55 C1 00 00 00 00 00 00 00 00 00 00 00 00
    00
#
```

FRUinfo

Syntax

```
fruinfo [-v] [-x]<addr> <fru_id>
<addr> <fru id> can be replaced by the following:
board <N>
```

Purpose

Shows the FRU Information in a user-friendly format. This command can also be issued on the backup Shelf Manager. In this case, FRU Information is only shown for FRUs that are local to the backup Shelf Manager.

Examples

```
# clia fruinfo 20 0
IPM Sentry Shelf Manager Command Line Interpreter
```

```
20: FRU # 1, FRU Info
Common Header:      Format Version = 1
Chassis Info Area:
  Version           = 1
  Chassis Type      = (1)
  Chassis Part Number = 0x55 0xAA
  Chassis Serial Number = 5I:5
```

```
Board Info Area:
  Version           = 1
  Language Code     = 25
  Mfg Date/Time     = Jun 16 15:37:00
                    2011 (8129737 minutes since 1996)
  Board Manufacturer = Pigeon Point
                    Systems
  Board Product Name = Shelf Manager
  Board Serial Number = PPS0000000
  Board Part Number  = A
  FRU Programmer File ID =
```

```
Product Info Area:
  Version           = 1
  Language Code     = 25
  Manufacturer Name = Pigeon Point
                    Systems
  Product Name      = Shelf Manager
```

Product Part / Model# = 000000
Product Version = Rev. 1.00
Product Serial Number = PPS0000000
Asset Tag =
FRU Programmer File ID =

Multi Record Area:

Record Type = Management Access
Record

Version = 2

Sub-Record Type: Component Name (0x05)

PICMG Address Table Record (ID=0x10)

Version = 1

PICMG Backplane Point-to-Point Connectivity
Record (ID=0x04)

Version = 0

PICMG Shelf Power Distribution Record
(ID=0x11)

Version = 0

PICMG Shelf Activation And Power Management
Record (ID=0x12)

Version = 1

Getfanlevel

Syntax

```
getfanlevel <IPMB-address> <FRU-device-ID>
```

Purpose

Shows the current level of the fan controlled by the FRU specified in the command parameters.

GetIPMBstate

Syntax

```
getipmbstate <IPMB-address> [ <link> ] (in  
    radial IPMB-0 environment)  
getipmbstate <IPMB-address> (in bused IPMB-0  
    environment)
```

Purpose

Shows the current state of IPMB-0 on the target IPM Controller. The state is taken from the sensor data provided by the IPMB Link sensor on the target IPMC (sensor type F1). Information about buses A and B is printed.

The command works differently in bused and radial environments. In a bused environment or in a radial environment, if the target IPMC is not an IPMB hub, the argument <link> is not used. Information about the state of IPMB-A and IPMB-B on the target IPM controller is shown.

In the radial environment, if the target IPM Controller is an IPMB hub, the command works as follows:

- ▶ If <link> is omitted, the command prints information about the state of all radial IPMB links. The state is taken from the sensor data of the multiple IPMB link sensors on the IPM controller.
- ▶ If the <link> is present, the command prints information about the specific radial IPMB link (1 to 95). The state of the link is taken from the state of the corresponding IPMB link sensor on the IPM controller.

In both cases, information about the state of both IPMB-A and IPMB-B is shown.

This command can also be issued on the backup Shelf Manager; in that case, the current state of IPMB-0 is only reported for IPM controllers that are local to the backup Shelf Manager.

Example

To show the current state of IPMB-0 on the IPMC at IPMB address 92h:

```
# clia getipmbstate 92
IPM Sentry Shelf Manager Command Line Interpreter
    92: LUN: 0, Sensor # 1 ("IPMB LINK")
    Bus Status: 0x8  (IPMB-A Enabled, IPMB-B
        Enabled)
    IPMB A State: 0x8  (LocalControl, No failure)
    IPMB B State: 0x8  (LocalControl, No failure)
```

Getlanconfig

Syntax

```
getlanconfig <channel> [ <parameter-name> [
    <additional-parameters> ] ] |
getlanconfig <channel> [ <parameter-number> [
    <additional-parameters> ] ]
```

Purpose

Shows the value of the specified LAN configuration parameter on the specified channel. If no configuration parameter name or number is specified, all configuration parameters for the specified channel are shown.

The following table lists names and numbers of LAN configuration parameters supported by the **getlanconfig** command:

Parameter Name	No.	Description
auth_support	1	An 8-bit value that contains authentication types support flags for the LAN channel.
auth_enables	2	Five 8-bit values that contain authentication types enable flags for Callback, User, Operator, Administrator, and OEM privilege levels for the LAN channel.
ip	3	A string value that contains the IP address assigned to the LAN channel in dotted decimal notation (e.g. 192.168.0.15).
ip_source	4	A value that encodes the source of the assigned IP address.
mac	5	A string value that contains the MAC address assigned to the LAN channel as 6 hexadecimal byte values delimited by ':' symbols (e.g. 00:A0:24:C6:18:2F).
subnet_mask	6	A string value that contains the subnet mask assigned to the LAN channel in dotted decimal notation (e.g. 255.255.255.0).

Parameter Name	No.	Description
ipv4_hdr_param	7	Three 8-bit values that contain various IPv4 header parameters for sending RMCP packets: • Time-to-live • IP header flags (bits [7:5]) • Precedence (bits [7:5]) and type of service (bits [4:1])
pri_rmcp_port	8	A 16-bit value that contains the primary RMCP port number (the port used for regular RMCP communication).
sec_rmcp_port	9	A 16-bit value that contains the secondary RMCP port number. (the port used for secure RMCP communication).
arp_control	10	Two flags that control ARP behavior on the LAN channel: Enable responding to ARP requests Enable sending Gratuitous ARPs
arp_interval	11	The Gratuitous ARP interval in seconds, in fixed-point format (potentially including a fractional part).
dft_gw_ip	12	A string value that contains the IP address of the default gateway in dotted decimal notation.
dft_gw_mac	13	A string value that contains the MAC address of the default gateway as 6 hexadecimal byte values delimited by ':' symbols.
backup_gw_ip	14	A string value that contains the IP address of the backup gateway in dotted decimal notation.
backup_gw_mac	15	A string value that contains the MAC address of the backup gateway as 6 hexadecimal byte values delimited by ':' symbols.
community	16	A string value (up to 18 symbols) that is put into the "Community String" field in PET Traps.

Example

To get and show the whole LAN parameter table for channel 1:

```
# clia getlanconfig 1
Authentication Type Support: 0x15 ( None MD5
    Straight Password/Key )
Authentication Type Enables: 0x00
    User level: 0x15 ( None MD5 Straight
        Password/Key )
    Operator level: 0x15 ( None MD5 Straight
        Password/Key )
    Administrator level: 0x15 ( None MD5 Straight
        Password/Key )
    OEM level: 0x00
IP Address: 172.16.2.203
IP Address Source: Static Address (Manually
    Configured) (01)
MAC Address: 90:91:91:91:91:91
Subnet Mask: 255.255.255.0
IPv4 Header Parameters: 0x40:0x40:0x10
Primary RMCP Port Number: 0x026f
Secondary RMCP Port Number: 0x0298
BMC-generated ARP Control: 02
    Enable BMC-generated Gratuitous Response
Gratuitous ARP Interval: 2.0 seconds
Default Gateway Address: 0.0.0.0
Default Gateway MAC Address: N/A
Backup Gateway Address: 0.0.0.0
Backup MAC Address: N/A
Community String: "public"
Number of Destinations: 16
```

IPMC

Syntax

```
ipmc [-v] [<IPMB-address>]  
ipmc board <N>
```

Purpose

Shows information about the IPM controller at the specified address, or about all IPM controllers known to the Shelf Manager, if IPMB-address is omitted.

The following information is shown for the IPM controller in standard mode:

- ▶ IPMB address of the controller as two hexadecimal digits
- ▶ Entity ID and Entity Instance for the IPM controller
- ▶ Maximum possible FRU device ID for the IPM controller
- ▶ PICMG extension version. This version should be 2.0 for PICMG 3.0-compliant IPM controllers.

Information on current hot swap state, previous hot swap state, and cause of the last state change for FRU device 0 of the IPM controller (which represents the IPM controller itself) may also be accessed. The hot swap states M0-M7 are defined in the PICMG 3.0 specification as follows:

- ▶ M0 – Not Installed
- ▶ M1 – Inactive
- ▶ M2 – Activation Request
- ▶ M3 – Activation in Progress
- ▶ M4 – FRU Active
- ▶ M5 – Deactivation Request
- ▶ M6 – Deactivation in Progress
- ▶ M7 – Communication Lost

Examples

To get information about the IPM controller at address 9C:

```
# clia ipmc 88
```

IPM Sentry Shelf Manager Command Line Interpreter

```
88: Entity: (0xd0, 0x0) Maximum FRU device ID:
    0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3
    (Activation In Process), Last State Change
    Cause: Normal State Change (0x0)
```

```
#
```

To get verbose information about the IPM controller at address 9C:

```
# clia ipmc -v 88
```

IPM Sentry Shelf Manager Command Line Interpreter

```
88: Entity: (0xd0, 0x0) Maximum FRU device ID:
    0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3
    (Activation In Process), Last State Change
    Cause: Normal State Change (0x0)
    Device ID: 0x00, Revision: 0, Firmware: 1.01,
    IPMI ver 1.5
    Manufacturer ID: 00315a (PICMG), Product ID:
    0000, Auxiliary Rev: 01ac10ac
    Device ID String: "IPM Sentry 6"
    Global Initialization: 0x0, Power State
    Notification: 0x0, Device Capabilities: 0x29
    Controller provides Device SDRs
    Supported features: 0x29
    "Sensor Device" "FRU Inventory Device"
    "IPMB Event Generator"
```


Minfanlevel

Syntax

```
minfanlevel [<level>]
```

Purpose

Shows or sets the minimum fan level. Under normal conditions, the cooling management algorithm gradually decreases the level for the fans in the system while thermal conditions stay normal. However the cooling management algorithm will not decrease the fan level below the minimum level specified by the configuration parameter MIN_FAN_LEVEL, or by this command.

The default value for the minimum fan level is 1. Setting the minimum fan level to a higher value does not prevent the fan level from being set below that value via the command **clia setfanlevel** or via the ATCA command SetFanLevel submitted over RMCP. The minimum fan level affects only the automatic management of the fan level by the cooling management facility.

This command without parameters shows the current minimum fan level. This command with an integer parameter sets the minimum fan level to the value of the parameter.

Example

```
# clia minfanlevel 3
IPM Sentry Shelf Manager Command Line Interpreter
Minimal Fan Level is set to 3

# clia minfanlevel
IPM Sentry Shelf Manager Command Line Interpreter
Minimal Fan Level is 3
```

Sel

Syntax

```
sel [-v] [ <IPMB-address> [<record-count>
    [starting-entry] ] ] |
sel clear [ <IPMB-address> ]
sel info [ <IPMB-address> ]
<IPMB addr> can be replaced by the "board <N>" or
    "shm <N>" abbreviations
```

Purpose

Shows the contents of the SEL on the specified IPM Controller (by default, at IPMB address 20h). The optional parameter <record-count> could be specified to indicate how many records from the record number <starting-entry> in the SEL are shown. The optional parameter <starting-entry> is the entry number of the first SEL record to print relative to the beginning of the SEL. Both <record-count> and <starting-entry> must be within the range from 1 to the total number of records in the SEL. The default value of the optional parameter <starting-entry> is 1. The <starting-entry> is independent of the RecordID field of the SEL record.

Examples

```
# clia sel info
IPM Sentry Shelf Manager Command Line Interpreter

20: SEL version: 1.5
    Number of log entries: 43
    Free space: 15680 bytes
    Last addition timestamp: Nov 19 17:12:47 2003
    Last erase timestamp: Oct 31 23:59:59 2003
    Supported operations: 0x0f
#

# clia sel 20 5
IPM Sentry Shelf Manager Command Line Interpreter

0x0027: Event: at Nov 19 17:12:42 2003;
    from:(0x9c,0,0); sensor:(0xf0,0);
    event:0x6f(asserted): HotSwap: FRU 0 M4->M6,
    Cause=0x1
```

```

0x0028: Event: at Nov 19 17:12:42 2003;
        from:(0x9c,0,0); sensor:(0xf0,0);
        event:0x6f(asserted): HotSwap: FRU 0 M6->M1,
        Cause=0x0
0x0029: Event: at Nov 19 17:12:46 2003;
        from:(0x9c,0,0); sensor:(0xf0,0);
        event:0x6f(asserted): HotSwap: FRU 0 M1->M2,
        Cause=0x2
0x002A: Event: at Nov 19 17:12:46 2003;
        from:(0x9c,0,0); sensor:(0xf0,0);
        event:0x6f(asserted): HotSwap: FRU 0 M2->M3,
        Cause=0x1
0x002B: Event: at Nov 19 17:12:47 2003;
        from:(0x9c,0,0); sensor:(0xf0,0);
        event:0x6f(asserted): HotSwap: FRU 0 M3->M4,
        Cause=0x0
#

# clia sel b4 5
IPM Sentry Shelf Manager Command Line Interpreter

0x00A4: Event: at Nov 19 01:24:25 2003;
        from:(0x20,0,0); sensor:(0x02,4);
        event:0x1(asserted): "Lower Non-Critical",
        Threshold: 0xb3, Reading: 0xb3
0x00B8: Event: at Nov 19 00:04:11 2003;
        from:(0x20,0,0); sensor:(0x02,4);
        event:0x1(asserted): "Lower Non-Critical",
        Threshold: 0xb3, Reading: 0xb3
0x00CC: Event: at Nov 19 00:36:32 2003;
        from:(0x20,0,0); sensor:(0x02,7);
        event:0x1(asserted): "Lower Non-Critical",
        Threshold: 0xae, Reading: 0x94
0x00E0: Event: at Nov 19 00:36:32 2003;
        from:(0x20,0,0); sensor:(0x02,7);
        event:0x1(asserted): "Lower Critical",
        Threshold: 0xac, Reading: 0x94
0x00F4: Event: at Nov 19 00:02:37 2003;
        from:(0x20,0,0); sensor:(0x01,2);
        event:0x1(asserted): "Upper Critical",
        Threshold: 0x13, Reading: 0x1c

```

Sensordata

Syntax

```
sensordata [ <IPMB-address> [<sensor-name> |  
    [<lun>:]<sensor-number> ] ]  
sensordata [-v] board <N> [<sensor-name> |  
    [<lun>:]<sensor-number> ] ]  
sensordata [-v] shm <N> [<sensor-name> |  
    [<lun>:]<sensor-number> ] ]
```

Purpose

Shows the actual value of the specified sensor(s) for a threshold-based sensor, or the currently asserted states of a discrete sensor. The target sensor is selected by its IPM controller's IPMB address and by sensor number or by sensor name (device ID string from the sensor SDR, enclosed in double quotes). If neither sensor name nor sensor number is specified, values of all sensors on the specified IPM controller are shown. If no parameters are specified, values of all known sensors are shown.

This command allows you to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, information about sensors with the specified sensor number on all LUNs is shown. <Lun> can take the value 0, 1, or 3 (LUN 2 is reserved.)

Examples

To get sensor data values for a discrete (Hot Swap) sensor (#0) on IPM controller 9C.:

```
# clia sensordata 9c 0  
IPM Sentry Shelf Manager Command Line Interpreter  
9c: LUN: 0, Sensor # 0 ("FRU 0 HOT_SWAP")  
Type: Discrete (0x6f), "Hot Swap" (0xf0)  
Status: 0xc0  
    All event messages enabled from this  
    sensor  
        Sensor scanning enabled  
        Initial update completed  
Sensor reading: 0x00  
Current State Mask 0x0010
```

Setfanlevel

Syntax

```
setfanlevel <IPMB-address> <FRU-device-ID>
          <level>
```

Purpose

Sets the new level for the fan controlled by the FRU specified in the command parameters.

Example

Set fan level for the fan residing at FRU #2 at IPMB address 0x20 to 5.

```
# clia setfanlevel 20 3 5
```

IPM Sentry Shelf Manager Command Line Interpreter

```
20: FRU # 3 Set Fan Level to: 5
#
```

setlanconfig

Syntax

```
setlanconfig <channel> <parameter-name>
          <additional-parameters> |
setlanconfig <channel> <parameter-number>
          <additional-parameters>
```

Purpose

Sets the value of the specified LAN configuration parameter on the specified channel. The channel number, the configuration parameter name or number, and the parameter value should be explicitly specified.

The following table lists names and numbers of LAN configuration parameters supported by the “setlanconfig” command:

Shelf

Syntax

```
shelf <subcommand>
```

The following sub-commands are supported.

```
address_table
cooling_state
fans_state
power_distribution
power_management
pci_connectivity
ha_connectivity
h110_connectivity
point-to-point_connectivity
MaxCurrent [feed] <Amps>
MinVoltage [feed] <Volts>
Activation <addr> <fru_id> 1|0
Deactivation <addr> <fru_id> 1|0
BDSelGrounded <slot number> 1|0
    1 means Enabled, 0 means Disabled
PwrCapability <addr> <fru_id> <Watts>
PwrDelay <addr> <fru_id> <10ths_of_second>
Allowance <seconds>
PwrReorder <addr1> <fru_id1> before|after <addr2>
    <fru_id2>
info_refresh
info_force_update
```

Purpose

Shows key Shelf FRU information plus selected current operating data for the shelf, and allows modifying some fields in the Shelf FRU information. The type of the information this command shows or modifies is specified in the command parameter.

The following subsection describes the syntax of the **shelf** command for different command applications.

Displaying Shelf FRU Information

Syntax

```
shelf [cooling_state | fans_state | address_table
      | power_distribution | power_management
      |pci_connectivity | ha_connectivity |
      h110_connectivity | point-to-
      point_connectivity ]
```

Purpose

This syntax of the command **shelf** shows key Shelf FRU information plus selected current operating data for the shelf. The type of the information this command shows is specified in the command parameter. The following table lists the parameters supported by the **shelf** command:

Command Parameter	Provided Information
cooling_state (abbreviated as cs)	Shows the current cooling state of the shelf: • Normal – all temperature sensors show normal operating temperature. • Minor Alert – at least one temperature sensor is in minor alert state. None of the sensors is in major or critical alert state. • Major Alert – at least one temperature sensor is in major alert state. None of the sensors is in critical alert state. • Critical Alert – at least one temperature sensor is in critical alert state.
fans_state (abbreviated as fs)	Shows the current state of the fan tachometers in the shelf: • Normal – all fan tachometer sensors show normal operating speed. • Minor Alert – at least one fan tachometer sensor is in minor alert state. None of the sensors is in major or critical alert state. • Major Alert – at least one fan tachometer sensor is in major alert state. None of the sensors is in critical alert state. • Critical Alert – at least one fan tachometer sensor is in critical alert state.

Command Parameter	Provided Information
address_table (abbreviated to at)	Shows the Address Table record in the Shelf FRU Info. The following information is provided: • Shelf Address (shown according to its type) • List of address table entries, showing Hardware Address, Site Type, and Site Number for each of them.
power_distribution (abbreviated as pd)	The following information is provided for each of the power feeds (mostly from the Shelf Power Distribution record of the Shelf FRU Information): • Maximum External Available Current • Maximum Internal Current • Minimum Expected Operating Voltage • Actual Power Available • Currently Used Power • List of FRUs connected to the feed, showing Hardware Address and FRU Device ID for each of them
power_management (abbreviated as pm)	The Shelf Power Management record in the Shelf FRU Info. This record contains a list of FRU Power Descriptors. For each descriptor the following information is provided: • Hardware Address • FRU Device ID • Maximum FRU Power Capability • Shelf Manager Controlled Activation • Delay Before Next Power On
pci_connectivity (abbreviated as pcic)	The Shelf PCI Connectivity record in the Shelf FRU Info. The following information is provided: • PCI Slot Descriptor • IDSEL Connection • Segment ID • Extended PCI Slot Descriptor • Geographic Address • Interface Number • System Slot Capable
ha_connectivity (abbreviated as ha)	The Shelf HAConnectivity record in the Shelf FRU Info. The following information is provided: • Radial Connectivity Support

Command Parameter	Provided Information
h110_connectivity (abbreviated as h110c)	The Shelf H110 Connectivity record in the Shelf FRU Info. The following information is provided: • Geographic Address • Segment ID
point-to-point_connectivity (abbreviated as ppc)	The Shelf Point-to-Point Connectivity record in the Shelf FRU Info. The following information is provided: • Channel Type • Channel Count • Slot/ Hw Address • Channel Descriptor

Example

To get a shelf fan tachometer status (verbose).

```
# clia shelf -v fans_state
IPM Sentry Shelf Manager Command Line Interpreter
Fans state: "Major Alert"
Sensor(s) at this state: (0x7e,10) (0x7e,11)
                        (0x7e,12) (0x7e,13) (0x7e,14) (0x7e,15)
                        (0x7e,16) (0x7e,17)
```

shmstatus

Syntax

shmstatus

Purpose

Returns the Shelf Manager status in redundant active or backup configurations. In verbose mode, this command reports more detailed information including Shelf FRU Info status, RMCP interface status, and state of the backup Shelf Manager (if the Shelf Manager being queried is the active one). The ready for operation flag is a parameter that shows as **Yes**:

- ▶ on the active Shelf Manager if it finds valid Shelf FRU Info and successfully initializes its RMCP interface.
- ▶ on the backup Shelf Manager if it successfully received the redundancy state information from the active Shelf Manager.

Example

```
# clia shmstatus -v
```

```
IPM Sentry Shelf Manager Command Line Interpreter
```

```
Shelf Manager status: "Active"
```

ShowUnhealthy

Syntax

```
showunhealthy
```

Purpose

Shows the list of FRUs that appear to have a problem. In the PICMG 3.0 context, this list includes FRUs for which the cause of last hot swap state change is **Communication Lost**, **Communication lost due to local failure**, or **Unexpected deactivation**. In CompactPCI shelves, this command checks Board, Fan Tray, and Power Supply healthy status bits as well.

For each FRU, the following information are shown:

- ▶ IPMB address and FRU device ID
- ▶ Current hot swap state
- ▶ Previous hot swap state
- ▶ Cause of the last state change

Example

To show the list of unhealthy components in the system:

```
# clia showunhealthy
IPM Sentry Shelf Manager Command Line Interpreter
```

```
There are no unhealthy components in the shelf.
```

switchover

Syntax

```
switchover
```

Purpose

Initiates switchover of redundant Shelf Manager instances. This command can be executed on either the active or the backup instance of the Shelf Manager.

Examples

To initiate the switchover from either the active or backup instance:

```
# clia switchover
    This Shelf Manager is now active, but is
    shutting down to trigger a switchover.

#
```

Terminate

Syntax

```
terminate [-reboot]
```

Purpose

Terminates the Shelf Manager. This command also causes the ShMM to unconditionally reboot if the option **-reboot** is specified.

If the option **-reboot** is omitted, this command terminates the Shelf Manager without rebooting the ShMM, if this variant is supported by the ShMM on which the command is executed. Currently, no-reboot variant of the command is supported on the aCMM-2100.

If the ShMM does not support terminating the Shelf Manager without reboot, the ShMM is rebooted.

Examples

To terminate the Shelf Manager on aCMM-2100 without rebooting the ShMM:

```
# clia terminate
    Terminating the Shelf Manager.

#
```

version

Syntax

version

Purpose

Shows the version information for the Shelf Manager software. This command can also be issued on the backup Shelf Manager.

Example

```
# clia version
IPM Sentry Shelf Manager Command Line Interpreter

IPM Sentry Shelf Manager ver. 2.3-pre5
IPM Sentry is a trademark of Pigeon Point
Systems.
Copyright (c) 2002-2006 Pigeon Point Systems
Build date/time: January 12 2006 16:39:37
All rights reserved #
```

4.3 Web Interface

IPM Sentry Web Interface

The web interface can be used to communicate with intelligent shelf management controllers, boards, and with the Shelf Manager itself remotely over the network via a web browser. The web interface is based on the Command Line Interface (CLI) and is essentially a front-end to the CLI.

In redundant configurations, the external IP address is always maintained by the active Shelf Manager and is switched over to the backup Shelf Manager when the general switchover takes place. Therefore, the client always communicates to the active Shelf Manager via the web interface in redundant configurations.

Starting the Web Interface

Before using the web interface, check if the module meets the following requirements:

- ▶ one of the ethernet interfaces should be configured and up
- ▶ the web server **boa** must be running
- ▶ the Shelf Manager software (shelfman) must be running

To use the Web interface, launch any web browser (Internet Explorer, or Netscape), then point it to URL `http://<Shelf-Manager-IP-Address>`. For redundant Shelf Manager instances in a single shelf, the IP address should be the one exported outside the shelf and used for RMCP access to the Shelf Manager (instances). For example, if the Shelf Manager IP address is 192.168.1.204, the URL is `http://192.168.1.204`. The main page shows up in the browser and provides a menu.

To fill a field of a web form with a parameter value that includes the space symbol, you must enclose the value in backslashed quotes. For example, sensor **Local Temp** should be entered as **\Local Temp** in the field "Sensor Name or LUN:Sensor #:" on the page **Set Sensor Hysteresis**.

The main page contains a list of links to other pages, each of which corresponds to one of the commands available through the web interface. These commands and the corresponding pages are described in detail in subsequent sections. The documentation relating to the command line interface can also be very helpful as the web interface provides the same functionality via a web browser.

Appendix A - IPMI

A.1 Overview of Intelligent Platform Management in ATCA

The IPM Sentry products are the first Intelligent Platform Management building blocks designed from the ground up for modular platforms like AdvancedTCA, wherein there is a strong focus on a dynamic population of Field Replaceable Units (FRUs) and maximum service availability. The Intelligent Platform Management Interface (IPMI) specification provides a solid foundation for the management of such platforms but requires significant extension to support them well.

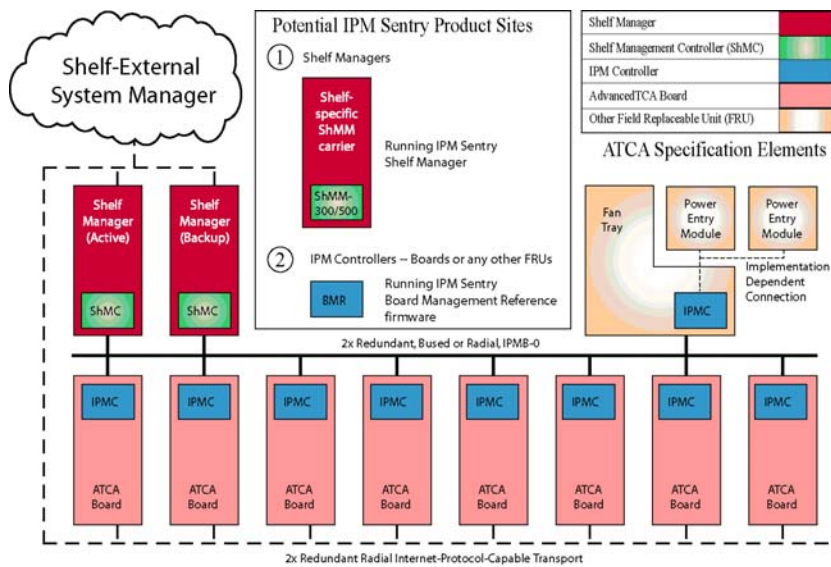


Figure A-1: IPMI in ATCA Overview

The illustration above shows the logical elements of an example AdvancedTCA shelf, identified in terms of ATCA specification and potential sites for incorporation of IPM Sentry products.

A.2 Features of IPM Sentry Shelf Manager

- ▶ Executes on the ShMM, a compact SODIMM form-factor module, installed on a suitable carrier board for the shelf.
- ▶ Conforms to the AdvancedTCA specification.
- ▶ Monitors activities within the shelf via the ATCA-specified dual redundant Intelligent Platform Management Bus (IPMB).
- ▶ Accepts and logs events posted by any intelligent FRU in the shelf (reflecting exceptions in temperatures, voltages, etc.); posts alerts outside the shelf based on configurable IPMI Platform Event Filters.
- ▶ Supports hot swapping of Field Replaceable Units (FRUs), while maintaining full management visibility.
- ▶ Interfaces to standard “Telco Alarm” infrastructures, via ShMM carrier-implemented dry contact relays.
- ▶ Supports redundant Shelf Manager instances for high availability.
- ▶ Integrates a watchdog timer, which resets the ShMM if not periodically strobed; such resets automatically trigger a switchover to the backup ShMM, if configured.
- ▶ Includes battery-backed real-time clock for time-stamping events.
- ▶ Implements a rich set of shelf-external interfaces accessible over Ethernet, including Remote Management Control Protocol (RMCP, required by AdvancedTCA), command line, web browser, Simple Network Management Protocol (SNMP).

A.3 Support for Dual Redundant Operation

The IPM Sentry Shelf Manager can be configured with active/backup instances to maximize availability. Figure A-2 shows how both instances are accessible to the System Manager, with only the active instance interacting at any given time. Similarly, only the active instance communicates over IPMB-0 with the IPM Controller population in the shelf. The two instances communicate over TCP/IP, with the active instance posting incremental state updates to the backup. As a result, the backup can quickly step into the active role if necessary.

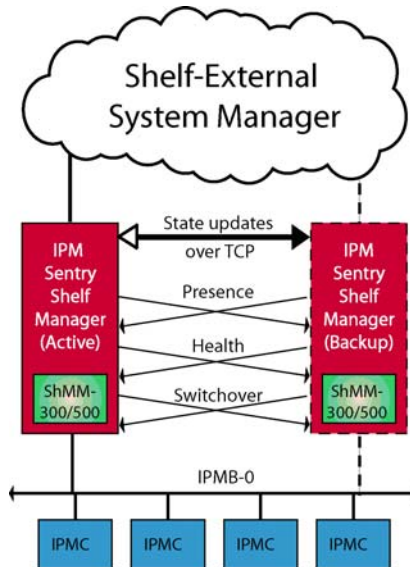


Figure A-2: IPM Sentry Shelf Manager Redundancy Support

Three cross-connected signals between the two Shelf Manager instances enhance their coordination:

- ▶ **Presence:** each Shelf Manager instance knows whether the other instance is present in the shelf.
- ▶ **Health:** each instance knows whether the other instance considers itself “healthy.”
- ▶ **Switchover:** the backup instance can force a switchover if necessary.

A.4 IPM Sentry ShMM Shelf Management Mezzanines

The IPM Sentry Shelf Manager executes on the ShMM a small (67.60 mm x 50.80 mm) Shelf Management Mezzanine that conforms to the Small Outline Dual Inline Memory Module (SODIMM) specification.

Feature	ShMM-500
CPU	AMDAlchemy Au1550
Processor core(s)	333 Mhz MIPS-32
SDRAM	128 Mbytes
Flash	64 Mbytes
Ethernet	Dual 10/100 Mbit
Serial	Two, one with modem controls
Universal Serial Bus (USB)	Host and device ports
Duplex IPMB-0	Yes
Real-time clock, optionally battery backed on ShMM carrier	Yes
General Purpose I/O signals	Nine
Shelf Manager redundancy and hot swap interface, with on-board CPLD assist	Yes
High speed interface(s) to on-carrier devices	Multiple ports supporting either SPI or SMBus
JTAG interface for processor debug and flash programming	Yes

Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS**, and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- ▶ Read these safety instructions carefully.
- ▶ Keep this user's manual for future reference.
- ▶ Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- ▶ When installing/mounting or uninstalling/removing equipment:
 - ▷ Turn off power and unplug any power cords/cables.
- ▶ To avoid electrical shock and/or damage to equipment:
 - ▷ Keep equipment away from water or liquid sources;
 - ▷ Keep equipment away from high heat or high humidity;
 - ▷ Keep equipment properly ventilated (do not block or cover ventilation openings);
 - ▷ Make sure to use recommended voltage and power source settings;
 - ▷ Always install and operate equipment near an easily accessible electrical socket-outlet;
 - ▷ Secure the power cord (do not place any object on/over the power cord);
 - ▷ Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
 - ▷ If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

- ▶ Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.

A Lithium-type battery may be provided for uninterrupted, backup or emergency power.



Risk of explosion if battery is replaced with one of an incorrect type. Dispose of used batteries appropriately.

- ▶ Equipment must be serviced by authorized technicians when:
 - ▷ The power cord or plug is damaged;
 - ▷ Liquid has penetrated the equipment;
 - ▷ It has been exposed to high humidity/moisture;
 - ▷ It is not functioning or does not function according to the user's manual;
 - ▷ It has been dropped and/or damaged; and/or,
 - ▷ It has an obvious sign of breakage.

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology, Inc.

Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路 166 號 9 樓
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 5215 Hellyer Avenue, #110, San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 上海市浦东新区张江高科技园区芳春路 300 号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park,
Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology Beijing

Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室(100085)
Rm. 801, Power Creative E, No. 1,
Shang Di East Rd., Beijing, 100085 China
Tel: +86-10-5885-8666
Fax: +86-10-5885-8626
Email: market@adlinktech.com

ADLINK Technology Shenzhen

Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bldg. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7,
High-Tech Industrial Park S., Shenzhen, 518054 China
Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

LiPPERT ADLINK Technology GmbH

Address: Hans-Thoma-Strasse 11, D-68163, Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

ADLINK Technology, Inc. (French Liaison Office)

Address: 15 rue Emile Baudot, 91300 Massy CEDEX, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation

Address: 〒101-0045 東京都千代田区神田鍛冶町 3-7-4
神田 374 ビル 4F
KANDA374 Bldg. 4F, 3-7-4 Kanda Kajicho,
Chiyoda-ku, Tokyo 101-0045, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5209-6013
Email: japan@adlinktech.com

ADLINK Technology, Inc. (Korean Liaison Office)

Address: 서울시 서초구 서초동 1675-12 모인터빌딩 8 층
8F Mointer B/D, 1675-12, Seocho-Dong, Seocho-Gu,
Seoul 137-070, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte. Ltd.

Address: 84 Genting Lane #07-02A, Cityneon Design Centre,
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte. Ltd. (Indian Liaison Office)

Address: 1st Floor, #50-56 (Between 16th/17th Cross) Margosa Plaza,
Margosa Main Road, Malleswaram, Bangalore-560055, India
Tel: +91-80-65605817, +91-80-42246107
Fax: +91-80-23464606
Email: india@adlinktech.com

ADLINK Technology, Inc. (Israeli Liaison Office)

Address: 6 Hasadna St., Kfar Saba 44424, Israel
Tel: +972-9-7446541
Fax: +972-9-7446542
Email: israel@adlinktech.com