



# NEON-2000-ONO Series

AI Smart Camera

**User's Manual**



**Manual Rev.:** 1.0

**Revision Date:** May 8, 2024

**Part No:** 50M-51050-1000

LEADING EDGE COMPUTING

# Revision History

| Revision | Release Date | Description of Change(s) |
|----------|--------------|--------------------------|
| 1.0      | 2024-05-08   | Official release         |

# Preface

**Copyright © 2024 ADLINK Technology, Inc.**

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## **Disclaimer**

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

## **Environmental Responsibility**

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

## **Trademarks**

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

## Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



CAUTION:

Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.

*ATTENTION: Informations destinées à prévenir les blessures corporelles mineures, les dommages aux composants, la perte de données et/ou la corruption de programme lors de l'exécution d'une tâche.*



WARNING:

Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

*AVERTISSEMENT: Informations destinées à prévenir les blessures corporelles graves, les dommages aux composants, la perte de données et/ou la corruption de programme lors de l'exécution d'une tâche spécifique.*

---

# Table of Contents

**Revision History..... ii**

**Preface ..... iii**

**List of Figures ..... vii**

**List of Tables..... ix**

**1 Introduction ..... 1**

    1.1 Overview..... 1

    1.2 Features..... 2

    1.3 General Specifications..... 3

    1.4 Mechanical Dimensions..... 6

        1.4.1 Camera Dimensions..... 6

        1.4.2 USB Type-C Screw Lock Location and Dimensions .. 6

        1.4.3 LED Light Mounting Thread..... 7

    1.5 Accessories ..... 8

**2 Connectors and I/O ..... 9**

    2.1 Bottom Side I/O and Connector Description..... 10

        2.1.1 D-sub I/O Connector..... 11

        2.1.2 DC Jack ..... 12

    2.2 Top Side I/O and Connector Description ..... 13

        2.2.1 Wafer Connector ..... 14

    2.3 Front Side I/O and Connector Description..... 15

**3 Getting Started ..... 17**

    3.1 Mounting ..... 17

    3.2 Digital I/O Connection Example..... 18

    3.3 Attaching a Lens ..... 19

    3.4 Power and Peripheral Connections ..... 20

|                                               |                                   |           |
|-----------------------------------------------|-----------------------------------|-----------|
| 3.5                                           | Login .....                       | 22        |
| 3.6                                           | Image Capture and Inference ..... | 23        |
| 3.7                                           | Neon-20XA Trigger Control .....   | 24        |
| 3.7.1                                         | Trigger API Function.....         | 24        |
| 3.7.2                                         | Trigger API Example.....          | 25        |
| <b>Important Safety Instructions.....</b>     |                                   | <b>27</b> |
| <b>Consignes de Sécurité Importante .....</b> |                                   | <b>29</b> |
| <b>Getting Service .....</b>                  |                                   | <b>31</b> |

# List of Figures

Figure 2-1: NEON-2000-ONO Orientation ..... 9

Figure 2-2: Bottom Side I/O and Connectors ..... 10

Figure 2-3: D-sub I/O Connector ..... 11

Figure 2-4: DC Jack Connector..... 12

Figure 2-5: Top Side I/O and Connectors ..... 13

Figure 2-6: Wafer Connector..... 14

Figure 2-7: Front Side I/O and Connectors..... 15

Figure 3-1: NEON-2000-ONO Mounting Holes..... 17

Figure 3-2: Digital Input Schematic Diagram ..... 18

Figure 3-3: Digital Output Schematic Diagram..... 18

Figure 3-4: Lens Attachment Assembly ..... 19

Figure 3-5: Separate Power and Peripheral Connections..... 20

Figure 3-6: Combined Power and Peripheral Connections ..... 21

Figure 3-7: Neon-20XA Trigger API Function Options..... 24

This page intentionally left blank.

# List of Tables

Table 1-1: NEON-2000-ONO Model and Sensor Specifications . 1

Table 2-1: Bottom Side I/O and Connectors..... 10

Table 2-2: D-sub I/O Connector Pin Definitions..... 11

Table 2-3: D-sub I/O Connector Specification ..... 12

Table 2-4: DC Jack Pin Definitions ..... 12

Table 2-5: Top Side I/O and Connectors ..... 13

Table 2-6: Wafer Connector Pin Definitions ..... 14

Table 2-7: Front Side I/O and Connectors..... 15

This page intentionally left blank.

# 1 Introduction

## 1.1 Overview

The NEON-2000-ONO series is an open camera platform equipped with an NVIDIA® Jetson™ Orin Nano module supporting a series of image sensors providing industrial DI/O capabilities. It is designed for deep learning inference or other vision applications that requires a GPU at the edge. The system has Jetpack, camera driver, and utilities pre-installed to save integration effort and avoid compatibility issues.

The following table describes the current NEON-2000-ONO models with their respective sensor specifications.

| Model Name    | Image Sensor                                          | Sensor Vendor | Sensor Model | Sensor Output | Image Capture  |
|---------------|-------------------------------------------------------|---------------|--------------|---------------|----------------|
| NEON-202B-ONO | 1/1.8", 1.9M, Global Shutter, 1600x1200, 60fps, Color | E2v           | EV76C570     | USB3          | Basler Pylon   |
| NEON-203B-ONO | 1/3.7", 2M, Rolling Shutter, 1920x1080, 30fps, Color  | Onsemi        | MT9P031      | USB3          | Basler Pylon   |
| NEON-201A-ONO | 1/2.6", 2M, Global Shutter, 1920x1200, 60fps, Color   | Onsemi        | AR0234       | MIPI          | V4L2/Gstreamer |
| NEON-202A-ONO | 1/1.8", 8M, Rolling Shutter, 3840x2160, 60fps, Color  | Sony          | IMX334       | MIPI          | V4L2/Gstreamer |

Table 1-1: NEON-2000-ONO Model and Sensor Specifications

## 1.2 Features

- ▶ Provides rich sample code and AI development, quick to start
- ▶ SOM: NVIDIA Jetson Orin Nano 4GB
- ▶ CPU: 6-core Arm Cortex-A78AE v8.2 64-bit
- ▶ GPU: NVIDIA Ampere architecture with 512 NVIDIA CUDA cores and 16 Tensor cores
- ▶ Storage: Embedded 128GB M.2 SSD
- ▶ USB3 and MIPI sensor interface, compatible with most machine vision software
- ▶ Type-C connector supporting DC power, DisplayPort and USB signal
- ▶ Vertical I/O, including lighting control, image sensor trigger, communication port, etc.
- ▶ Highly-integrated and compact system, easy to deploy

## 1.3 General Specifications

- ▶ Lens mount: C-mount
- ▶ Total weight: <700g (without lens)
- ▶ Operating temperature
  - ▷ NEON-20XB-ONO series: 0°C to 45°C with 0.6 m/s airflow at 10W mode
  - ▷ NEON-20XA-ONO series: 0°C to 55°C with 0.6 m/s air-flow at 10W mode
- ▶ Power consumption: <30W
- ▶ Computing module: NVIDIA Jetson Orin Nano 4GB
  - ▷ CPU: 6-core Arm® Cortex®-A78AE v8.2 64-bit
  - ▷ GPU: NVIDIA Ampere™ architecture with 512 NVIDIA CUDA® cores and 16 Tensor cores
  - ▷ Memory and Storage: 4GB 64-bit LPDDR5 and embedded 128G SSD
- ▶ Camera I/O and connectors
  - ▷ 1x Type-C for power input, DisplayPort and USB signals
  - ▷ 1x DC Jack for 12-24V DC input
  - ▷ 1x GbE Ethernet port
  - ▷ 1x 15-pin D-sub for DI/O and COM which includes:
    - ▷4x GPI/O, including 1x Camera Trigger In and 1x Trigger Out
    - ▷1x COM
  - ▷ 1x wafer connector and 1x Micro-USB for system flashing and debugging



NOTE:

1. When powering from the DC Jack, the Type-C connector can provide 3W of power to an external device such as a Type-C hub. Devices requiring more than 3W cannot be used.
2. DC power can be from the Type-C connector or DC jack.
3. Use only recommended ADLINK power adapters.
4. Due to I/O configuration variance, do not use NVIDIA official image to upgrade and/or re-flash the device. To change OS, please contact our ADLINK representative.

|                           | NEON-202B-ONO                                                               | NEON-203B-ONO | NEON-201A-ONO              | NEON-202A-ONO |
|---------------------------|-----------------------------------------------------------------------------|---------------|----------------------------|---------------|
| System Spec               |                                                                             |               |                            |               |
| Processor                 | NVIDIA® Jetson™ Orin Nano 4GB                                               |               |                            |               |
| CPU                       | 6-core Arm Cortex-A78AE v8.2 64-bit                                         |               |                            |               |
| OS Support                | Ubuntu                                                                      |               |                            |               |
| GPU                       | NVIDIA Ampere™ architecture with 512 NVIDIA CUDA® cores and 16 Tensor cores |               |                            |               |
| Storage                   | 128GB SSD                                                                   |               |                            |               |
| Memory                    | 4GB                                                                         |               |                            |               |
| Image Sensor Spec         |                                                                             |               |                            |               |
| Resolution (HxV)          | 1600x1200                                                                   | 1920x1080     | 1920x1200                  | 3840x2160     |
| Resolution                | 1.9M                                                                        | 2M            | 2M                         | 8M            |
| Frame Rate (fps)          | 60                                                                          | 30            | 60                         | 30            |
| Shutter                   | Global                                                                      | Rolling       | Global                     | Rolling       |
| Sensor Size               | 1/1.8"                                                                      | 1/3.7"        | 1/2.6"                     | 1/1.8"        |
| Pixel Size (µm)           | 4.5x4.5                                                                     | 2.2x2.2       | 3.0x3.0                    | 2.0x2.0       |
| Sensor Vendor             | e2v                                                                         | Onsemi        | Onsemi                     | Sony          |
| Sensor Model              | EV76C570                                                                    | MT9P031       | AR0234                     | IMX334        |
| Image Capturing Software  | Basler Pylon                                                                |               | V4L2 & Gstreamer           |               |
| Image Sensor Trigger Mode | External hardware trigger, software trigger, free run                       |               | software trigger, free run |               |

|                                 | NEON-202B-ONO                                                                 | NEON-203B-ONO | NEON-201A-ONO | NEON-202A-ONO |
|---------------------------------|-------------------------------------------------------------------------------|---------------|---------------|---------------|
| Lens Mount                      | C Mount                                                                       |               |               |               |
| Connectors and Functions        |                                                                               |               |               |               |
| Ethernet                        | 10/100/1000 Mbps                                                              |               |               |               |
| Type-C                          | DisplayPort Alternative Mode, 1920x1080 @ 30fps                               |               |               |               |
|                                 | USB 3.2 Gen1 (5Gbps)                                                          |               |               |               |
|                                 | Power supply for the camera (when connected to the Type C charger or adaptor) |               |               |               |
|                                 | Power supply (5W) for external Type-C USB Hub                                 |               |               |               |
| D-Sub                           | 4xDI and 4xDO                                                                 |               |               |               |
|                                 | 1xUART (TXD, RXD, GND)                                                        |               |               |               |
| Micro USB                       | USB OTG (for system flash)                                                    |               |               |               |
| Wafer Connector                 | For system flash                                                              |               |               |               |
| Mechanical and Power            |                                                                               |               |               |               |
| Dimensions                      | 123.3 x 77.5 x 66.81 mm                                                       |               |               |               |
| Weight                          | 700g                                                                          |               |               |               |
| Power Input                     | DC Jack (DC12 to 24V) or Type C (DC20V)                                       |               |               |               |
| Power Consumption               | <40W (camera only)                                                            |               |               |               |
| Environmental and Certification |                                                                               |               |               |               |
| Operating Temp.                 | 0 to 45°C                                                                     |               | 0 to 55°C     |               |
| Storage Temp.                   | -20 to 70°C                                                                   |               |               |               |
| Humidity                        | 40 to 75% (non-condensing)                                                    |               |               |               |
| Vibration                       | Operating, 5 to500 Hz, 5 Grms, 3 axes                                         |               |               |               |
| Shock                           | Operating, 11ms duration, 30G, half sine, 3 axes                              |               |               |               |
| ESD                             | Contact +/- 4kV, Air +/- 8kV                                                  |               |               |               |
| EMC                             | CE and FCC Class A (EN61000-4/-2)                                             |               |               |               |
| Safety                          | UL and cB                                                                     |               |               |               |




NOTE:

The DC power can be sourced either through the DC jack or the USB Type-C.

## 1.4 Mechanical Dimensions


This section provides dimensions and related mechanical information for the NEON-2000-ONO.

### 1.4.1 Camera Dimensions

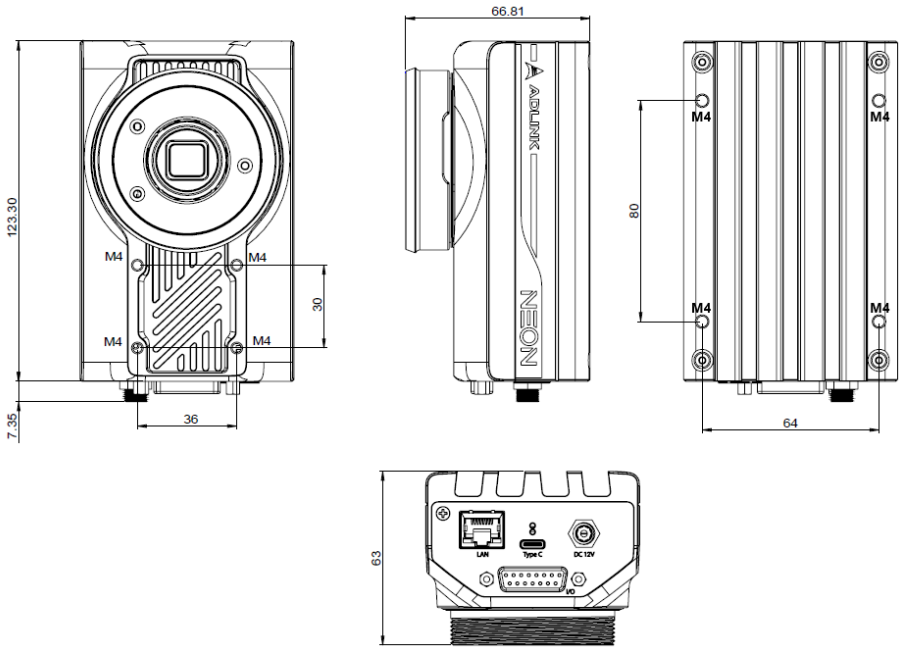


Dimensions: mm

### 1.4.2 USB Type-C Screw Lock Location and Dimensions

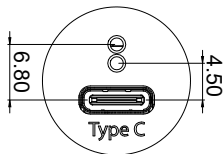

Dimensions: mm

1.4.3 LED Light Mounting Thread

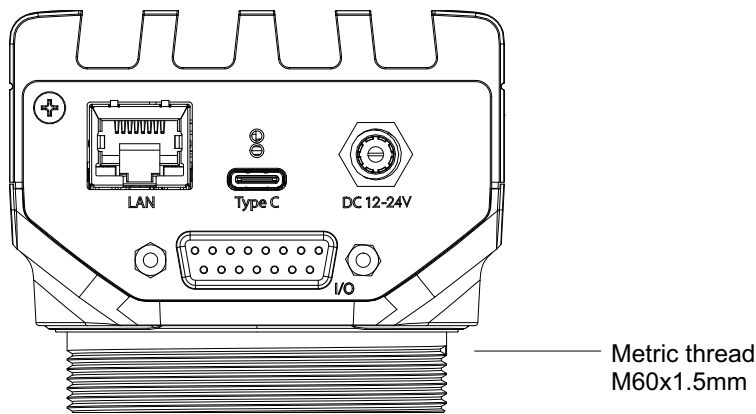

## 1.5 Accessories

Use ADLINK recommended accessories for optimum system performance. The table below includes ADLINK verified accessories.

| Accessory                       | Part Number      | Description                                                             |
|---------------------------------|------------------|-------------------------------------------------------------------------|
| USB Type-C cable                | 30-01284-0030-A0 | USB Type-C (M) to USB Type-C (M), length 1.8M, with screw lock          |
| USB Type-C Hub & Adapter        | 92-99090-1010    | AC 100-240V, USB – C PD2.0, DC 15V/2.3A                                 |
| DI/O cable                      | 30-01332-0010-A0 | DB15P (M) to DB37P (M), length 3M, connected to DIN-37D-01              |
| DIN-37D-01 DI/O extension board | 91-14025-1020    | DI/O extension board with one 37-pin D-sub connector and DIN-rail mount |
| 8mm lens                        | 92-15731-0010    | Focal length 8mm, F1.4, 2/3", 3MP                                       |
| AC/DC adaptor                   | 31-62156-1000-A0 | AC 100-240V DC, 12V/5A, DC jack                                         |

## 2 Connectors and I/O

This chapter includes the locations and descriptions of the connectors and I/O found on the NEON-2000-ONO.


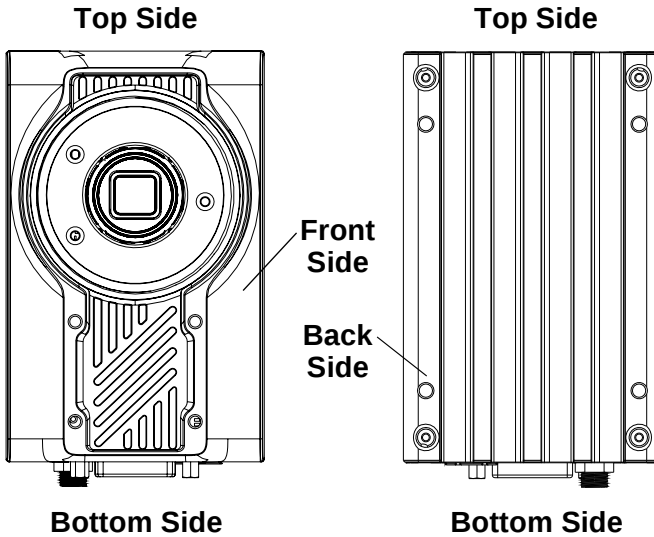


Figure 2-1: NEON-2000-ONO Orientation

## 2.1 Bottom Side I/O and Connector Description

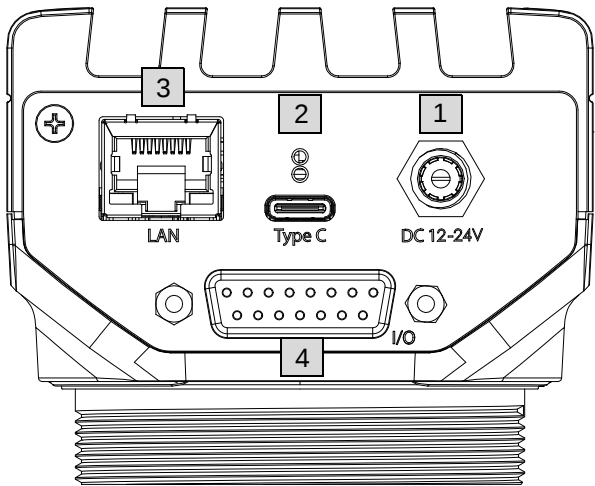

**Figure 2-2: Bottom Side I/O and Connectors**

| Item | Description                                                                                                                                                                                                      |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <ul style="list-style-type: none"> <li>DC Jack for DC input with included ADLINK AC/DC adaptor (P/N 31-62156-1000-A0)</li> <li>Power input: 12-24V DC at &gt;30 W</li> </ul>                                     |
| 2    | <ul style="list-style-type: none"> <li>USB Type-C connector w/ screw lock</li> <li>Supports DisplayPort (up to 1080P @ 30 fps)</li> <li>The NEON-2000-ONO can be powered via this port or the DC jack</li> </ul> |
| 3    | 1 GbE LAN at 10/100/1000 Mbit/s                                                                                                                                                                                  |
| 4    | 15-pin D-sub I/O connector for the digital I/O and UART. Use to connect external I/O devices such as sensors, COM and LED/strobe controllers.                                                                    |

**Table 2-1: Bottom Side I/O and Connectors**

## 2.1.1 D-sub I/O Connector

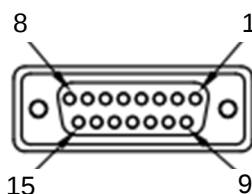


Figure 2-3: D-sub I/O Connector

| Pin | Function                                         | Pin | Function         |
|-----|--------------------------------------------------|-----|------------------|
| 1   | UART - TX                                        | 2   | DI/O GND         |
| 3   | Digital output 0/Strobe output 0<br>(see note 2) | 4   | Digital output 1 |
| 5   | Digital output 2                                 | 6   | Digital output 3 |
| 7   | UART GND                                         | 8   | Reserved         |
| 9   | UART – RX                                        | 10  | DI/O GND         |
| 11  | Digital input 0/Trigger input 0<br>(see note 1)  | 12  | Digital Input 1  |
| 13  | Digital Input 2                                  | 14  | Digital Input 3  |
| 15  | Reserved                                         |     |                  |

Table 2-2: D-sub I/O Connector Pin Definitions




NOTE:

1. Pin 11 (Digital input 0/Trigger input 0) is programmable. When configured for trigger input, it is used for hardware triggering of the image sensor. Connect an external sensor signal to pin 11 and set the camera to hardware trigger mode to enable realtime or hardware triggered image capture.
2. Pin 3 (Digital output 0/Strobe output 0) is programmable. When configured for strobe output, it can be connected to an LED light/strobe controller to adjust the timing latency/delay according to the camera connected to pin 11.

| I/O Category   | Maximum Throughput | Specification            |                             |            |  |
|----------------|--------------------|--------------------------|-----------------------------|------------|--|
| UART           | -                  | Baud rate: 9600bps @ 8N1 |                             |            |  |
| Digital Input  | 10 KHz             | Common sharing:          | 1 common for sharing ground |            |  |
|                |                    | Input range:             | 0-5 VDC                     |            |  |
|                |                    | High level threshold:    | 2-5 VDC                     |            |  |
|                |                    | Low level threshold:     | 0-0.8 VDC                   |            |  |
| Digital Output | 10KHz              | Open-collector           | Input voltage range:        | 3.3-30 VDC |  |
|                |                    |                          | Maximum sink current        | 100 mA     |  |

**Table 2-3: D-sub I/O Connector Specification**

### 2.1.2 DC Jack

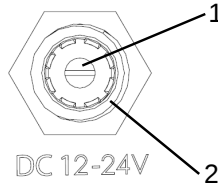

**Figure 2-4: DC Jack Connector**

| Pin | Function | Description      |
|-----|----------|------------------|
| 1   | Power    | Power input      |
| 2   | Ground   | Reference ground |

**Table 2-4: DC Jack Pin Definitions**

## 2.2 Top Side I/O and Connector Description

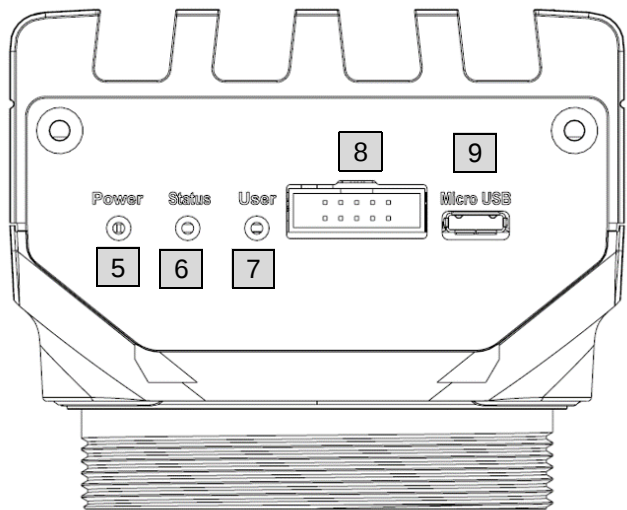


Figure 2-5: Top Side I/O and Connectors

| Item | Description                                                                                                                 |
|------|-----------------------------------------------------------------------------------------------------------------------------|
| 5    | Power status LED. Lights green when power is connected.                                                                     |
| 6    | Operating system status LED. Flashes orange when the system is booting, and lights when the system has booted successfully. |
| 7    | Please refer to NEON LFR (Function Library Reference) for the LED control APIs.                                             |
| 8    | Wafer connector, used to update the NEON-2000-ONO.                                                                          |
| 9    | Micro-USB port, used to update the NEON-2000-ONO.                                                                           |

Table 2-5: Top Side I/O and Connectors

2.2.1 Wafer Connector

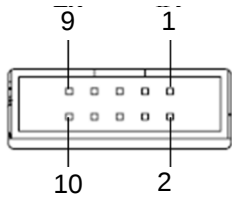


Figure 2-6: Wafer Connector

| Pin | Function     | Pin | Function |
|-----|--------------|-----|----------|
| 1   | Reserved     | 2   | Reserved |
| 3   | System Reset | 4   | GND      |
| 5   | RECOVERY     | 6   | GND      |
| 7   | Reserved     | 8   | GND      |
| 9   | Reserved     | 10  | GND      |

Table 2-6: Wafer Connector Pin Definitions

## 2.3 Front Side I/O and Connector Description

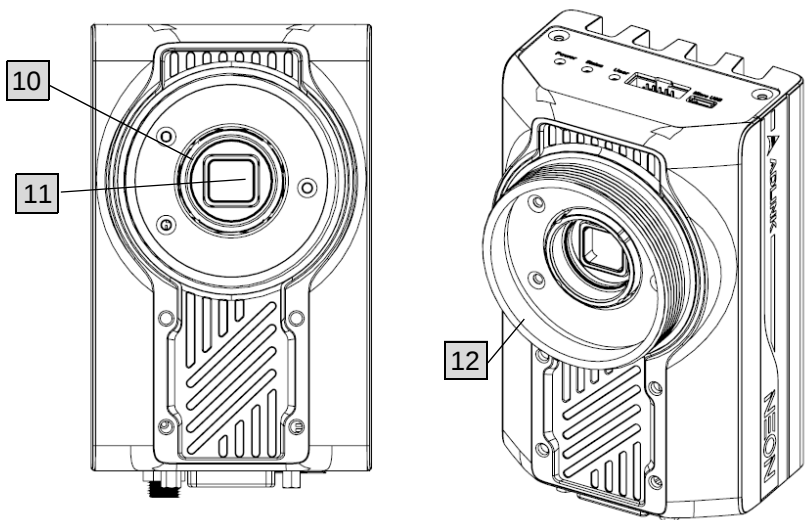


Figure 2-7: Front Side I/O and Connectors

| Item | Description                                                                  |
|------|------------------------------------------------------------------------------|
| 10   | C-type lens mount                                                            |
| 11   | Image sensor                                                                 |
| 12   | Strobe/LED light mounting thread. See “LED Light Mounting Thread” on page 7. |

Table 2-7: Front Side I/O and Connectors


This page intentionally left blank.

## 3 Getting Started

### 3.1 Mounting

The NEON-2000-ONO can be mounted using the mounting screw holes on either the front (A) or back (B) sides.


*Le NEON-2000-ONO peut être monté à l'aide des trous de vis de montage sur les côtés avant (A) ou arrière (B).*

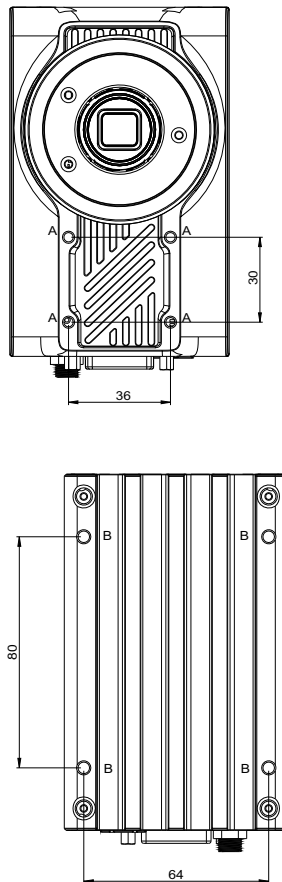


**Figure 3-1: NEON-2000-ONO Mounting Holes**

## 3.2 Digital I/O Connection Example

External devices such as trigger sensors, LED light controllers or relays can be connected to the NEON-2000-ONO to implement different applications. This section shows an example of how to connect such devices.

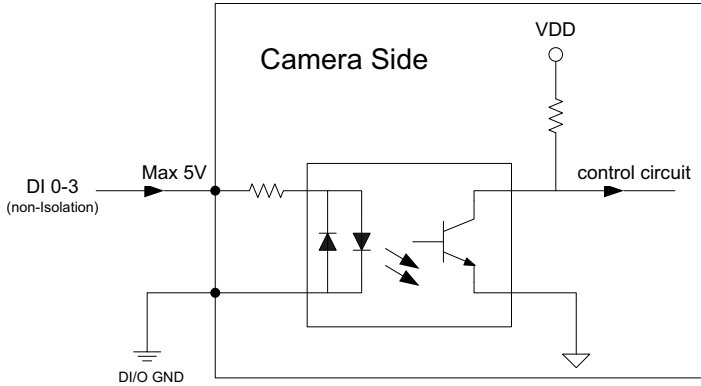


**Figure 3-2: Digital Input Schematic Diagram**

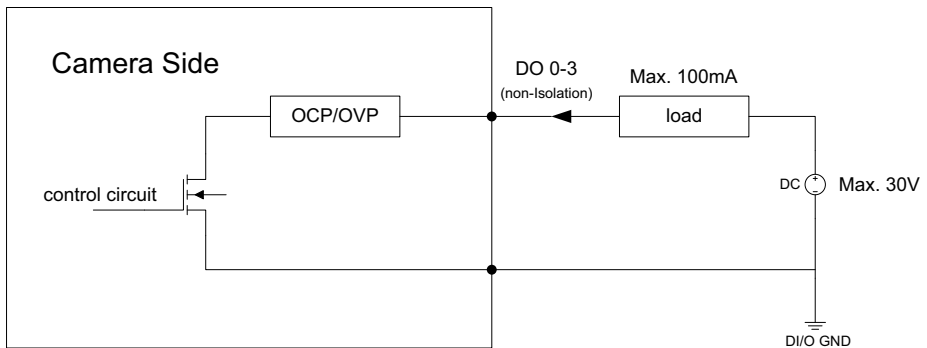

**Figure 3-3: Digital Output Schematic Diagram**

### 3.3 Attaching a Lens

The NEON-2000-ONO is compatible with C-mount type lenses.

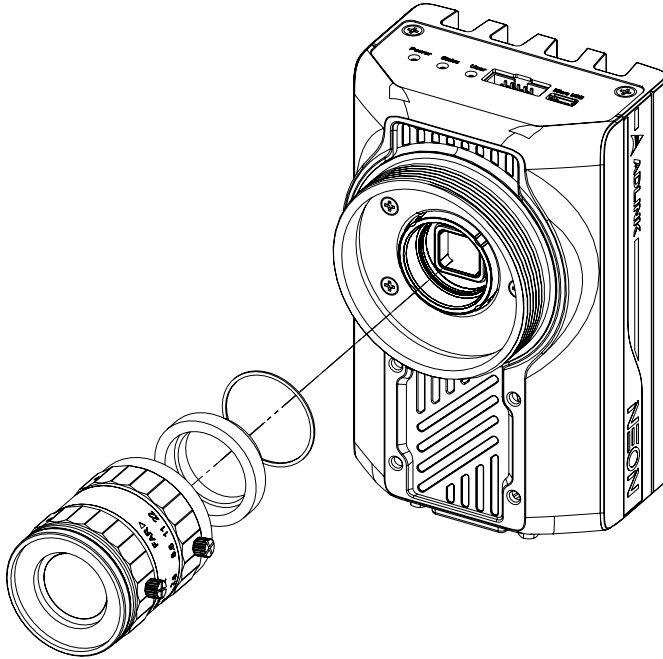

**Figure 3-4: Lens Attachment Assembly**




NOTE:

The transfer ring is installed before shipping. The washer is used only with the NEON-202B-JNX.

## 3.4 Power and Peripheral Connections


The NEON-2000-ONO DC power source can be either from a USB Type-C adaptor or DC jack. The USB Type-C connector also supports a DisplayPort video signal and USB3, which can be used to connect a keyboard and mouse. The following figures show examples of possible power and peripheral connection configurations.

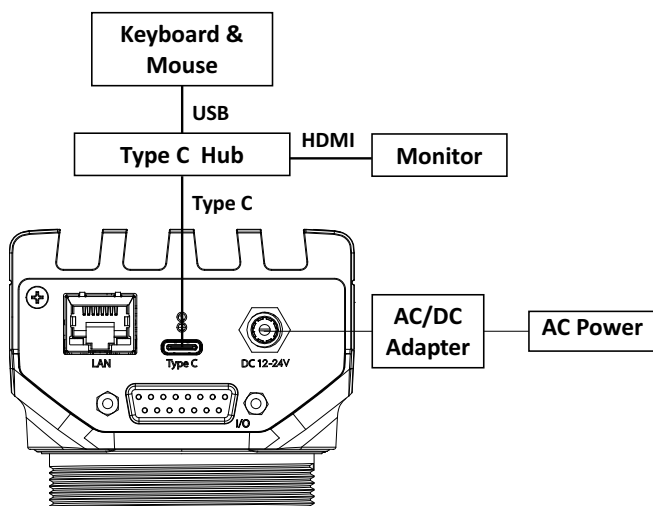

NOTE:

This configuration requires an ADLINK AC/DC power adapter (P/N 31-62156-1000-A0). Ensure that the power adapter cord of the device connects to a socket outlet with a ground/earth connection.

**Figure 3-5: Separate Power and Peripheral Connections**

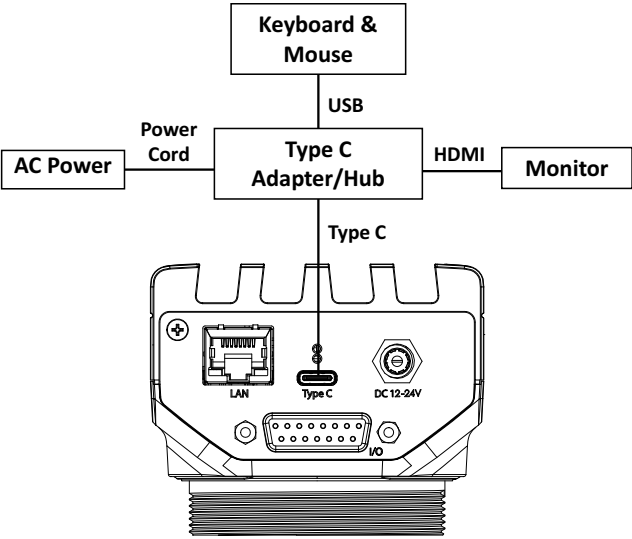

NOTE:

This configuration requires an ADLINK USB Type-C hub/adapter (P/N 92-99090-1010).

**Figure 3-6: Combined Power and Peripheral Connections**


## 3.5 Login

Log in to the NEON-2000-ONO with the following credentials:

- ▶ Default account: adlink
- ▶ Default password: adlink

### 3.6 Image Capture and Inference

ADLINK provides sample files for testing the NEON-2000-ONO image capturing functions. The files are located in the **Samples** folder on the Desktop.

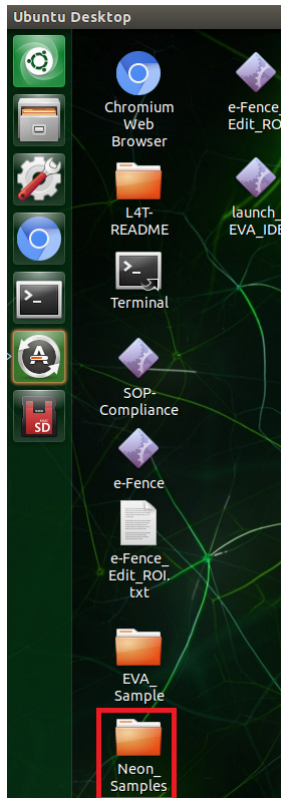

To get the latest sample code, go to <https://github.com/AIoT-IST/Samples>

## 3.7 Neon-20XA Trigger Control

### 3.7.1 Trigger API Function

You can adjust image features or control a lens by using the v4l2-ctl command as follows:

```
v4l2-ctl --set-ctrl=<ctrl>=<val>
```

To list the all the options, enter:

```
v4l2-ctl --all
```

The following table list all the Trigger API Function options and their descriptions.

| <ctrl>          | <ctrl><br>description                         | <val><br>type                                                                                          | <val><br>description                                   |
|-----------------|-----------------------------------------------|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| trigger_mode    | enable/disable the trigger mode               | Menu<br>0: OFF<br>1: PULSED<br>2: AUTOMATIC SOFTWARE<br>3: AUTOMATIC EXTERNAL                          | min=0<br>max=3<br>default=0                            |
| trigger_gain    | set the gain at trigger mode                  | int                                                                                                    | min=10000<br>max=1280000<br>step=1000<br>default=10000 |
| trigger_wb_mode | choose the white balance mode at trigger mode | Menu<br>0: Manual Gain<br>1: Manual Color Temperature<br>2: Sunny<br>3: Shadow<br>4: Indoor<br>5: Lamp | min=0<br>max=5<br>default=1                            |

**Figure 3-7: Neon-20XA Trigger API Function Options**


| <ctrl>                    | <ctrl><br>description                                       | <val><br>type                   | <val><br>description                            |
|---------------------------|-------------------------------------------------------------|---------------------------------|-------------------------------------------------|
| trigger_wb_rgain          | set the r gain of white balance at trigger mode             | int                             | min=1<br>max=4095<br>step=1<br>default=1024     |
| trigger_wb_bgain          | set the b gain of white balance at trigger mode             | int                             | min=1<br>max=4095<br>step=1<br>default=1024     |
| trigger_wb_colortemp      | set the color temperature at trigger mode                   | int                             | min=2000<br>max=12000<br>step=1<br>default=5500 |
| trigger_start_stop        | start trigger/stop trigger                                  | button                          |                                                 |
| external_trigger_polarity | choose to trigger externally at falling edge or rising edge | Menu<br>0: Falling<br>1: Rising | min=0<br>max=1<br>default=1                     |

Figure 3-7: Neon-20XA Trigger API Function Options

### 3.7.2 Trigger API Example

**Step 1:** Open a terminal and enter the following command to start streaming.

```
gst-launch-1.0 v4l2src io-mode=4 device=/dev/
video0 do-timestamp=true ! 'video/x-raw,
width=1920, height=1080, framerate=60/1,
format=UYVY' ! xvimagesink sync=false&
```

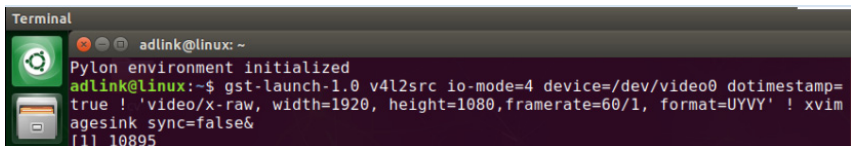

**Step 2:** To test the functionality of the **software trigger** of the pulsed trigger mode, enter:

```
v4l2-ctl --set-ctrl=trigger_mode=1  
v4l2-ctl --set-ctrl=low_latency_mode=1  
v4l2-ctl --set-ctrl=trigger_start_stop=1
```

**Step 3:** To test the functionality of the **hardware trigger** of the pulsed trigger mode, enter:

```
v4l2-ctl --set-ctrl=trigger_mode=1  
v4l2-ctl --set-ctrl=low_latency_mode=1
```

**Step 4:** To test the functionality of the **software trigger** of the automatic trigger mode, enter:

```
v4l2-ctl --set-ctrl=trigger_mode=2  
v4l2-ctl --set-ctrl=trigger_start_stop=1  
v4l2-ctl --set-ctrl=trigger_start_stop=1
```

In automatic trigger mode, the first **trigger\_start\_stop** command will trigger continuously while the second **trigger\_start\_stop** command will stop the trigger.

## Important Safety Instructions

For user safety, please read and follow all instructions, Warnings, Cautions, and Notes marked in this manual and on the associated device before handling/operating the device, to avoid injury or damage.

- ▶ Read these safety instructions carefully
- ▶ Keep the User's Manual for future reference
- ▶ Read the Specifications section of this manual for detailed information on the recommended operating environment
- ▶ Operating temperature: 35°C with USB Type C Adaptor/Hub or 40°C with the adapter supply.
- ▶ When installing/mounting or uninstalling/removing device; or when removal of a chassis cover is required for user servicing:
  - ▷ Turn off power and unplug any power cords/cables
  - ▷ Reinstall all chassis covers before restoring power
- ▶ To avoid electrical shock and/or damage to device:
  - ▷ Keep device away from water or liquid sources
  - ▷ Keep device away from high heat or humidity
  - ▷ Keep device properly ventilated (do not block or cover-ventilation openings)
  - ▷ Always use recommended voltage and power source settings
  - ▷ Always install and operate device near an easily accessible electrical outlet
  - ▷ Secure the power cord (do not place any object on/over the power cord)
  - ▷ Only install/attach and operate device on stable surfaces and/or recommended mountings
- ▶ If the device will not be used for long periods of time, turn off and unplug from its power source
- ▶ Never attempt to repair the device, which should only be serviced by qualified technical personnel using suitable tools

- ▶ A Lithium-type battery may be provided for uninterrupted backup or emergency power.



Risk of explosion if battery is replaced with one of an incorrect type; please dispose of used batteries appropriately.

- ▶ The device must be serviced by authorized technicians when:
  - ▷ The power cord or plug is damaged
  - ▷ Liquid has entered the device interior
  - ▷ The device has been exposed to high humidity and/or moisture
  - ▷ The device is not functioning or does not function according to the User's Manual
  - ▷ The device has been dropped and/or damaged and/or shows obvious signs of breakage
- ▶ Disconnect the power supply cord before loosening the thumbscrews and always fasten the thumbscrews with a screwdriver before starting the system up
- ▶ Ensure that the power adapter cord of the device connects to a socket outlet with a ground/earth connection.
- ▶ It is recommended that the device be installed only in a server room or computer room where access is:
  - ▷ Restricted to qualified service personnel or users familiar with restrictions applied to the location, reasons therefor, and any precautions required
  - ▷ Only afforded by the use of a tool or lock and key, or other means of security, and controlled by the authority responsible for the location



**BURN HAZARD**

Touching this surface could result in bodily injury. To reduce risk, allow the surface to cool before touching.

## Consignes de Sécurité Importante

*S'il vous plaît prêter attention stricte à tous les avertissements et mises en garde figurant sur l'appareil, pour éviter des blessures ou des dommages.*

- ▶ *Lisez attentivement ces consignes de sécurité.*
- ▶ *Conservez le manuel de l'utilisateur pour pouvoir le consulter ultérieurement.*
- ▶ *Lisez la section Spécifications de ce manuel pour des informations détaillées sur l'environnement d'exploitation recommandé.*
- ▶ *Température de fonctionnement: 35 ° C avec adaptateur / concentrateur USB Type C ou 40 ° C avec l'adaptateur.*
- ▶ *Lors de l'installation / du montage ou de la désinstallation / suppression du périphérique; ou lorsque le retrait d'un capot de châssis est requis pour l'entretien par l'utilisateur:*
  - ▷ *Coupez l'alimentation et débranchez tous les cordons / câbles d'alimentation*
  - ▷ *Réinstallez tous les couvercles de châssis avant de rétablir l'alimentation*
- ▶ *Pour éviter les chocs électriques et / ou les dommages à l'appareil:*
  - ▷ *Gardez l'appareil éloigné de l'eau ou des sources de liquide*
  - ▷ *Gardez l'appareil loin de la chaleur ou de l'humidité élevée*
  - ▷ *Gardez l'appareil correctement ventilé (ne bloquez pas et ne couvrez pas les ouvertures de ventilation)*
  - ▷ *Utilisez toujours les paramètres de tension et de source d'alimentation recommandés*
  - ▷ *Installez et utilisez toujours l'appareil à proximité d'une prise électrique facilement accessible*
  - ▷ *Fixez le cordon d'alimentation (ne placez aucun objet sur / par-dessus le cordon d'alimentation)*
  - ▷ *Installez / fixez et utilisez l'appareil uniquement sur des surfaces stables et / ou des supports recommandés*
- ▶ *Si l'appareil n'est pas utilisé pendant de longues périodes, éteignez-le et débranchez-le de sa source d'alimentation*
- ▶ *N'essayez jamais de réparer l'appareil, qui ne doit être entre-*

*tenu que par du personnel technique qualifié à l'aide d'outils appropriés.*

- ▶ *Une batterie de type lithium peut être fournie pour une alimentation de secours ou une alimentation de secours ininterrompue.*



*Risque d'explosion si la pile est remplacée par une autre de type incorrect. Veuillez jeter les piles usagées de façon appropriée.*

- ▶ *L'appareil doit être réparé par des techniciens autorisés lorsque:*
  - ▷ *Le cordon d'alimentation ou la fiche est endommagé*
  - ▷ *Du liquide a pénétré à l'intérieur de l'appareil*
  - ▷ *L'appareil a été exposé à une humidité élevée et / ou à l'humidité*
  - ▷ *L'appareil ne fonctionne pas ou ne fonctionne pas selon le manuel de l'utilisateur*
  - ▷ *L'appareil est tombé et / ou endommagé et / ou montre des signes évidents de casse*
- ▶ *Débranchez le cordon d'alimentation avant de desserrer les vis moletées et fixez toujours les vis moletées avec un tournevis avant de démarrer le système*
- ▶ *Assurez-vous que le cordon de l'adaptateur secteur de l'appareil est connecté à une prise de courant avec une connexion terre / terre.*
- ▶ *Il est recommandé d'installer l'appareil uniquement dans une salle de serveurs ou une salle informatique où l'accès est:*
  - ▷ *Réservé au personnel de service qualifié ou aux utilisateurs familiers avec les restrictions appliquées à l'emplacement, les raisons de celles-ci et les précautions nécessaires*
  - ▷ *Seulement permis par l'utilisation d'un outil ou d'une serrure et d'une clé, ou d'autres moyens de sécurité, et contrôlé par l'autorité responsable de l'emplacement*

|                                                                                     |                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p style="text-align: center;"><b>RISQUE DE BRÛLURES</b></p> <p><i>Ne touchez pas cette surface, cela pourrait entraîner des blessures.<br/>Pour éviter tout danger, laissez la surface refroidir avant de la toucher.</i></p> |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

# Getting Service

**Ask an Expert:** <https://www.adlinktech.com/en/Askexpert>

**ADLINK Technology, Inc.**

No.66 Huaya 1st Road, Guishan District  
Taoyuan City 333, Taiwan  
Tel: +886-3-216-5088  
Fax: +886-3-328-5706  
Email: [service@adlinktech.com](mailto:service@adlinktech.com)

**Ampro ADLINK Technology, Inc.**

5215 Hellyer Avenue, #110  
San Jose, CA 95138, USA  
Tel: +1-408-360-0200  
Toll Free: +1-800-966-5200 (USA only)  
Fax: +1-408-360-0222  
Email: [info@adlinktech.com](mailto:info@adlinktech.com)

**ADLINK Technology (China) Co., Ltd.**

300 Fang Chun Rd., Zhangjiang Hi-Tech Park  
Pudong New Area, Shanghai, 201203 China  
Tel: +86-21-5132-8988  
Fax: +86-21-5132-3588  
Email: [market@adlinktech.com](mailto:market@adlinktech.com)

**ADLINK Technology GmbH**

Hans-Thoma-Strasse 11  
D-68163 Mannheim, Germany  
Tel: +49-621-43214-0  
Fax: +49-621 43214-30  
Email: [emea@adlinktech.com](mailto:emea@adlinktech.com)

Please visit the Contact page at [www.adlinktech.com](http://www.adlinktech.com) for information on how to contact the ADLINK regional office nearest you.