



ADLINK
TECHNOLOGY INC.

PMC-8631
NuIPC / NuDAQ
Ultra320 SCSI Interface
PMC Module
User's Manual

Manual Rev. 2.01
Revision Date: December 21, 2006
Part No: 50-13041-100



Recycled Paper

Advance Technologies; Automate the World.



Copyright 2005 ADLINK TECHNOLOGY INC.

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Getting Service from ADLINK

Customer Satisfaction is top priority for ADLINK Technology Inc.
Please contact us should you require any service or assistance.

ADLINK TECHNOLOGY INC.

Web Site: <http://www.adlinktech.com>
 Sales & Service: Service@adlinktech.com
 TEL: +886-2-82265877
 FAX: +886-2-82265717
 Address: 9F, No. 166, Jian Yi Road, Chungho City,
 Taipei, 235 Taiwan

Please email or FAX this completed service form for prompt and satisfactory service.

Company Information	
Company/Organization	
Contact Person	
E-mail Address	
Address	
Country	
TEL	FAX:
Web Site	
Product Information	
Product Model	
Environment	OS: M/B: CPU: Chipset: Bios:

Please give a detailed description of the problem(s):

Table of Contents

Table of Contents	i
List of Tables	ii
List of Figures	iii
1 Introduction	1
1.1 Features and Specifications	1
2 Getting Started	3
2.1 Unpacking Checklist	3
2.2 Unpacking Procedure	4
2.3 PCB Layout.....	5
2.4 Functional Block Diagram.....	6
2.5 Connectors and Pinouts	7
3 Installation	13
3.1 PMC Board Installation	13
3.2 Device Driver Installation	14
Warranty Policy	15

List of Tables

Table 2-1: PN1 Pin Assignment	7
Table 2-2: PN2 Pin Assignment	8
Table 2-3: PN3 Pin Assignment	9
Table 2-4: PN4 Pin Assignment	10
Table 2-5: Rear SCSI Jumper Setting	11

List of Figures

Figure 2-1: PMC-8631 Layout.....	5
Figure 2-2: PMC-8631 Functional Layout	6
Figure 3-1: PMC Module Installation.....	13

1 Introduction

The PMC-8631 single-channel Ultra320 SCSI PMC card offers data transfer rates up to 320MB/s and achieves maximum transfer rates on a Wide SCSI bus (16-bit) with both Single-Ended (SE) and Low Voltage Differential (LVD) devices. The PMC-8631 is PCI Local Bus Specification, Revision 2.3; SCSI Parallel Interface-4 (SP1-4), Revision 10; and SCSI-3 standard compliant in addition to supporting multimode.

1.1 Features and Specifications

PCI Interface Features

- ▶ Supports 66-MHz, 64-bit interface down to PCI-33MHz, 32-bit interface
- ▶ Performance-enhanced 32-bit operating mode allows 32-bit data transactions with 32- and 64-bit addressing (SAC/DAC)
- ▶ Supports 3.3V power supply, 5V tolerance

SCSI Features

- ▶ SCSI data transfers up to 320 MB/sec
- ▶ 8- or 16-bit SCSI data path
- ▶ SCSI data offsets to 254 transfers
- ▶ Supports rear SCSI by JP1 jumper setting
- ▶ Advanced multimode I/O cell is compatible with LVD or SE devices
- ▶ Extensive hardware support for disconnect/reconnect and scatter/gather
- ▶ Full support for initiator operation
- ▶ Full support for domain validation, which provides two levels (basic and enhanced) of SCSI bus configuration testing to help ensure Ultra320 and Ultra160 SCSI topologies operate at optimum speed
- ▶ Multiple target ID enables responses to multiple IDs as a SCSI target
- ▶ Full support for Cyclic Redundancy Check (CRC) for 16-bit SCSI synchronous data transfers. CRC detects data integ-

rity errors that would not be detected by simple parity checking used by previous SCSI generations. The higher data rates achieved on existing LVD cable configurations mandated this improved data integrity feature.

- ▶ Supports Quick Arbitration and Selection (QAS) and SCSI arbitration fairness. QAS reduces overhead when bus control is transferred between devices. Arbitration fairness prevents devices from hogging the bus by guaranteeing each device a chance to win arbitration.
- ▶ Supports Seamless Streaming technology, which allows full implementation of SCSI packet protocol for sending multiple commands, receiving multiple statuses, and transferring data for multiple commands during one SCSI connection. There is virtually no delay between packets for different commands.

SCSI Device Support:

- ▶ Using LVD devices, each channel supports up to 15 devices on a 12-meter cable. In a point-to-point arrangement, cabling can extend to 25 meters.
- ▶ Support for a combination of 16-bit Ultra320, Ultra160 (Ultra3), Ultra2, Ultra, and standard SCSI devices including disk drives, disk arrays, tape drives, CDROM and CD-R drives, jukeboxes, removable drives, scanners, and printers.

2 Getting Started

This chapter describes how to prepare the PMC-8631 for installation. Please carefully review the unpacking information before removing the product. The optional settings are also specified below.

2.1 Unpacking Checklist

Check the shipping carton for any damage. If the shipping carton and contents are damaged, notify the dealer for a replacement. Retain the shipping carton and packing materials for inspection by the dealer. Obtain authorization before returning any product to ADLINK.

Check the following items are included in the package, if there are any items missing, please contact your dealer:

Included Items

- ▶ PMC-8631 Ultra320 SCSI Interface PMC Module
- ▶ Ultra320 SCSI cable
- ▶ This User's Manual

Note: The packaging of OEM versions with non-standard configuration, functionality, or package may vary according to different configuration requests.

CAUTION: The boards must be protected from static discharge and physical shock. Never remove any of the socketed parts except at a static-free workstation. Use the anti-static bag shipped with the product to handle the board. Wear a grounded wrist strap when servicing



2.2 Unpacking Procedure

The PMC-8631 card contains sensitive electronic components that can be easily damaged by static electricity.

Prepare a grounded anti-static mat. The operator should be wearing an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the card module carton for obvious damage. Shipping and handling may cause damage to the module. Be sure there is no obvious damage due to shipping and handling by examining the shipping box.

After opening the card module carton, extract the system module and place it only on a grounded anti-static surface, component side up.

Note: DO NOT APPLY POWER TO THE CARD IF IT HAS BEEN DAMAGED.

2.3 PCB Layout

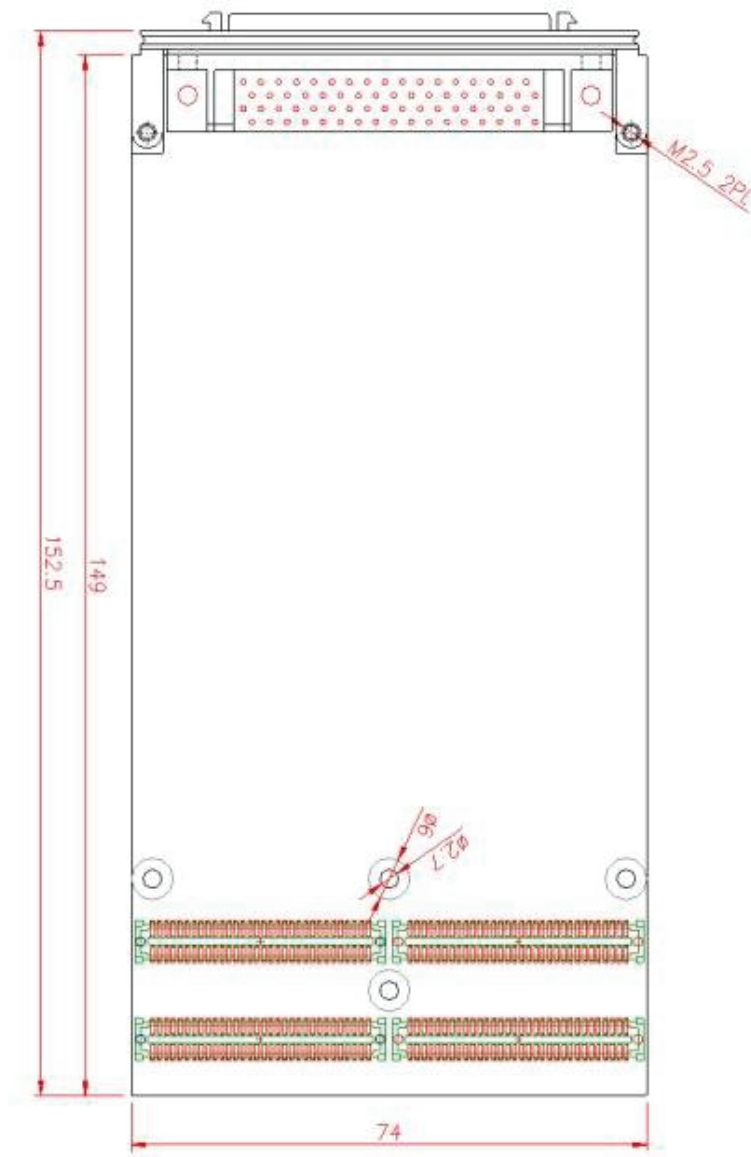


Figure 2-1: PMC-8631 Layout

2.4 Functional Block Diagram

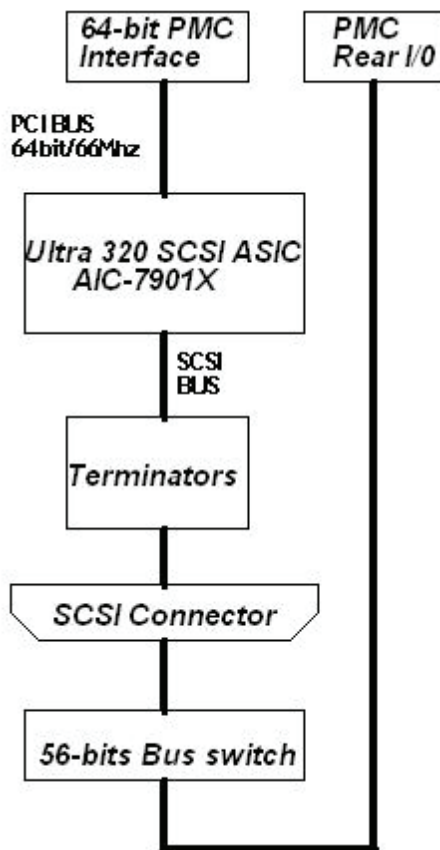


Figure 2-2: PMC-8631 Functional Layout

2.5 Connectors and Pinouts

PMC CONNECTOR: PN1

SIGNAL	PIN	PIN	SIGNAL
RESERVED	1	2	RESERVED
GND	3	4	INTA#
RESERVED	5	6	RESERVED
RESERVED	7	8	5V
RESERVED	9	10	RESERVED
GND	11	12	RESERVED
SCSI_PCICLK	13	14	GND
GND	15	16	GNT#
REQ#	17	18	5V
VIO	19	20	AD[31]
AD[28]	21	22	AD[27]
AD[25]	23	24	GND
GND	25	26	CBE[3]#
AD[22]	27	28	AD[21]
AD[19]	29	30	5V
VIO	31	32	AD[17]
FRAME#	33	34	GND
GND	35	36	IRDY#
DEVSEL#	37	38	5V
RESERVED	39	40	RESERVED
RESERVED	41	42	RESERVED
PAR	43	44	GND
VIO	45	46	AD[15]
AD[12]	47	48	AD[11]
AD[9]	49	50	5V
GND	51	52	CBE[0]#
AD[6]	53	54	AD[5]
AD[4]	55	56	GND
VIO	57	58	AD[3]
AD[2]	59	60	AD[1]
AD[0]	61	62	5V
GND	63	64	REQ64#

Table 2-1: PN1 Pin Assignment

PMC CONNECTOR: PN2

SIGNAL	PIN	PIN	SIGNAL
RESERVED	1	2	RESERVED
RESERVED	3	4	RESERVED
RESERVED	5	6	GND
GND	7	8	RESERVED
RESERVED	9	10	RESERVED
RESERVED	11	12	3.3V
PCIRST#	13	14	RESERVED
3.3V	15	16	RESERVED
RESERVED	17	18	GND
AD[30]	19	20	AD[29]
GND	21	22	AD[26]
AD[24]	23	24	3.3V
IDSEL	25	26	AD[23]
3.3V	27	28	AD[20]
AD[18]	29	30	GND
AD[16]	31	32	CBE[2]#
GND	33	34	RESERVED
TRDY#	35	36	3.3V
GND	37	38	STOP#
PERR#	39	40	GND
3.3V	41	42	SERR#
CBE[1]#	43	44	GND
AD[14]	45	46	AD[13]
RESERVED	47	48	AD[10]
AD[8]	49	50	3.3V
AD[7]	51	52	RESERVED
3.3V	53	54	RESERVED
RESERVED	55	56	GND
RESERVED	57	58	RESERVED
GND	59	60	RESERVED
ACK64#	61	62	3.3V
GND	63	64	RESERVED

Table 2-2: PN2 Pin Assignment

PMC CONNECTOR: PN3

SIGNAL	PIN	PIN	SIGNAL
RESERVED	1	2	GND
GND	3	4	CBE7#
CEB6#	5	6	CBE5#
CEB4#	7	8	GND
VIO	9	10	PAR64
AD63	11	12	AD62
AD61	13	14	GND
GND	15	16	AD60
AD59	17	18	AD58
AD57	19	20	GND
VIO	21	22	AD56
AD55	23	24	AD54
AD53	25	26	GND
GND	27	28	AD52
AD51	29	30	AD50
AD49	31	32	GND
GND	33	34	AD48
AD47	35	36	AD46
AD45	37	38	GND
VIO	39	40	AD44
AD43	41	42	AD42
AD41	43	44	GND
GND	45	46	AD40
AD39	47	48	AD38
AD37	49	50	GND
GND	51	52	AD36
AD35	53	54	AD34
AD33	55	56	GND
VIO	57	58	AD32
RESERVED	59	60	RESERVED
RESERVED	61	62	GND
GND	63	64	RESERVED

Table 2-3: PN3 Pin Assignment

PMC CONNECTOR: PN4

SIGNAL	PIN	PIN	SIGNAL
RSD0+	1	2	RSD0-
RSD1+	3	4	RSD1-
RSD2+	5	6	RSD3+
RSD3-	7	8	RSD4+
RSD4-	9	10	RSD2-
RSD5+	11	12	RSD5-
RSD6+	13	14	RSD6-
RSD7+	15	16	RSD8+
RSD8-	17	18	RSD9+
RSD9-	19	20	RSD7-
RSD10+	21	22	RSD10-
RSD11+	23	24	RSD11-
RSD12+	25	26	RSD13+
RSD13-	27	28	RSD14+
RSD14-	29	30	RSD12-
RSD15+	31	32	RSD15-
RSDP0+	33	34	RSDP0-
RSDP1+	35	36	RSBSY+
RSBSY-	37	38	RSACK+
RSACK-	39	40	RSDP1-
RSRST+	41	42	RSRST-
RSMSG+	43	44	RSMSG-
RSSEL+	45	46	RSCD+
RSCD-	47	48	RSREQ+
RSREQ-	49	50	RSSEL-
RSIO+	51	52	RSIO-
RESERVED	53	54	RESERVED
RESERVED	55	56	RSATN+
RESERVED	57	58	RSATN-
RESERVED	59	60	RESERVED
RESERVED	61	62	RDIFFSEN
RESERVED	63	64	RTERMEN

Table 2-4: PN4 Pin Assignment

REAR SCSI JUMPER SETTING

JP1	2-3 Short	1-2 Short
REAR SCSI	OFF	ON

Table 2-5: Rear SCSI Jumper Setting

3 Installation

3.1 PMC Board Installation

Insert the face of the PMC module into the front of the cPCI carrier board. Carefully align the PMC connector to the carrier board and firmly place it in the slot. Secure the module to the carrier board with the screws provided (see Figure 3.1 below).

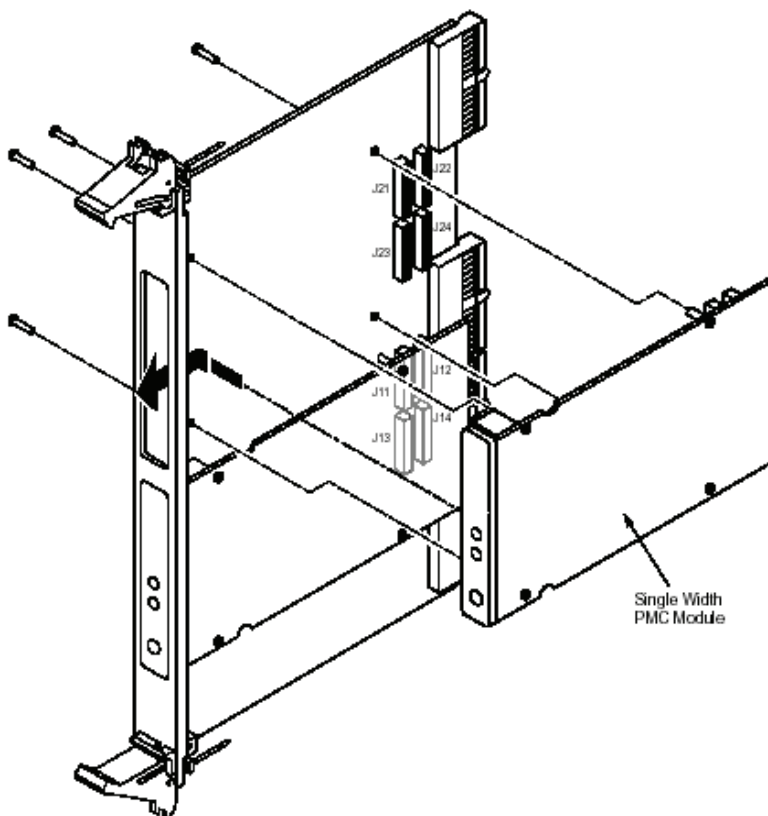


Figure 3-1: PMC Module Installation

Note: Ensure that the PMC module(s) are properly installed before connecting the cPCI carrier board to the system.

3.2 Device Driver Installation

This section describes the installation procedure for the Adaptec AIC-7901X chipset device driver under Linux Redhat and Windows 2000, XP, and Server 2003.

The drivers are provided on the ADLINK All-in-One CD. Start your system and place the disk into the CD-ROM drive. The drivers are located in the X:\PMC\PMC-8631\ folder (where X:\ is the drive letter assigned to the CD-ROM drive). The operating system will detect new hardware and the Found New Hardware Wizard will appear. Navigate to the appropriate folder on the CD for your operating system and install the driver.

Fedora Core 1 and Core 2 are not officially supported for the PMC-8631. We have provided the Linux driver source code on the ADLINK All-in-One CD so customers can integrate it into their Fedora operating system.

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: <http://rma.adlinktech.com/policy/>.
2. All ADLINK products come with a limited two-year warranty, one year for products bought in China:
 - ▶ The warranty period starts on the day the product is shipped from ADLINK's factory.
 - ▶ Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
 - ▶ For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for any loss of data.
 - ▶ Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
 - ▶ For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.

3. Our repair service is not covered by ADLINK's guarantee in the following situations:
 - ▶ Damage caused by not following instructions in the User's Manual.
 - ▶ Damage caused by carelessness on the user's part during product transportation.
 - ▶ Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
 - ▶ Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals).
 - ▶ Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
 - ▶ Damage from improper repair by unauthorized ADLINK technicians.
 - ▶ Products with altered and/or damaged serial numbers are not entitled to our service.
 - ▶ This warranty is not transferable or extendible.
 - ▶ Other categories not protected under our warranty.
4. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: <http://rma.adlinktech.com/policy>. Damaged products with attached RMA forms receive priority.

If you have any further questions, please email our FAE staff: service@adlinktech.com.