



ADLINK
TECHNOLOGY INC.

TM-150/170

Industrial Touchscreen Monitor

User's Manual



Manual Rev.: 0.10 Preliminary

Revision Date: April 30, 2014

Part No: 50-1Z164-1000

Advance Technologies; Automate the World.

Revision History

Revision	Release Date	Description of Change(s)
0.10	30/04/2014	Preliminary release

Preface

Copyright 2014 ADLINK Technology Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Using this Manual

Audience and Scope

The TM-150/170 User's Manual is intended for hardware technicians and systems operators with knowledge of installing, configuring and operating industrial grade computers.

Manual Organization

This manual is organized as follows:

Preface: Presents copyright notifications, disclaimers, trademarks, and associated information on the proper usage of this document and its associated product(s).

Chapter 1, Introduction: Introduces the TM-150/170, its features, available models and package contents.

Chapter 2, Specifications: Provides device specifications, mechanical layout and connector pin definitions.

Chapter 3, Installation: Describes how to install the device.

Chapter 4, Touchscreen Controller: Describes how to install the driver for the touch controller.

Chapter 5, On-Screen Display Buttons: Describes how to use the On-Screen-Display (OSD) Controls.

Important Safety Instructions: Presents safety instructions all users must follow for the proper setup, installation and usage of equipment and/or software.

Getting Service: Contact information for ADLINK's worldwide offices.

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

This page intentionally left blank.

Table of Contents

Revision History..... ii

Preface iii

List of Figures ix

List of Tables..... xi

1 Introduction 1

1.1 Overview..... 1

1.2 Features..... 1

1.3 Model List 1

1.4 Package Contents 2

1.5 Optional Accessories 2

1.6 Mechanical Dimensions..... 3

2 Specifications..... 5

2.1 LCD Panel Specifications 5

2.2 Signal Specifications..... 6

2.3 Connector Layout 7

2.4 Pin Definitions..... 8

3 Installation 11

3.1 Panel Mounting..... 11

3.2 VESA Mounting 14

4 Touchscreen Controller..... 15

4.1 Resistive Touchscreen Controller..... 15

4.2 Projective Capacitive Touchscreen Controller..... 19

5 On-Screen Display Buttons..... 25

5.1 OSD Control Buttons 25

5.2	OSD Control Function List	26
5.3	Color Adjustment	28
5.4	Image Settings	29
5.5	OSD Settings Menu	30
5.6	Signal Source.....	31
Important Safety Instructions.....		33
Getting Service		35

List of Figures

Figure 1-1: TM-150 Board Dimensions 3

Figure 1-2: TM-170 Board Dimensions 4

Figure 2-1: TM-150/170 Rear I/O Layout 7

Figure 3-1: TM-150 Panel Mount Cut-out 11

Figure 3-2: TM-170 Panel Mount Cut-out 12

Figure 3-3: Panel Mount Bracket Installation 13

Figure 3-4: VESA Mount Installation 14

Figure 5-1: OSD Control Buttons 25

Figure 5-2: OSD Main Menu 26

Figure 5-3: Color Adjustment Menu 28

Figure 5-4: Image Setting Menu..... 29

Figure 5-5: OSD Settings Menu 30

Figure 5-6: OSD Language Menu 30

Figure 5-7: Signal Source Menu 31

This page intentionally left blank.

List of Tables

Table 2-1: LCD Panel Specifications 5

Table 2-2: TM Series Timing Table..... 6

Table 5-1: OSD Control Buttons List..... 25

Table 5-2: OSD Menu Structure 27

This page intentionally left blank.

1 Introduction

1.1 Overview

The TM Series of industrial touchscreen monitors is designed for industrial automation and other applications requiring an IP65 compliant touchscreen monitor with analog or digital interfaces.

1.2 Features

- ▶ Color active-matrix LCD display
- ▶ 15" XGA 1024x768, 17" SXGA 1280x1024
- ▶ VGA, DVI and HDMI video inputs
- ▶ Built-in 5-wire resistive touch sensor (optional projective capacitive sensor)
- ▶ Supports panel and wall mounting (VESA 75/100 mm)
- ▶ IP65 compliant front panel
- ▶ Wide range 12~24 VDC power input

1.3 Model List

- ▶ TM-150: 15" Touchscreen Monitor
- ▶ TM-170: 17" Touchscreen Monitor

Model Name	LCD Size	Touchscreen Type	12~24VDC Power Input
TM-150-R	15"	Resistive sensor	—
TM-150-P	15"	Projective capacitive sensor	—
TM-150-RW	15"	Resistive sensor	✓
TM-150-PW	15"	Projective capacitive sensor	✓
TM-170-R	17"	Resistive sensor	—
TM-170-P	17"	Projective capacitive sensor	—
TM-170-RW	17"	Resistive sensor	✓
TM-170-PW	17"	Projective capacitive sensor	✓

1.4 Package Contents

Please check that your package contains the items below. If you discover damaged or missing items, please contact your vendor.

- ▶ TM-150/170 Series Monitor
- ▶ 60W power adapter x1
- ▶ AC power cable x1
- ▶ VGA cable x1
- ▶ Touchscreen USB cable x1
- ▶ User manual x1
- ▶ Driver CD x1




DO NOT install or apply power to equipment that is damaged or if there is missing/incomplete equipment. Retain the shipping carton and packing materials for inspection. Please contact your ADLINK dealer/vendor immediately for assistance. Obtain authorization from your dealer before returning any product to ADLINK.

1.5 Optional Accessories


- ▶ TM-PM1 panel mount kit
- ▶ TM-WM1 VESA mount kit

1.6 Mechanical Dimensions

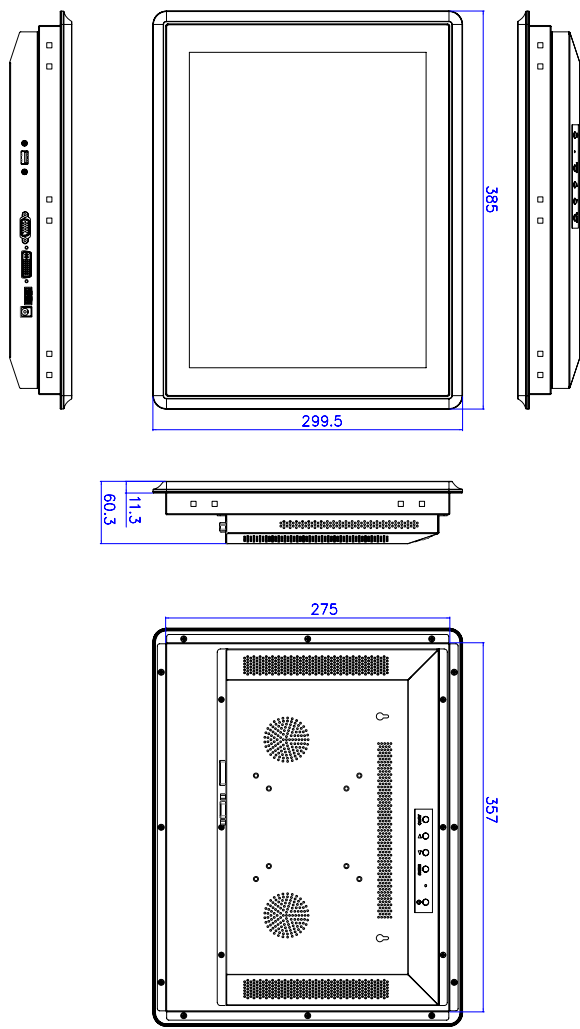

Dimensions in mm

Figure 1-1: TM-150 Board Dimensions

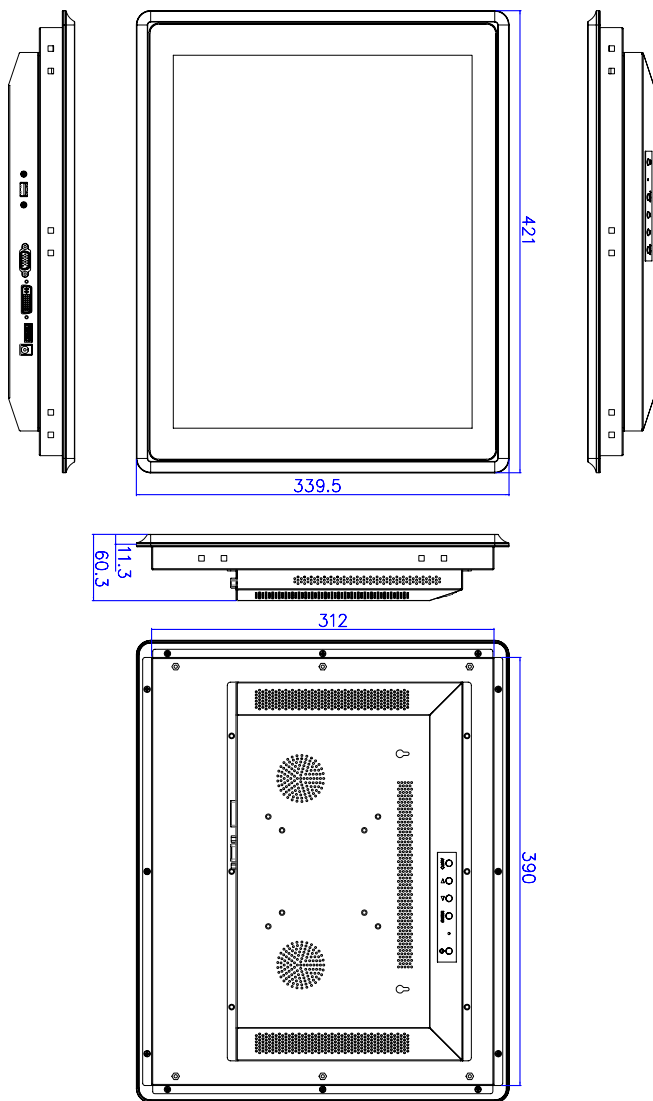

Dimensions in mm

Figure 1-2: TM-170 Board Dimensions

2 Specifications

2.1 LCD Panel Specifications

Model	TM-150	TM-170
Display		
Display Size	15"	17"
Resolution	1024x768	1280x1024
Brightness	250 nits (w/o touchscreen)	250 nits (w/o touchscreen)
Contrast Ratio	700:1	1000:1
View Angle (H/V)	170°/160°	170°/160°
Touchscreen Type	5-wire resistive touch sensor (R models) Projective capacitive sensor (P models)	
System Components		
Input Signals	VGA, DVI and HDMI	
Control Buttons	Power, Auto/Source, Menu/Enter, Up, Down	
Mechanical		
Construction	Die-cast aluminum front bezel and steel chassis	
Weight	4.0 kg	4.5 kg
Dimensions (HxWxD)	385 x 299.5 x 60 mm	421 x 339.5 x 60 mm
Mounting Options	VESA mount, MIS-D 75/100 panel mount	
Environmental		
Temperature	Operating: 0°C to 50°C Storage: -20°C to 60°C	
Relative Humidity	10% to 90% @ 40°C (non-condensing)	
Vibration	1G random, 5~500Hz, operating	
Shock	10G acceleration, 11ms, operating	
Ingress Rating	IP65 front panel	
Certifications	CE, FCC	
Power		
Input Voltage	12V DC Power input 12~24V DC Power input (W Model)	
Power Consumption	max. 30W, standby < 4W	max. 30W, standby < 4W

Table 2-1: LCD Panel Specifications

2.2 Signal Specifications

- ▶ Supports vertical refresh rate up to 75Hz for VGA~SXGA+ (1400x1050) and 60Hz for higher resolutions of VESA Standard Timing
- ▶ Supports Video Graphics Array (VGA) analog standard input signal
- ▶ Automatic detection of separate synchronize and composite synchronize of VGA
- ▶ Supports Digital Visual Interface (DVI) signal input
- ▶ Supports High-Definition Multimedia Interface (HDMI) input

Mode	Resolution	H Freq.(kHz)	V Freq.(Hz)
1	640x350@70	31.469	70.087
2	640x480@60	31.469	59.940
3	640x480@72	37.861	72.809
4	640x480@75	37.500	75.000
5	720x400@70	31.469	70.087
6	800x600@56	35.156	56.250
7	800x600@60	37.879	60.317
8	800x600@72	48.077	72.188
9	800x600@75	46.875	75.00
10	1024x768@60	48.363	60.004
11	1024x768@70	56.476	70.069
12	1024x768@75	60.023	75.029
13	1280x1024@60	63.980	60.000
14	1280x1024@70	74.882	69.853
15	1280x1024@75	79.976	75.025
16	1440x900@60	59.9	75
17	1440x900@75	75.0	75
18	1680x1050@60	65.3	60
19	1920x1080@60	66.6	60

Table 2-2: TM Series Timing Table

2.3 Connector Layout

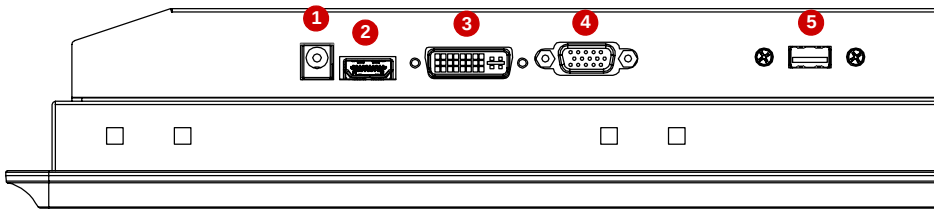



Figure 2-1: TM-150/170 Rear I/O Layout

1	DC power input connector
2	HDMI connector
3	DVI connector
4	VGA connector
5	Touchscreen USB connector


2.4 Pin Definitions

VGA Connector.

Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	VCC pull-up
GND	5	6	GND
GND	7	8	GND
VCC	9	10	GND
VCC pull-up	11	12	DDC2B DATA
HSYNC	13	14	VSYNC
DDC2B CLK	15		




DVI-D Connector

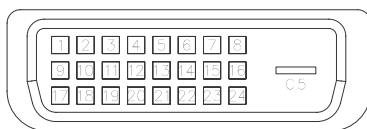

Pin #	Signal	Pin #	Signal
1	DVI_TDC2-N	16	DVI_HTPLG
2	DVI_TDC2-P	17	DVI_TDC0-N
3	GND	18	DVI_TDC0-P
4	NC	19	GND
5	NC	20	NC
6	DDCCLK_5V	21	NC
7	DDCDAT_5V	22	GND
8	NC	23	DVI_TLC-P
9	DVI_TDC1-N	24	DVI_TLC-N
10	DVI_TDC1-P	C1	NC
11	GND	C2	NC
12	NC	C3	NC
13	NC	C4	NC
14	P5V	C5	GND
15	GND		


HDMI Connector



Pin #	Signal	Pin #	Signal
1	TMDS Data2+	2	TMDS Data2 Shield
3	TMDS Data2–	4	TMDS Data1+
5	TMDS Data1 Shield	6	TMDS Data1–
7	TMDS Data0+	8	TMDS Data0 Shield
9	TMDS Data0–	10	TMDS Clock+
11	TMDS Clock Shield	12	TMDS Clock–
13	CEC	14	Reserved
15	SCL	16	SDA
17	DDC/CEC Ground	18	+5 V Power
19	Hot Plug Detect		


Touch Panel USB Connector

Pin #	Signal Name
1	Vcc
2	UV0-
3	UV0+
4	GND



DC Power Input Connector

- 12V DC power input (12~24V DC for “W” model)

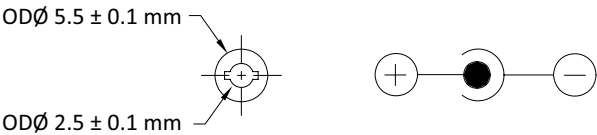

This page intentionally left blank.

3 Installation

The TM-150/170 can be panel mounted, or wall/tabletop mounted using a VESA 75/100 mm bracket.

3.1 Panel Mounting

A panel mount kit is available for the TM-150/170. Please contact your ADLINK representative (model no.: TM-PM1).

Make sure there is adequate space behind the panel for ventilation, and that the panel material and thickness can support the weight of the monitor.




NOTE:

The mounting brackets can accommodate a maximum panel thickness of 4mm.

1. Cut the panel opening by using the appropriate cutout dimensions shown in Figure 3-1 and Figure 3-2 below.


TM-150 Panel Cutout

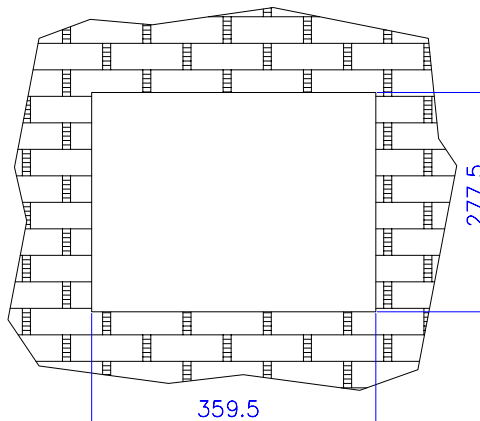

Dimensions in mm

Figure 3-1: TM-150 Panel Mount Cut-out

TM-170 Panel Cutout

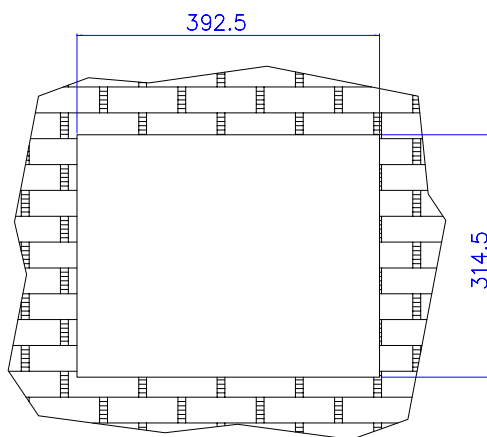

Dimensions in mm

Figure 3-2: TM-170 Panel Mount Cut-out

2. Attach cables to the monitor before installing into the panel if rear access to the monitor will be limited after installation (see “Connector Layout” on page 7.).
3. Place the monitor into the panel cutout.
4. Insert the mounting brackets into the slots on the sides of the monitor as shown in Figure 3-3 below.
5. Hand-tighten the mounting brackets to secure it to the panel. Do not overtighten the brackets to avoid damaging the monitor enclosure.



CAUTION:

Do not overtighten the brackets as this may damage the monitor enclosure. Always tighten the mounting brackets BY HAND to secure it to the panel.

Panel Mount Bracket Installation

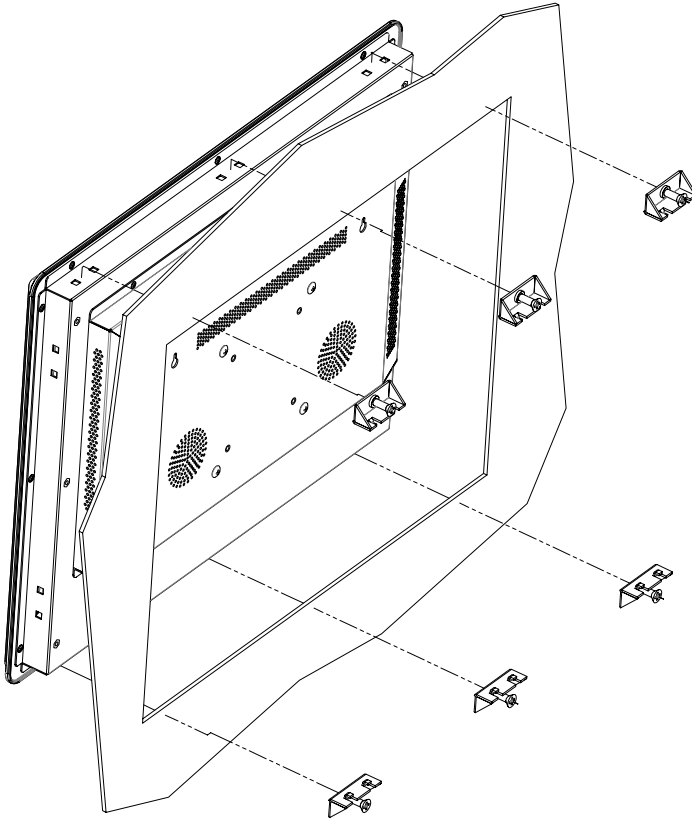


Figure 3-3: Panel Mount Bracket Installation

3.2 VESA Mounting

A VESA mount kit is available for the TM-150/170. Please contact your ADLINK representative (model no.: TM-WM1).

1. Place the monitor onto the VESA 75/100mm bracket. Insert the four screws supplied with the TM-WM1 VESA mount kit into the VESA mounting holes in the back of the monitor (see Figure 3-4 below, VESA 100mm mounting holes shown).
2. Tighten the screws to secure the monitor to the VESA mount bracket.

VESA Mount Installation

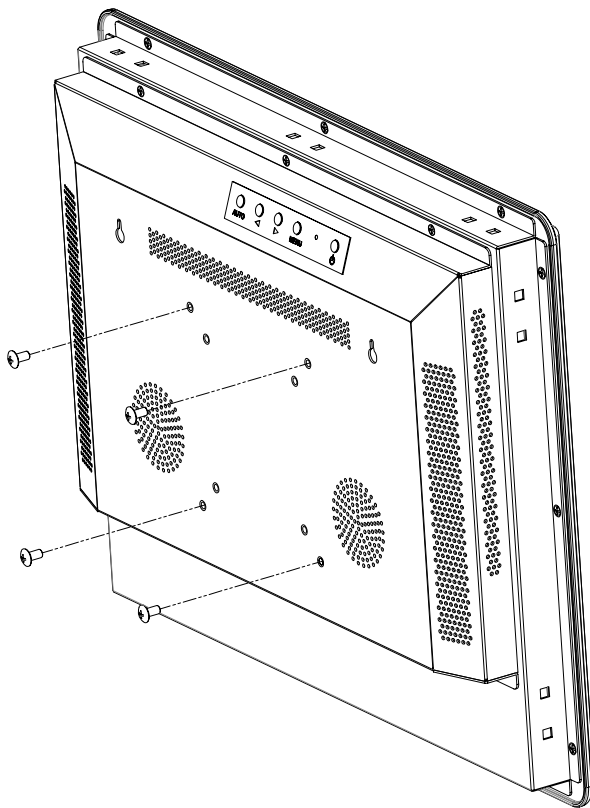


Figure 3-4: VESA Mount Installation


4 Touchscreen Controller

The TM-150/170 touchscreen controller drivers can be downloaded from the ADLINK website (<http://www.adlinktech.com>). Instructions for installing the Windows 7 drivers are given below.


4.1 Resistive Touchscreen Controller

Driver Installation


1. Use the USB cable included with the touchscreen monitor to connect the USB connector on the monitor to a USB port on your system (see “Connector Layout” on page 7.)
2. Install the resistive touchscreen controller driver by extracting the contents of the archive **PenMount Windows Universal Driver V2.4.1.320(WHQL).zip** and running the program “Setup.exe”. Click “Next to continue.

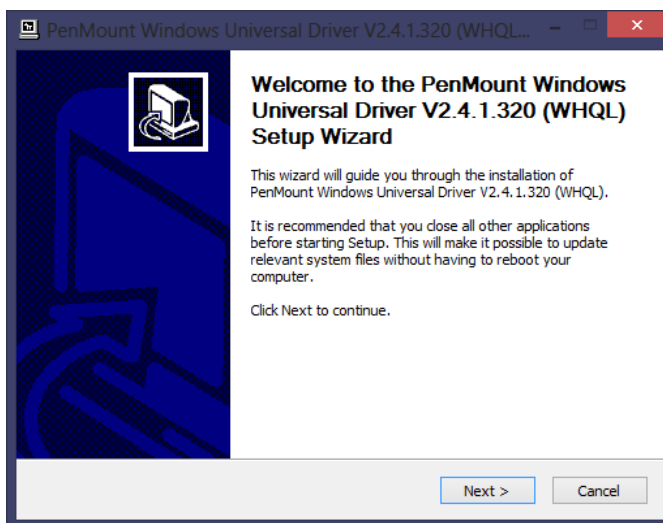


3. Click “I Agree” on the license agreement page to proceed with the driver installation.

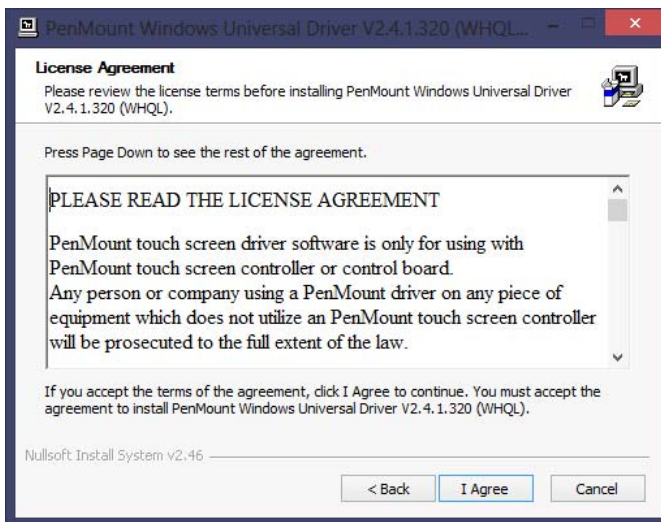


4. Browse to the desired installation location or use the default location. Click “Install” to continue.

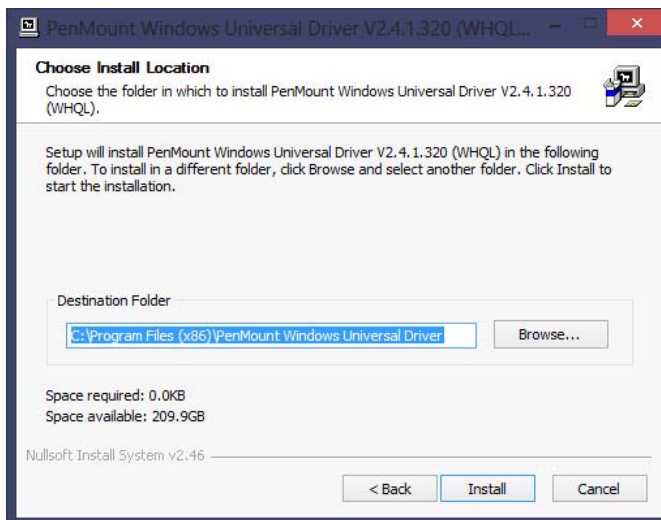


5. Driver installation will begin.

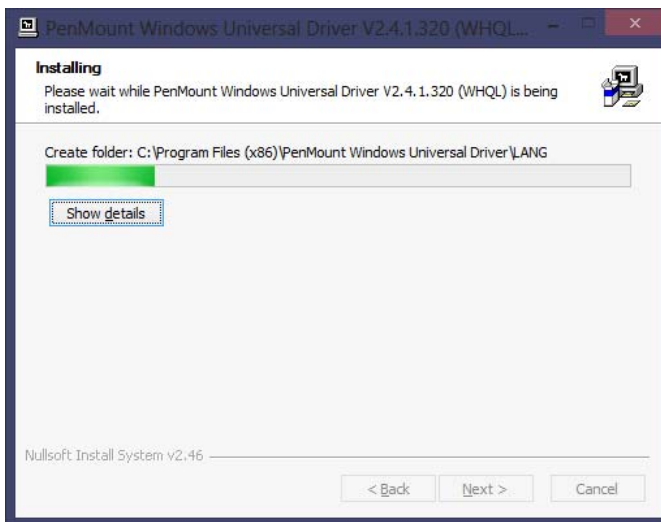

6. To use the touchscreen as a mouse device, click "Yes".

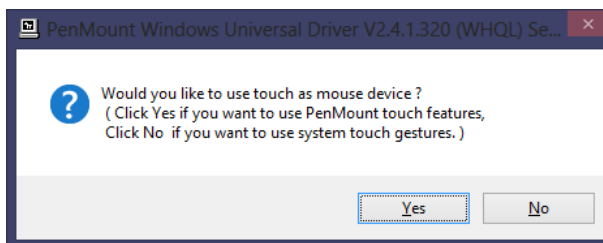


7. The resistive touchscreen driver is now installed on your system.

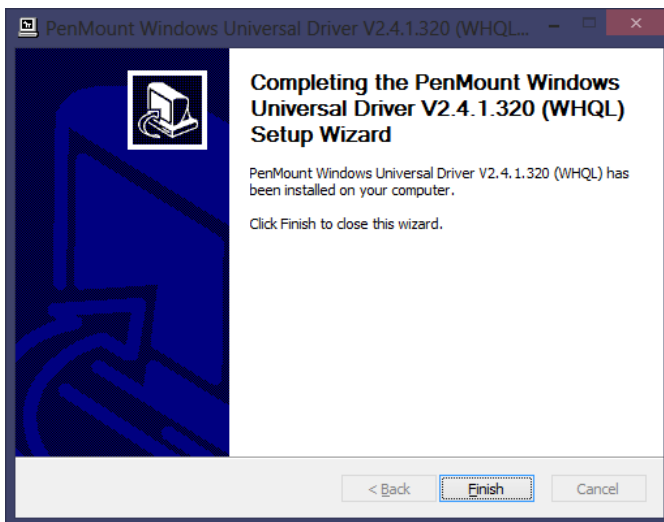

4.2 Projective Capacitive Touchscreen Controller

Driver Installation


1. Use the USB cable included with the touchscreen monitor to connect the USB connector on the monitor to a USB port on your system (see “Connector Layout” on page 7.)
2. Install the capacitive touchscreen controller driver by extracting the contents of the archive **eGalaxTouch_5.12.0.12204-Release131204-ForPCAP.zip** and running the program “setup.exe”. Click “Next to continue.

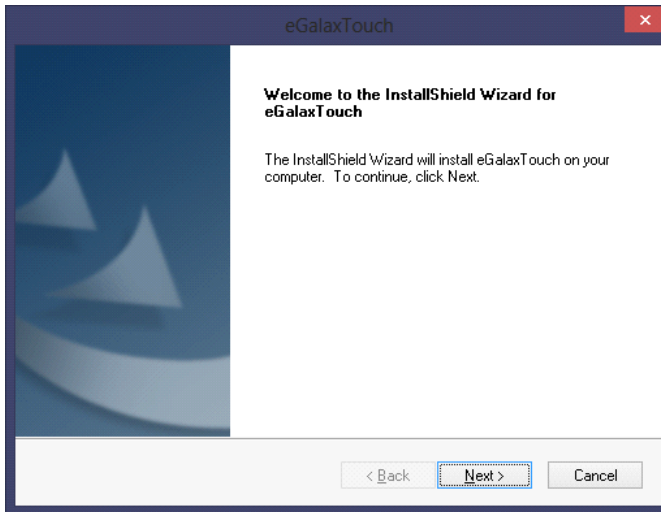


3. Select the “I accept the terms of the license agreement” radio button and click “Next” to continue.




4. Leave the box to install the RS-232 interface driver unchecked. Click “Next” to continue.

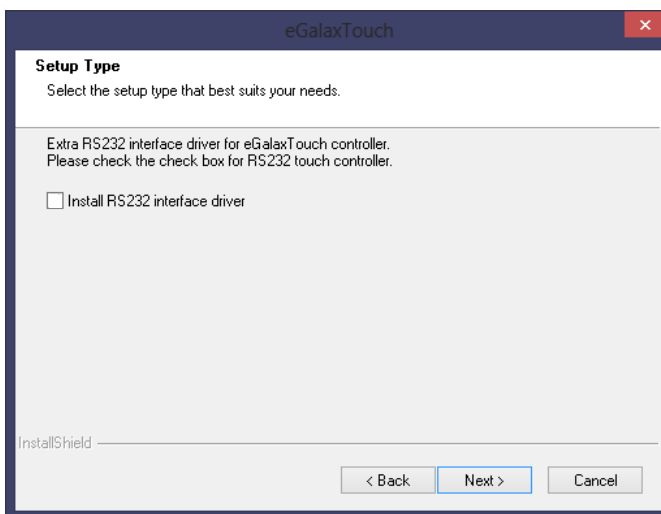


5. No calibration is required. Select the “None” radio button and click “Next” to continue.

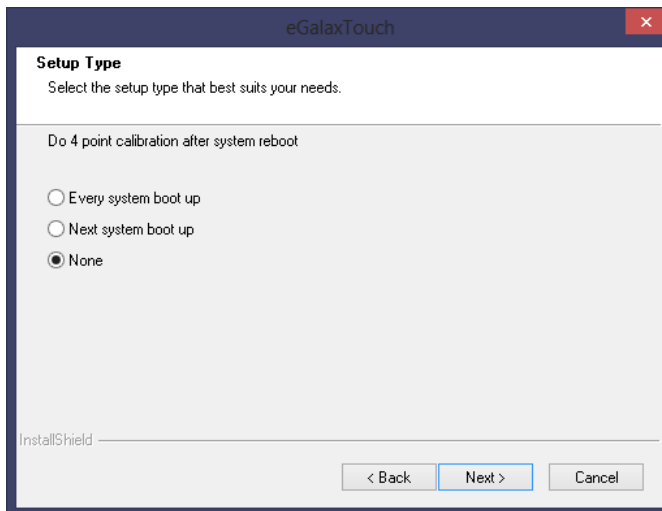


6. Make sure the touchscreen monitor is connected to a USB port on your system (see “Connector Layout” on page 7.). If you are connecting it now, close the “Found New Hardware Wizard” dialog when it appears.

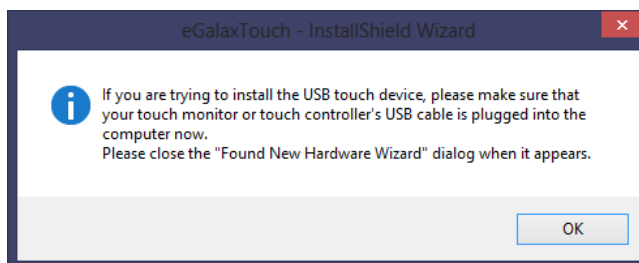


7. Tick the box next to “Support Multi-Monitor System” if you have more than one display in your system.

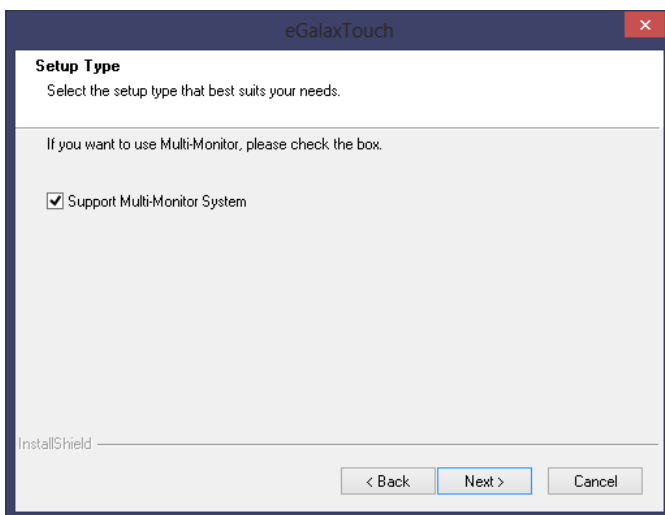


8. Browse to the desired installation location or use the default location. Click “Next” to continue.

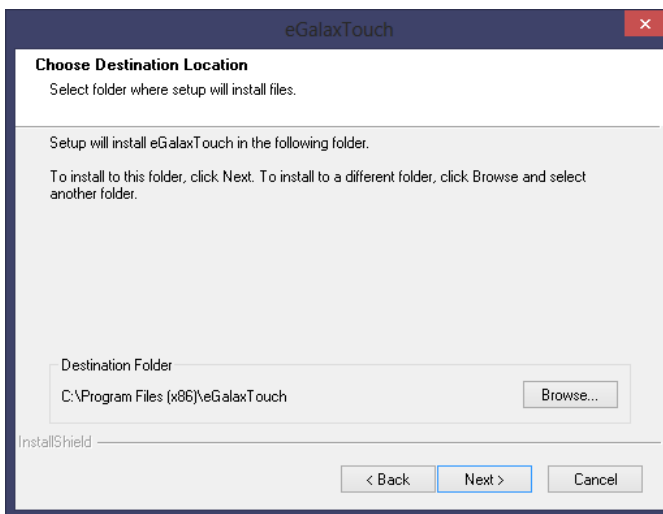


9. Choose a name for the program folder or use the default setting. Click “Next” to continue.

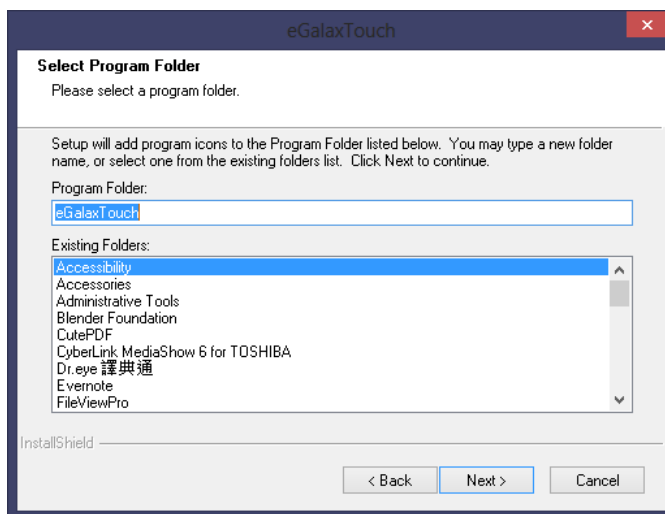


10. Tick the box to create a touchscreen utility shortcut on the desktop. Click “Next” to continue.

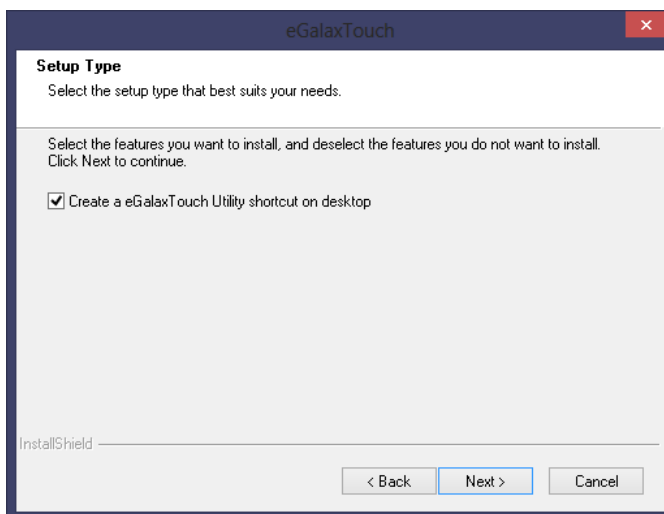

11. Tick the box to create a touchscreen utility shortcut in the Start Menu. Click “Next” to continue.

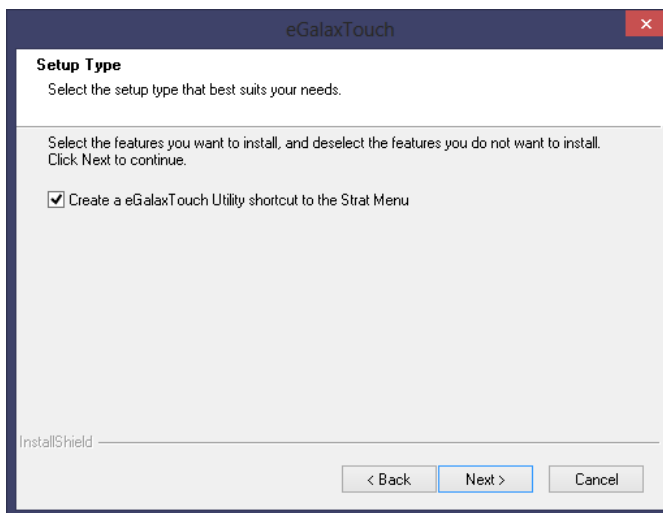

12. Projective capacitive touchscreen controller driver installation will now complete.

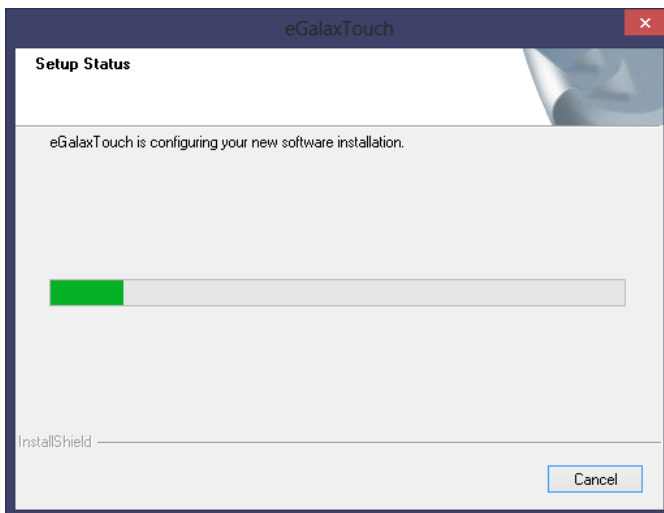

5 On-Screen Display Buttons

5.1 OSD Control Buttons

Figure 5-1 shows the locations of the OSD controls for the TM Series monitor.

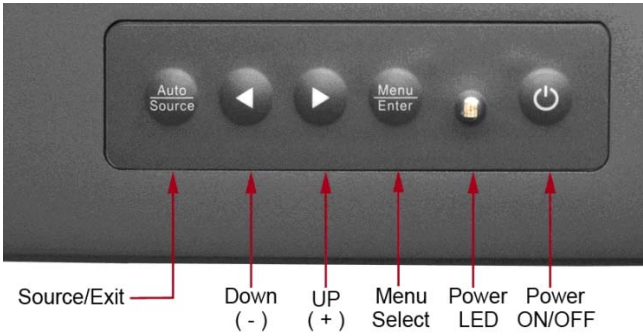


Figure 5-1: OSD Control Buttons

Icon	Control Key	Function
	Power	Power On/Off
	Menu/Enter	Menu Select
	Up (+)	Increase the value of the selected item
	Down (-)	Decrease the value of the selected item
	Auto/Source	Automatically adjusts H-Position, V-Position, Pixel, Clock and Phase for an optimal image.

Table 5-1: OSD Control Buttons List

5.2 OSD Control Function List

Press the “Menu/Enter” button to bring up the main OSD menu (Figure 5-2). Press “Up” or “Down” to choose the item you wish to set, then press “Menu” to select the item. Use “Up” or “Down” to select the item you wish to set in the submenu, then press “Menu” to select the item. Use “Up” or “Down” to adjust the value, then press “Auto/Source” to return previous page or to exit the OSD menu.



Figure 5-2: OSD Main Menu

Table 5.3 shows the structure of OSD menus for the TM Series.

Level 1	Level 2	Values
Color	Contrast	0 ~ 100
	Brightness	0 ~ 100
	Color Adjust	Red, Green, Blue
	Color Temp	9300, 6500, 5800, User
	Auto Color	--
Image Setting	Clock	0 ~ 100
	Phase	0 ~ 100
	Sharpness	0 ~ 4
	H. Position	0 ~ 100
	V. Position	0 ~ 100
OSD Menu	OSD H.Pos	0 ~ 100
	OSD V.Pos	0 ~ 100
	OSD Timer	0 ~30 sec.
	Language	English, French, German, Spanish, Traditional Chinese, Simplified Chinese, Japanese
Signal Source		D-SUB (VGA), DVI, HDMI, Auto Search
Audio		Optional
Reset		Reset to factory settings

Table 5-2: OSD Menu Structure

5.3 Color Adjustment

Table 5-3 shows the Color Adjustment menu.



Figure 5-3: Color Adjustment Menu

- ▶ **Contrast:** Adjust the contrast values from 0 to 100
- ▶ **Brightness:** Adjust the brightness values from 0 to 100
- ▶ **Color Adjust:** Adjust the Color for Red, Green and Blue
- ▶ **Color Temp:** Select 9300, 6500, 5800 or User mode for color temperature
- ▶ **Auto Color:** Auto adjust the color

5.4 Image Settings

Figure 5-4 shows the Image Settings menu.

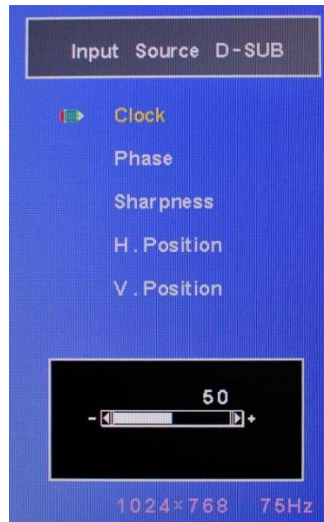


Figure 5-4: Image Setting Menu

- ▶ **Clock:** Adjust the Clock values from 0~100
- ▶ **Phase:** Adjust the Phase values from 0~100
- ▶ **Sharpness:** Adjusts the Sharpness value from 0 to 4
- ▶ **H-Position:** Move the screen to right or left from 0~100
- ▶ **V-Position:** Move the screen to up or down from 0~100

5.5 OSD Settings Menu

Figure 5-5 shows the OSD Settings menu.

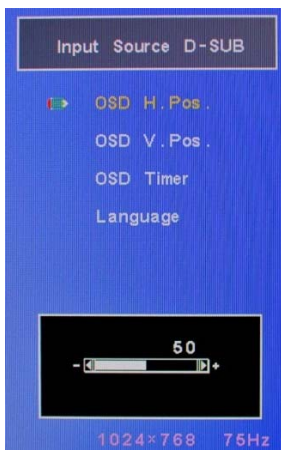


Figure 5-5: OSD Settings Menu

- ▶ **OSD H.Pos:** Adjust the OSD horizontal position on the screen
- ▶ **OSD V.Pos:** Adjust the OSD vertical position on the screen
- ▶ **OSD Timer:** Adjust the time the OSD menu is displayed (0~30 sec.)
- ▶ **Language:** Change the OSD language.

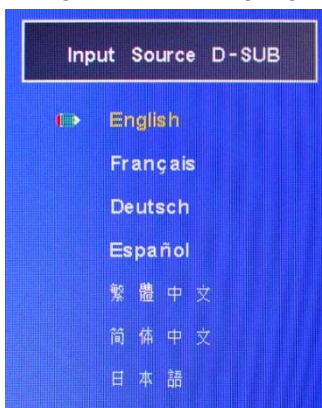


Figure 5-6: OSD Language Menu

5.6 Signal Source

Figure 5-7 shows the Signal Source menu.

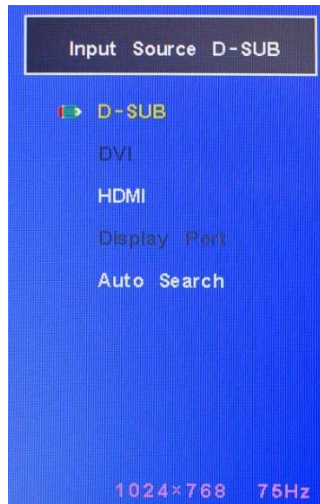


Figure 5-7: Signal Source Menu

- ▶ D-SUB (VGA)
- ▶ DVI
- ▶ HDMI
- ▶ Auto Search

This page intentionally left blank.

Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS**, and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- ▶ Read these safety instructions carefully.
- ▶ Keep this user's manual for future reference.
- ▶ Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- ▶ When installing/mounting or uninstalling/removing equipment:
 - ▷ Turn off power and unplug any power cords/cables.
- ▶ To avoid electrical shock and/or damage to equipment:
 - ▷ Keep equipment away from water or liquid sources;
 - ▷ Keep equipment away from high heat or high humidity;
 - ▷ Keep equipment properly ventilated (do not block or cover ventilation openings);
 - ▷ Make sure to use recommended voltage and power source settings;
 - ▷ Always install and operate equipment near an easily accessible electrical socket-outlet;
 - ▷ Secure the power cord (do not place any object on/over the power cord);
 - ▷ Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
 - ▷ If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

- ▶ Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.
- ▶ Equipment must be serviced by authorized technicians when:
 - ▷ The power cord or plug is damaged;
 - ▷ Liquid has penetrated the equipment;
 - ▷ It has been exposed to high humidity/moisture;
 - ▷ It is not functioning or does not function according to the user's manual;
 - ▷ It has been dropped and/or damaged; and/or,
 - ▷ It has an obvious sign of breakage.

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology, Inc.

Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路 166 號 9 樓
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 5215 Hellyer Avenue, #110
San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 上海市浦东新区张江高科技园区芳春路 300 号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park
Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology Beijing

Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室(100085)
Rm. 801, Power Creative E, No. 1 Shang Di East Rd.
Beijing, 100085 China
Tel: +86-10-5885-8666
Fax: +86-10-5885-8626
Email: market@adlinktech.com

ADLINK Technology Shenzhen

Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bldg. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7
High-Tech Industrial Park S., Shenzhen, 518054 China
Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

LiPPERT ADLINK Technology GmbH

Address: Hans-Thoma-Strasse 11, D-68163
Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

ADLINK Technology, Inc. (French Liaison Office)

Address: 6 allée de Londres, Immeuble Ceylan
91940 Les Ulis, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation

Address: 〒101-0045 東京都千代田区神田鍛冶町 3-7-4
神田 374 ビル 4F
KANDA374 Bldg. 4F, 3-7-4 Kanda Kajicho,
Chiyoda-ku, Tokyo 101-0045, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5209-6013
Email: japan@adlinktech.com

ADLINK Technology, Inc. (Korean Liaison Office)

Address: 137-881 서울시 서초구 서초대로 326, 802 (서초동, 모인터빌딩)
802, Mointer B/D, 326 Seocho-daero, Seocho-Gu,
Seoul 137-881, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte. Ltd.

Address: 84 Genting Lane #07-02A, Cityneon Design Centre
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte. Ltd. (Indian Liaison Office)

Address: #50-56, First Floor, Spearhead Towers
Margosa Main Road (between 16th/17th Cross)
Malleswaram, Bangalore - 560 055, India
Tel: +91-80-65605817, +91-80-42246107
Fax: +91-80-23464606
Email: india@adlinktech.com

ADLINK Technology, Inc. (Israeli Liaison Office)

Address: 27 Maskit St., Corex Building
PO Box 12777
Herzliya 4673300, Israel
Tel: +972-77-208-0230
Fax: +972-77-208-0230
Email: israel@adlinktech.com

ADLINK Technology, Inc. (UK Liaison Office)

Tel: +44 774 010 59 65
Email: UK@adlinktech.com